

Network Video Recorder

User Manual

<u>User Manual</u>

COPYRIGHT ©2018 Hangzhou Hikvision Digital Technology Co., Ltd.

ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This Manual is applicable to Network Video Recorder (NVR).

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website

(http://overseas.hikvision.com/en/).

Please use this user manual under the guidance of professionals.

Trademarks Acknowledgement

HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement

CE This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or

dispose of it at designated collection points. For more information see: www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include

lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.

Applicable Models

This manual is applicable to the models listed in the following table.

Series	Model
iDS-9600NXI-I16/4F	iDS-9616NXI-I16/4F
	iDS-9632NXI-I16/4F
	iDS-9664NXI-I16/4F
iDS-9600NXI-18/4F	iDS-9632NXI-18/4F
	iDS-9664NXI-18/4F
iDS-6700NXI	iDS-6700NXI-I/4F

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description		
	Provides additional information to emphasize or supplement important points of the main text.		
	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.		
	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.		

Safety Instructions

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 100~240 VAC or 12 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only.
- Keep all liquids away from the device.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the device in conjunction with an UPS if possible.
- Power down the unit before connecting and disconnecting accessories and peripherals.
- A factory recommended HDD should be used for this device.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

Product Key Features

General

- Connectable to network cameras, network dome and encoders.
- Connectable to the third-party network cameras like ACTI, Arecont, AXIS, Bosch, Brickcom, Canon, PANASONIC, Pelco, SAMSUNG, SANYO, SONY, Vivotek and ZAVIO, and cameras that adopt ONVIF protocol.
- Connectable to the smart IP cameras.
- H.265+/H.265/ H.264+/H.264/MPEG4 video formats
- PAL/NTSC adaptive video inputs.
- Each channel supports dual-stream.
- Up to 64 network cameras can be added according to different models.
- Independent configuration for each channel, including resolution, frame rate, bit rate, image quality, etc.
- The quality of the input and output record is configurable.

Local Monitoring

- HDMI/VGA1 and HDMI2/VGA2 outputs provided.
- HDMI Video output at up to 4K resolution.
- Multiple screen display in live view is supported, and the display sequence of channels is adjustable.
- Live view screen can be switched in group. Manual switch and auto-switch are provided and the auto-switch interval is configurable.
- 3D positioning.
- Configurable main stream and sub-stream for the live view.
- Quick setting menu is provided for live view.
- POS information overlay on live view.
- Motion detection, video tampering, video exception alert and video loss alert functions.
- Privacy mask.
- Multiple PTZ protocols supported; PTZ preset, patrol and pattern.
- Zooming in by clicking the mouse and PTZ tracing by dragging mouse.

HDD Management

- iDS-9600NXI-I8/4F series: Up to 8 SATA hard disks and 1 eSATA disk can be connected. iDS-9600NXI-I16/4F series: Up to 8 SATA hard disks and 1 eSATA disk can be connected.
- Up to 6 TB storage capacity for each disk supported.
- Supports 8 network disks (NAS/IP SAN disk).

- Supports S.M.A.R.T. and bad sector detection.
- HDD group management.
- Supports HDD standby function.
- HDD property: redundancy, read-only, read/write (R/W).
- HDD quota management; different capacity can be assigned to different channel.
- RAID0, RAID1, RAID5, RAID6 and RAID 10 are supported.
- Hot-swappable RAID storage scheme, and can be enabled and disabled on your demand. And 16 arrays can be configured.
- Disk clone to the eSATA disk.
- HDD health monitoring.

Recording, Capture and Playback

- Holiday recording schedule configuration.
- Continuous and event video recording parameters.
- Multiple recording types: manual, continuous, alarm, motion, motion | alarm, motion & alarm VCA, and POS.
- 8 recording time periods with separated recording types.
- POS information overlay on image.
- Pre-record and post-record for alarm, motion detection for recording, and pre-record time for schedule and manual recording.
- Searching record files and captured pictures by events (alarm input/motion detection).
- Tag adding for record files, searching and playing back by tags.
- Locking and unlocking record files.
- Local redundant recording and capture.
- Normal/important/custom video playback mode.
- Searching and playing back record files by channel number, recording type, start time, end time, etc.
- Supports the playback by main stream or sub stream.
- Smart search for the selected area in the video.
- Zooming in when playback.
- Reverse playback of multi-channel.
- Supports pause, play reverse, speed up, speed down, skip forward, and skip backward when playback, and locating by dragging the mouse.
- Supports thumbnails view and fast view during playback.
- Up to 16-ch synchronous playback at 1080p real time.
- Supports playback by transcoded stream.
- Manual capture, continuous capture of video images and playback of captured pictures.

• Supports enabling H.264+ to ensure high video quality with lowered bitrate.

Files Management

- Important files search and export.
- Vehicle detection files and human appearance files search and export.
- Export video data by USB, SATA or eSATA device.
- Export video clips when playback.
- Either Normal or Hot Spare working mode is configurable to constitute an N+1 hot spare system.

Alarm and Exception

- Configurable arming time of alarm input/output.
- Alarm for video loss, motion detection, tampering, abnormal signal, video input/output standard mismatch, illegal login, network disconnected, IP confliction, abnormal record/capture, HDD error, and HDD full, etc.
- POS triggered alarm supported.
- VCA detection alarm is supported.
- Smart analysis for people counting and heat map.
- Connectable to the thermal network camera.
- Supports the advanced search for fire/ship/temperature/temperature difference detection triggered alarm and the recorded video files and pictures.
- Alarm triggers full screen monitoring, audio alarm, notifying surveillance center, sending email and alarm output.
- Automatic restore when system is abnormal.

Other Local Functions

- Operable by front panel, mouse, remote control, or control keyboard.
- Three-level user management; admin user is allowed to create many operating accounts and define their operating permission, which includes the limit to access any channel.
- Admin password resetting by exporting/importing the GUID file.
- Operation, alarm, exceptions and log recording and searching.
- Manually triggering and clearing alarms.
- Import and export of device configuration information.

Network Functions

- Two self-adaptive 10M/100M/1000Mbps network interfaces.
- IPv6 is supported.
- TCP/IP protocol, DHCP, DNS, DDNS, NTP, SADP, SMTP, NFS, and iSCSI are supported.
- TCP, UDP and RTP for unicast.

- Auto/Manual port mapping by UPnP[™].
- Support access by Hik-Connect.
- Remote web browser access by HTTPS ensures high security.
- ANR (Automatic Network Replenishment) function is supported, which enables the IP camera save the recording files in the local storage when the network is disconnected, and synchronizes the files to the device when the network is resumed.
- Remote reverse playback via RTSP.
- Supports accessing by the platform via ONVIF.
- Remote search, playback, download, locking and unlocking of the record files, and support downloading files broken transfer resume.
- Remote parameters setup; remote import/export of device parameters.
- Remote viewing of the device status, system logs and alarm status.
- Remote keyboard operation.
- Remote HDD formatting and program upgrading.
- Remote system restart and shutdown.
- RS-232, RS-485 transparent channel transmission.
- Alarm and exception information can be sent to the remote host
- Remotely start/stop recording.
- Remotely start/stop alarm output.
- Remote PTZ control.
- Remote JPEG capture.
- Virtual host function is provided to get access and manage the IP camera directly.
- Two-way audio and voice broadcasting.
- Embedded WEB server.

Development Scalability:

- SDK for Windows system.
- Source code of application software for demo.
- Development support and training for application system.

TABLE OF CONTENTS

Chapter 1 Introduction	16
1.1 Front Panel	16
1.1.1 iDS-9600NXI-I8/4F Series	16
1.1.2 iDS-9600NXI-I16/4F Series	17
1.1.3 iDS-6700NXI-I/4F Series	18
1.2 IR Remote Control Operations	18
1.2.1 Pairing (Enabling) the IR Remote to a Specific Device (optional)	19
1.2.2 Unpairing (Disabling) an IR Remote from a Device	20
1.3 USB Mouse Operation	25
1.4 Rear Panel	26
1.4.1 iDS-9600NXI-I8/4F Series	26
1.4.2 iDS-9600NXI-I16/4F Series	27
1.4.3 iDS-6700NXI-I/4F Series	28
Chapter 2 Getting Started	30
2.1 Start up the Device	30
2.2 Activate the Device	30
2.3 Configure Unlock Pattern for Login	32
2.4 Login to the Device	33
2.4.1 Log in via Unlock Pattern	33
2.4.2 Log in via Password	33
2.5 Enter Wizard to Configure Quick Basic Settings	34
2.6 Enter Main Menu	38
2.7 System Operation	39
2.7.1 Log out	39
2.7.2 Shut Down the Device	39
2.7.3 Reboot the Device	40
Chapter 3 Camera Management	41
3.1 Add the IP Cameras	41
3.1.1 Activate IP Camera	41
3.1.2 Add the IP Camera Manually	41
3.1.3 Add the Automatically Searched Online IP Cameras	42
3.2 Enable H.265 Stream Access	43

3.3 Upgrade the IP Camera	43
3.4 Edit Channel Default Password	43
3.5 Configure the Customized Protocols	44
Chapter 4 Camera Settings	46
4.1 Configure OSD Settings	46
4.2 Configure Privacy Mask	47
4.3 Configure the Video Parameters	48
4.4 Configure the Day/Night Switch	48
4.5 Configure Other Camera Parameters	48
Chapter 5 Live View	50
5.1 Start Live View	50
5.1.2 Digital Zoom	50
5.1.3 Fisheye View	51
5.1.4 3D Positioning	52
5.1.5 Live View Strategy	52
5.2 Configure Live View Settings	52
5.3 Configure Live View Layout	53
5.4 Configure Auto-Switch of Cameras	55
5.5 Configure Channel-Zero Encoding	55
5.6 Facial Recognition	56
Chapter 6 PTZ Control	57
6.1 PTZ Control Wizard	57
6.2 Configure PTZ Parameters	57
6.3 Set PTZ Presets, Patrols & Patterns	58
6.3.1 Set a Preset	58
6.3.2 Call a Preset	59
6.3.3 Set a Patrol	60
6.3.4 Call a Patrol	61
6.3.5 Set a Pattern	62
6.3.6 Call a Pattern	63
6.3.7 Set Linear Scan Limits	63
6.3.8 Call Linear Scan	64
6.3.9 One-touch Park	64
6.4 Auxiliary Functions	65
Chapter 7 Storage	67

7.1 Storage Device Management	67
7.1.1 Install the HDD	67
7.1.2 Add the Network Disk	67
7.1.3 Configure eSATA for Data Storage	69
7.2 Storage Mode	70
7.2.1 Configure HDD Group	70
7.2.2 Configure HDD Quota	72
7.3 Recording Parameters	73
7.3.1 Main Stream	73
7.3.2 Sub-Stream	74
7.3.3 Picture	74
7.3.4 ANR	74
7.3.5 Configure Advanced Recording Settings	74
7.4 Configure Recording Schedule	75
7.5 Configure Continuous Recording	78
7.6 Configure Motion Detection Triggered Recording	78
7.7 Configure Event Triggered Recording	79
7.8 Configure Alarm Triggered Recording	80
7.9 Configure POS Event Triggered Recording	80
7.10 Configure Picture Capture	81
7.11 Configure Holiday Recording and Capture	81
7.12 Configure Redundant Recording and Capture	83
Chapter 8 Disk Array	
8.1 Create Disk Array	
8.1.1 Enable RAID	85
8.1.2 One-Touch Creation	86
8.1.3 Manual Creation	86
8.2 Rebuild Array	88
8.2.1 Configure Hot Spare Disk	88
8.2.2 Automatically Rebuild Array	88
8.2.3 Manually Rebuild Array	89
8.3 Delete Array	90
8.4 Check and Edit Firmware	91
Chapter 9 File Management	92
9.1 Search and Export Human Pictures	

9.1.1 Search Human Pictures	92
9.1.2 Export Human Pictures	92
9.2 Search and Export Vehicle Files	93
9.2.1 Search Vehicle Pictures	93
9.2.2 Export Vehicle Pictures	94
9.3 Search History Operation	95
9.3.1 Save Search Condition	95
9.3.2 Call Search History	95
Chapter 10 Playback	96
10.1 Playing Video Files	96
10.1.1 Instant Playback	96
10.1.2 Play Video	96
10.1.3 Play Tag Files	
10.1.4 Play by Smart Search	
10.1.5 Play Event Files	
10.1.6 Play by Sub-periods	
10.1.7 Play Log Files	
10.1.8 Play External File	
10.2 Playback Operations	
10.2.1 Normal/Important/Custom Video	
10.2.2 Set Play Strategy in Important/Custom Mode	
10.2.3 Edit Video Clips	
10.2.4 Switch between Main Stream and Sub-Stream	
10.2.5 Thumbnails View	
10.2.6 Fisheye View	
10.2.7 Fast View	
10.2.8 Digital Zoom	
10.2.9 POS Information Overlay	109
Chapter 11 Event and Alarm Settings	
11.1 Configure Arming Schedule	
11.2 Configure Alarm Linkage Actions	
11.2.1 Configure Auto-Switch Full Screen Monitoring	111
11.2.2 Configure Audio Warning	112
11.2.3 Notify Surveillance Center	112
11.2.4 Configure Email Linkage	

11.2.5 Trigger Alarm Output	112
11.2.6 Configure PTZ Linkage	113
11.3 Configure Motion Detection Alarm	114
11.4 Configure Video Loss Alarm	116
11.5 Configure Video Tampering Alarm	117
11.6 Configure Sensor Alarms	118
11.6.1 Configure Alarm Input	118
11.6.2 Configure One-Key Disarming	118
11.6.3 Configure Alarm Output	119
11.7 Configure Exceptions Alarm	121
11.8 Trigger or Clear Alarm Output Manually	123
Chapter 12 VCA Event Alarm	124
12.1 Face Detection	124
12.2 Vehicle Detection	125
12.3 Line Crossing Detection	126
12.4 Intrusion Detection	127
12.5 Region Entrance Detection	129
12.6 Region Exiting Detection	130
12.7 Unattended Baggage Detection	131
12.8 Object Removal Detection	132
12.9 Audio Exception Detection	133
12.10 Sudden Scene Change Detection	135
12.11 Defocus Detection	136
12.12 PIR Alarm	136
Chapter 13 Smart Analysis	
13.1 Vehicle Search	138
13.2 Human Body Detection	138
13.3 People Counting	139
13.4 Heat Map	139
Chapter 14 Face Picture Comparison	141
14.1 Face Picture Library Management	141
14.1.1 View Engine Status	141
14.1.2 Add a Face Picture Library	141
14.1.3 Upload Face Pictures to the Library	142
14.2 Face Picture Comparison Alarm	142

14.2.1 Configure Face Picture Comparison	
14.2.2 Configure Stranger Alarm	
14.3 Face Picture Retrieval	
14.3.1 Search by Face Picture Comparison Event	
14.3.2 Search by Uploaded Picture	
14.3.3 Search by Personal Name	
14.4 Export Face Pictures	146
Chapter 15 POS Configuration	
15.1 Configure POS Settings	
15.1.1 Configure POS Connection	147
15.1.2 Configure POS Tex Overlay	151
15.2 ConfigurePOS Alarm	153
Chapter 16 Network Settings	
16.1 Configure TCP/IP Settings	154
16.1.1 Device with Dual Network Interface	154
16.1.2 Device with a Single Network Interface	155
16.2 Configuring Hik-Connect	156
16.3 Configure DDNS	158
16.4 Configure PPPoE	159
16.5 Configure NTP	159
16.6 Configure SNMP	160
16.7 Configure Email	161
16.8 Configure Ports	
Chapter 17 Hot Spare Device Backup	
17.2 Set Hot Spare Device	
17.3 Set Working Device	
17.4 Manage Hot Spare System	
Chapter 18 System Maintenance	
18.1 Storage Device Maintenance	
18.1.1 Configure Disk Clone	
18.1.2 S.M.A.R.T Detection	
18.1.3 Bad Sector Detection	
18.1.4 HDD Health Detection	
18.2 Search & Export Log Files	
18.2.1 Search the Log Files	

18.2.2 Export the Log Files	17/
18.3 Import/Export IP Camera Configuration Files	
18.4 Import/Export Device Configuration Files	
18.5 Upgrade System	
18.5.1 Upgrade by Local Backup Device	178
18.5.2 Upgrade by FTP	178
18.6 Restore Default Settings	
18.7 System Service	
18.7.1 Network Security Settings	
18.7.2 Managing ONVIF User Accounts	
18.7.3 Managing IP Camera Activation	
Chapter 19 General System Settings	
19.1 Configure General Settings	
19.2 Configure Date & Time	
19.3 Configure DST Settings	
19.4 Manage User Accounts	
19.4.1 Add a User	
19.4.2 Set the Permission for a User	
19.4.3 Set Local Live View Permission for Non-Admin Users	
19.4.4 Edit the Admin User	
19.4.5 Edit the Operator/Guest User	194
19.4.6 Delete a User	195
Chapter 20 Appendix	
20.1 Specification	196
20.2 Glossary	198
20.3 Troubleshooting	

Chapter 1 Introduction

1.1 Front Panel

1.1.1 iDS-9600NXI-I8/4F Series


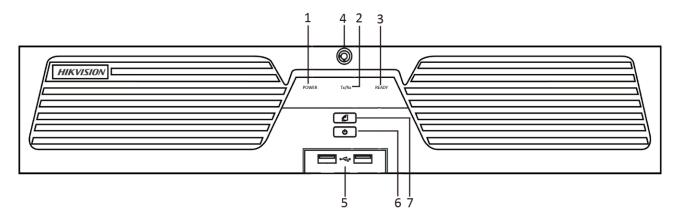


Figure 1-1 iDS-9600NXI-I8/4F Series

Table 1-1	Panel	Description
	i unci	Description

No.	Name	Function Description		
1	POWER	Turns red when the power is connected but the system isn't running; turns blue when the power is connected and the system is running.		
2	Tx/Rx	Flickers blue when network connection is functioning properly.		
3	READY	Turns blue when the device is functioning properly.		
4	Front Panel Lock	Locks or unlocks the panel by the key.		
5	USB Interfaces	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).		
6	POWER ON/OFF	Long press the button for more than 3 seconds to turn on/off the NVR.		
7	Backup	Back up video files.		

1.1.2 iDS-9600NXI-I16/4F Series

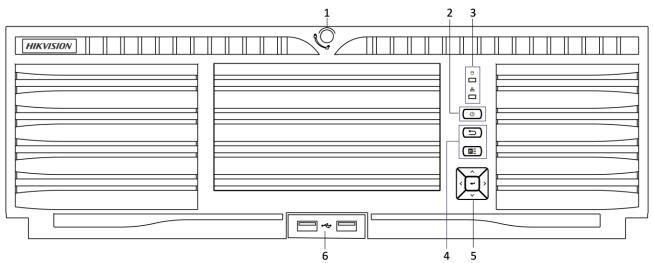



No.	Name		Description
1	Panel lock		Locks or unlocks the panel by the key.
2	Power switch		Powers on/off device. Solid blue indicates device is powered on. Solid red indicates device is shut down.
3 Status indicator	HDD	 Solid red: at least one HDD is installed Unlit: no HDD is detected. Blinking red: HDD is reading/writing. 	
	Tx/Rx	Blinking blue indicates network communication is normal.	
4 Shortcut buttons	 A Shortcut Press it twice quickly to sport. In live view mode, press interface 	 In live view mode, press it to enter PTZ control 	
		Menu	 Press it to pop up main menu. Hold it for 5 seconds to turn on/off button sound. During playback, press it to show/hide control panel.
5	Control buttons• Confirms selection in any of the menu modes.• Checks the checkbox fields. • Switches on/off status.		

Table 1-2 Description

			 Plays or pauses the video playing in playback mode.
			 Advances the video by a single frame in single-frame playback mode.
			 Stops/starts auto switch in auto-switch mode.
			 Navigates between different fields and items in menus.
		DIRECTION	 In the playback mode, use the Up and Down buttons to speed up and slow down recorded video. Use the Left and Right buttons to select the next and previous video files.
			 Cycles through channels in live view mode.
			 Controls the movement of the PTZ camera in PTZ control mode.
6	USB interfaces		Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).

1.1.3 iDS-6700NXI-I/4F Series

	HIKVISION	0	
--	-----------	---	--

Figure 1-3 Front Panel

Item	Description	
U	Turns red when device is powered up.	
0ft	Turns red when data is being read from or written to HDD.	
	Flickers blue when network connection is functioning properly.	

1.2 IR Remote Control Operations

The device may also be controlled with the included IR remote control, shown in Figure 1-4.

Batteries (2×AAA) must be installed before operation.

The IR remote is set at the factory to control the device (using default Device ID# 255) without any additional steps. Device ID# 255 is the default universal device identification number shared by the devices. You may also pair an IR Remote to a specific device by changing the Device ID#, as follows:

1.2.1 Pairing (Enabling) the IR Remote to a Specific Device (optional)

You can pair an IR Remote to a specific device by creating a user-defined Device ID#. This feature is useful when using multiple IR Remotes and devices.

On the device:

Step 1 Go to System > General.

Step 2 Type a number (255 digits maximum) into the Device No. field.

On the IR Remote:

Step 3 Press the DEV button.

Step 4 Use the Number buttons to enter the Device ID# that was entered into the device.

Step 5 Press Enter button to accept the new Device ID#.

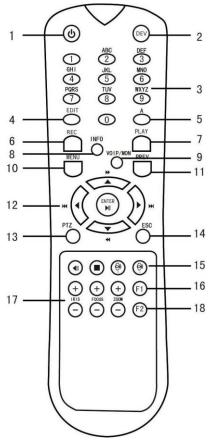


Figure 1-4 Remote Control

1.2.2 Unpairing (Disabling) an IR Remote from a Device

To unpair an IR Remote from a device so that the unit cannot control any device functions, proceed as follows:

Press the DEV key on the IR Remote. Any existing Device ID# will be erased from the unit's memory and it will no longer function with the device.

(Re)-enabling the IR Remote requires pairing to a device. See "Pairing the IR Remote to a Specific device (optional)," above.

The keys on the remote control closely resemble the ones on the front panel. See the table 1.4.

N T	Table 1-4 IR Remote Functions				
No.	Name	Function Description			
		•To Turn Power On:			
		-If User Has Not Changed the Default device Device ID# (255):			
		1.Press Power On/Off button (1).			
		-If User Has Changed the device Device ID#:			
		1.Press DEV button.			
		2.Press Number buttons to enter user-defined Device ID#.			
		3.Press Enter button.			
		4.Press Power button to start device.			
		•To Turn device Off:			
		-If User Is Logged On:			
		1.Hold Power On/Off button (1) down for five seconds to display the "Yes/No" verification prompt.			
	POWER ON/OFF	2.Use Up/Down Arrow buttons (12) to highlight desired selection.			
		3.Press Enter button (12) to accept selection.			
1		-If User Is <i>Not</i> Logged On:			
		1.Hold Power On/Off button (1) down for five seconds to display the user name/password prompt.			
		2.Press the Enter button (12) to display the on-screen keyboard.			
		3.Input the user name.			
		4.Press the Enter button (12) to accept input and dismiss the on-screen keyboard.			
		5.Use the Down Arrow button (12) to move to the "Password" field.			
		6.Input password (use on-screen keyboard or numeric buttons (3) for numbers).			
		7.Press the Enter button (12) to accept input and dismiss the on-screen keyboard.			
		8.Press the OK button on the screen to accept input and display the Yes/No" verification prompt (use Up/Down Arrow buttons (12) to move between fields)			
		9.Press Enter button (12) to accept selection.			
		User name/password prompt depends on device is configuration.			

Table 1-4 IR Remote Functions

		See "System Configuration" section.	
7	DEV	Enable IR Remote: Press DEV button, enter device Device ID# with number keys, press Enter to pair unit with the device	
2	DLV	Disable IR Remote: Press DEV button to clear Device ID#; unit wil no longer be paired with the device	
3	Numerals	Switch to the corresponding channel in Live View or PTZ Contro mode	
		Input numbers in Edit mode	
<u>л</u>	FDIT	Delete characters before cursor	
4	EDIT	Check the checkbox and select the ON/OFF switch	
		Adjust focus in the PTZ Control menu	
5	A	Switch on-screen keyboards (upper and lower case alphabet, symbols, and numerals)	
		Enter Manual Record setting menu	
6	REC	Call a PTZ preset by using the numeric buttons in PTZ contro settings	
		Turn audio on/off in Playback mode	
7	PLAY	Go to Playback mode	
7	PLAT	Auto scan in the PTZ Control menu	
8	INFO	INFO Reserved	
9	VOIP	Switches between main and spot output	
5		Zooms out the image in PTZ control mode	
		Return to Main menu (after successful login)	
10	MENU	N/A	
		Show/hide full screen in Playback mode	
	DIRECTION	Navigate between fields and menu items	
12		Use Up/Down buttons to speed up/slow down recorded video, and Left/Right buttons to advance/rewind 30 secs in Playback mode	
		Cycle through channels in Live View mode	
		Control PTZ camera movement in PTZ control mode	
	ENTER	Confirm selection in any menu mode	

		Checks checkbox	
		Play or pause video in Playback mode	
		Advance video a single frame in single-frame Playback mode	
		Stop/start auto switch in auto-switch mode	
13	PTZ	Enter PTZ Control mode	
14	ESC	Go back to previous screen	
14	ESC	N/A	
15	RESERVED	Reserved	
		Select all items on a list	
16	F1	N/A	
		Switch between play and reverse play in Playback mode	
17	PTZ Control	Adjust PTZ camera iris, focus, and zoom	
18	F2	Cycle through tab pages	
10	F2	Switch between channels in Synchronous Playback mode	

Troubleshooting Remote Control:

Make sure you have installed batteries properly in the remote control. And you have to aim the remote control at the IR receiver in the front panel.

If there is no response after you press any button on the remote, follow the procedure below to troubleshoot.

Step 1 Go to **System > General** by operating the front control panel or the mouse.

- Step 2 Check and remember device ID#. The default ID# is 255. This ID# is valid for all the IR remote controls.
- Step 3 Press the DEV button on the remote control.
- Step 4 Enter the device ID# you set in step 2.
- Step 5 Press the ENTER button on the remote.

If the Status indicator on the front panel turns blue, the remote control is operating properly. If the Status indicator does not turn blue and there is still no response from the remote, please check the following:

- Batteries are installed correctly and the polarities of the batteries are not reversed.
- Batteries are fresh and not out of charge.
- IR receiver is not obstructed.
- No fluorescent lamp is used nearby

If the remote still can't function properly, please change a remote and try again, or contact the device provider.

1.3 USB Mouse Operation

A regular 3-button (Left/Right/Scroll-wheel) USB mouse can also be used with this device. To use a USB mouse:

Step 1 Plug USB mouse into one of the USB interfaces on the front panel of the device.

Step 2 The mouse should automatically be detected. If in a rare case that the mouse is not detected, the possible reason may be that the two devices are not compatible, please refer to the recommended the device list from your provider.

The operation of the mouse:

Name	Action	Description		
	Single-Click	Live view: Select channel and show the quick set menu. Menu: Select and enter.		
Left-Click	Double-Click	Live view: Switch between single-screen and multi-screen.		
Lert-Click	Click and Drag	PTZ control: pan, tilt and zoom. Video tampering, privacy mask and motion detection: Select target area. Digital zoom-in: Drag and select target area. Live view: Drag channel/time bar.		
Right-Click	Single-Click	Live view: Show menu. Menu: Exit current menu to upper level menu.		
Scroll-Wheel	Scrolling up	Live view: Previous screen. Menu: Previous item.		
	Scrolling down	Live view: Next screen. Menu: Next item.		

Table 1-5	Description	of the	Mouse	Control
TUDIC I J	Description	or the	WIGUSC	Control

1.4 Rear Panel

1.4.1 iDS-9600NXI-I8/4F Series

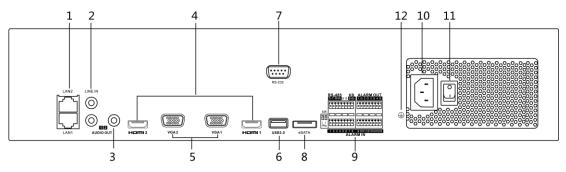


Figure 1-5 iDS-9600NXI-I8/4F Series

No.	Name	Description
1	LAN1/LAN2 Interface	2 RJ-45 10/100/1000 Mbps self-adaptive Ethernet interfaces provided.
2	LINE IN	RCA connector for audio input.
3	AUDIO OUT	2 RCA connectors for audio output.
4	HDMI1/HDMI2	HDMI video output connector.
5	VGA1/VGA2	DB9 connector for VGA output. Display local video output and menu.
6	USB 3.0 interface	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
7	RS-232 Interface	Connector for RS-232 devices.
8	eSATA	Connects external SATA HDD, CD/DVD-RM.
9	Controller Port	D+, D- pin connects to Ta, Tb pin of controller. For cascading devices, the first NVR's D+, D- pin should be connected with the D+, D- pin of the next NVR.
5	ALARM IN	Connector for alarm input.
	ALARM OUT	Connector for alarm output.
10	100 to 240 VAC	100 to 240 VAC power supply.
11	Power Switch	Switch for turning on/off the device.
12	GROUND	Ground (needs to be connected when NVR starts up).

Table 1-6 Panel Description

1.4.2 iDS-9600NXI-I16/4F Series

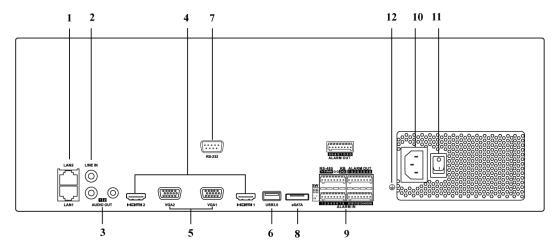


Figure 1-6 iDS-9600NXI-I16/4F Series

No.	Name	Description
1	LAN1/LAN2 Interface	2 RJ-45 10/100/1000 Mbps self-adaptive Ethernet interfaces provided.
2	LINE IN	RCA connector for audio input.
3	AUDIO OUT	2 RCA connectors for audio output.
4	HDMI1/HDMI2	HDMI video output connector.
5	VGA1/VGA2	DB9 connector for VGA output. Display local video output and menu.
6	USB 3.0 interface	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
7	RS-232 Interface	Connector for RS-232 devices.
8	eSATA	Connects external SATA HDD, CD/DVD-RM.
9	Controller Port	D+, D- pin connects to Ta, Tb pin of controller. For cascading devices, the first NVR's D+, D- pin should be connected with the D+, D- pin of the next NVR.
5	ALARM IN	Connector for alarm input.
	ALARM OUT	Connector for alarm output.
10	100 to 240 VAC	100 to 240 VAC power supply.
11	Power Switch	Switch for turning on/off the device.
12	GROUND	Ground (needs to be connected when NVR starts up).

Table 1-7 Panel Description

1.4.3 iDS-6700NXI-I/4F Series

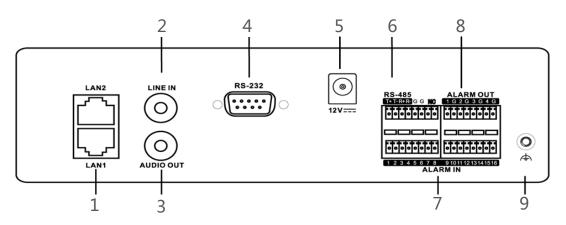


Figure 1-7 Rear Panel

Table 1-8 Interface Description

Index	Item	Description
1	LAN1/LAN2	10M/100Mbps adaptive Ethernet interface
2	LINE IN	3.5mm interface for line in; connect to audio input device or active pick-up, microphone, etc.
3	AUDIO OUT	3.5mm interface; connect to audio output device, e.g., loudspeaker, etc.
4	RS-232	Serial interface for configuration of device's parameters or used as transparent channel.
5	DC12V	12 VDC power supply
6	RS-485	RS-485 serial interface; connect to pan/tilt unit, speed dome, etc.
7	ALARM IN	Relay alarm input.
8	ALARM OUT	Relay alarm output.
9	GND	Grounding

Chapter 2 Getting Started

2.1 Start up the Device

Purpose:

Proper startup and shutdown procedures are crucial to expanding the life of the device.

Before you start:

Check that the voltage of the extra power supply is the same with the device's requirement, and the ground connection is working properly.

- Step 1 Check the power supply is plugged into an electrical outlet. It is HIGHLY recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device. The Power indicator LED on the front panel should be red, indicating the device gets the power supply.
- Step 2 Press the POWER button on the front panel. The Power indicator LED should turn blue indicating that the unit begins to start up.
- Step 3 After startup, the Power indicator LED remains blue. A splash screen with the status of the HDD appears on the monitor. The row of icons at the bottom of the screen shows the HDD status. 'X' means that the HDD is not installed or cannot be detected.

2.2 Activate the Device

Purpose:

For the first-time access, you need to activate the device by setting an admin password. No operation is allowed before activation. You can also activate the device via Web Browser, SADP or Client Software.

Step 1 Input the same password in the text field of Create New Password and Confirm New Password.

You can click 🔤 to show the characters input.

admin

Strong

Export GUID
Create Channel Default Password
Security Question C
Note:Valid password range [8-16]. You can use a
combination of numbers, lowercase, uppercase and special character for your password with at least two
kinds of them contained.
ок
Figure 2-1 Activating the Device

We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 2 In the **Create Channel Default Password** text field, create a login password for IP camera (s) connected to the device.

Step 3 (Optional) Check Export GUID and Security Question Configuration.

- **Export GUID:** export the GUID for future password resetting.
- Security Question Configuration: configure the security questions which can be used for resetting the password.

Step 4 Click OK.

What to do next:

- When you have enabled the **Export GUID**, continue to export the GUID file to the USB flash driver for the future password resetting.
- When you have enabled the **Security Question Configuration**, continue to set the security questions for the future password resetting.

- After the device is activated, you should properly keep the password.
- You can duplicate the password to the IP cameras that are connected with default protocol.

2.3 Configure Unlock Pattern for Login

For the admin user, you can configure the unlock pattern for device login.

- Step 1 After the device is activated, you can enter the following interface to configure the device unlock pattern.
- Step 2 Use the mouse to draw a pattern among the 9 dots on the screen. Release the mouse when the pattern is done.

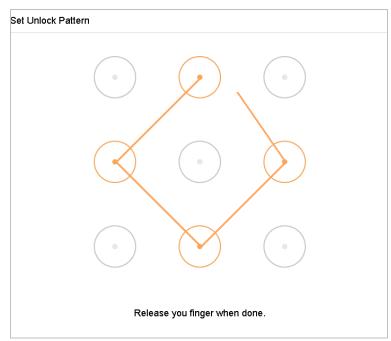


Figure 2-2 Draw the Pattern

- Connect at least 4 dots to draw the pattern.
- Each dot can be connected for once only.
- Step 3 Draw the same pattern again to confirm it. When the two patterns match, the pattern is configured successfully.



If the two patterns are different, you must set the pattern again.

2.4 Login to the Device

2.4.1 Log in via Unlock Pattern

- Only the *admin* user has the permission to unlock the device.
- Please configure the pattern first before unlocking. Please refer to Chapter 2.2 .

Step 1 Right click the mouse on the screen and select the menu to enter the interface.

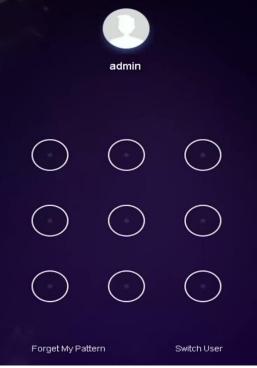


Figure 2-3 Draw the Unlock Pattern

Step 2 Draw the pre-defined pattern to unlock to enter the menu operation.

- If you have forgotten your pattern, you can select the **Forgot My Pattern** or **Switch User** option to enter the normal login dialog box.
- When the pattern you draw is different from the pattern you have configured, you should try again.
- If you have drawn the wrong pattern for more than 5 times, the system will switch to the normal login mode automatically.
- 2.4.2 Log in via Password

Purpose:

If device has logged out, you must login the device before operating the menu and other functions. Step 1 Select the **User Name** in the dropdown list.

Welcome	
admin	-
*****	***
	Forgot Passw
Login	

Figure 2-4 Login Interface

Step 2 Input password.

Step 3 Click Login to log in.

When you forget the password of the admin, you can click **Forgot Password** to reset the password.

In the Login dialog box, if you enter the wrong password 7 times, the current user account will be locked for 60 seconds.

2.5 Enter Wizard to Configure Quick Basic Settings

By default, the Setup Wizard starts once the device has loaded.

The Setup Wizard can walk you through some important settings of the device. If you don't want to use the Setup Wizard at that moment, click the **Exit** button.

Step 1 Configure the date and time on the Date and Time Setup interface.

ime Zone	(GMT-08:00) Pacific Time	•(U -			
ate Format	DD-MM-YYYY	-			
ystem Date	22-08-2017				
ystem Time	18:12:43	(

Figure 2-5 Date and Time Settings

Step 2 After the time settings, click **Next** to enter the Network Setup Wizard window, as shown in the following figure.

Network Setup				
Working Mode	Net Fault-Tolerance	Enable DHCP		
Select NIC	bond0 ~	IPv4 Address	10 . 15 . 1 . 19	
NIC Type	10M/100M/1000M Self-adapi	IPv4 Subnet Mask	255 . 255 . 255 . 0	
Enable Obtain DNS Serv		IPv4 Default Gateway	10 . 15 . 1 . 254	
Preferred DNS Server				
Alternate DNS Server				
Main NIC	LAN1 -			
			Previous	Next Exit

Figure 2-6 Network Settings

Step 3 Click **Next** after you configured the network parameters, which takes you to the **HDD Management** window.

Label	Capacity	Status	Property	Туре	Free Space
5	931.52GB	Normal	R/W	Local	876.00GB
7	931.52GB	Normal	R/W	Local	831.00GB
					Init
					Previous Next

Figure 2-7 HDD Management

Step 4 To initialize the HDD, click the **Init** button. Initialization removes all the data saved in the HDD.

Step 5 Click **Next**. You enter the **Camera Setup** interface to add the IP cameras.

- 1) Click **Search** to search the online IP Camera. Before adding the camera, make sure the IP camera to be added is in active status.
- 2) Click the Add to add the camera.

If the camera is in inactive status, you can select the camera from the list and click **Activate** to activate the cameras.

Camera Setup		
IP Address Security Amount Device Model	Protocol Management Port S	Subnet Mask Serial No MAC Address
Enable H.265 (For Initial Access)		+ Add Ġ Search 👂 Activ

Figure 2-8 Search for IP Cameras

Step 6 Enter the Platform Access and configure the Hik-Connect settings.

$\sim 1/2$	Date a	nd Tim Service Terms			hange Issword			
		Verification Code	OWERTY]	\otimes		11		
		To enable Hik-Conne default verification co-	ct service, you need to create a verification co de.	ode or edit the				
Platform Acc	ess	The Hik-Connect serv and Privacy Statemer	vice will require internet access. Please read S It before enabling the service.	Service Terms				
Enable								
Access Type	Hik-Connect	Use your mobile phor	e to scan the QR code to obtain Terms of Se	rvice and Pri				
Server Address		<u>जिले अफ</u> ्र	a					
			₩.					
			ОК	Cancel				
					Pr	evious	Next	Exit

Figure 2-9 Hik-Connect Access

Step 7 Click **Next** to enter the **Change Password** interface to create the new admin password if required.

Change Password						
New Admin Password						
Admin Password	*****					
New Password	*****					
		Strong				
Confirm	*******	ree (S)				
Unlock Pattern						
	Note: Valid password range [8-1 can use a combination of numbi lowercase, uppercase and spec character for your password wit two kinds of them contained.	cial				
				Previous	ок	Exit

Figure 2-10 Change Password

You can enter click the $\boxed{}$ to show the characters input.

- 1) Check the checkbox of New Admin Password.
- 2) Enter the original password in the text field of Admin Password
- 3) Input the same password in the text field of **New Password** and **Confirm**.
- 4) Check the Unlock Pattern to enable the unlock pattern login.



We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 8 Click **OK** to complete the startup Setup Wizard.

2.6 Enter Main Menu

After you have completed the wizard, you can right click on the screen to enter the main menu bar. Refer to the following figure and table for the description of main menu and sub-menus.

Ď			۲		දුවු	B
	Figur	e 2-11 Ma	ain Menu B	Bar		
	Table	2-1 Descr	iption of Ic	ons		
Icon		Descri	ption			
		Live Vie	5M			
		Playbac	:k			
		File Ma	nagement			
\bigcirc		Smart A	Analysis			
		Camera	a Managem	nent		
		Storage	e Managem	ient		
${\bf f}$		System	Managem	ent		



System Maintenance:

2.7 System Operation

2.7.1 Log out

Purpose:

After logging out, the monitor turns to the live view mode and if you want to perform any operations, you need to enter user name and password log in again.



Shutdown		
G	\bigcirc	
Logout	ShutDown	Reboot

Figure 2-12 Logout

Step 2 Click Logout.



After you have logged out the system, menu operation on the screen is invalid. It is required to input a user name and password to unlock the system.

2.7.2 Shut Down the Device

Step 1 Click On the menu bar.



Figure 2-13 Shutdown Menu

Step 2 Click the **Shutdown** button.

Step 3 Click the **Yes** button.

Do not press the POWER button again when the system is shutting down.

2.7.3 Reboot the Device

From the Shutdown menu, you can also reboot the device.

Step 1 Click On the menu bar.

Step 2 Click **Reboot** to reboot the device.

Chapter 3 Camera Management

3.1 Add the IP Cameras

3.1.1 Activate IP Camera

Purpose:

Before adding the IP camera, make sure the IP camera to be added is in active status.

Step 1 Click in the main menu bar to enter the Camera Management.

Step 2 Click Number of Unadded Online Device on the bottom of IP camera interface.

Step 3 Check inactive cameras and click Activate.

Step 4 Enter the same password in Create New Password and Confirm New Password.

Or you can check Use Channel Default Password to activate the camera with channel default password.

Step 5 Click OK.

3.1.2 Add the IP Camera Manually

Purpose:

Before you can get live video or record the video files, you should add the network cameras to the connection list of the device.

Before you start:

Ensure the network connection is valid and correct, and the IP camera to add has already been activated.

Step 1 Click

on the main menu bar to enter the Camera Management.

Step 2 Click the **Custom Add** tab on the title bar to enter the Add IP Camera interface.

Add IP Camera (Custom)		\times
No. Stat Secu	rity IP Address Device Model	Proto
IP Camera Address	10.62.253.108	
Protocol	HIKVISION -	
Management Port	8000	
Transfer Protocol	Auto -	
User Name	admin	
Password		
Use Channel Defaul		
	Search Continue to Add	Add

Figure 3-1 Add IP Camera

Step 3 Enter IP address, protocol, management port, and other information of the IP camera to add.

Step 4 Enter the login user name and password of the IP camera.

Or you can check **Use Channel Default Password** to add the camera with channel default password.

Step 5 Click Add to finish the adding of the IP camera.

Step 6 (Optional) Click **Continue to Add** to continue to add other IP cameras.

3.1.3 Add the Automatically Searched Online IP Cameras

Step 1 On the Camera Management interface, click the **Online Device** panel to expand the Online Device interface.

Step 2 Select the automatically searched online devices.

Step 3 Click Add.



If the IP camera to add has not been actiavated, you can activate it from the IP camera list on the camera management interface.

3.2 Enable H.265 Stream Access

The device can automatically switch to the H.265 stream of IP camera (which supports H.265 video format) for the initial access.

Step 1 Go to More Settings > H.265 Auto Switch Configuration at the top taskbar.

```
Step 2 Check Enable H.265 (For Initial Access).
```

```
Step 3 Click OK.
```

3.3 Upgrade the IP Camera

The IP camera can be remotely upgraded through the device.

Plug the USB flash drive with the IP camera's firmware upgrade file to the device.

Step 1 On the camera management interface, select a camera.

Step 2 Go to More Settings > Upgrade at the top taskbar.

Step 3 Select the firmware upgrade file from the USB flash drive.

Step 4 Click Upgrade.

Result:

Step 5 The IP camera will reboot automatically after the upgrade completed.

3.4 Edit Channel Default Password

Purpose:

You can activate and add IP camera by the channel default password.

Step 1 On the camera management interface, select a camera.

Step 2 Go to More Settings > Channel Default Password Management at the top taskbar.

Step 3 Check Change Password.

Step 4 Edit Channel Default Password.



We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 5 Click OK.

3.5 Configure the Customized Protocols

Purpose:

To connect the network cameras which are not configured with the standard protocols, you can configure the customized protocols for them. The system provides 16 customized protocols.

Step 1 Click **Protocol** at the top taskbar to enter the protocol management interface.

Custom Protocol	Custom Pro	Custom Protocol 1				
Protocol Name	Custom 1	Custom 1				
Stream Type	✓ Main Str	eam	⊡ Sub S	Stream		
Туре	RTSP	•	RTSP	-		
Transfer Protocol	Auto	-	Auto	-		
Port	554		554			
Path						
	Example: [Ty	pe]://[IP A	ddress]:[Port]/	[Path]		

Figure 3-2 Protocol Management

Step 2 Select the protocol type of transmission and choose the transfer protocols.

- **Type:** The network camera adopting custom protocol must support getting stream through standard RTSP.
- **Path:** you have to contact the manufacturer of the network camera to consult the URL (uniform resource locator) for getting main stream and sub-stream.
- The format of the URL is: [Type]://[IP Address of the network camera]:[Port]/[Path].

• *Example:* rtsp://192.168.1.55:554/ch1/main/av_stream.

The protocol type and the transfer protocols must be supported by the connected IP camera.

Result:

Step 3 After adding the customized protocols, you can see the protocol name is listed in the drop-down list.

Chapter 4 Camera Settings

4.1 Configure OSD Settings

Purpose:

You can configure the OSD (On-screen Display) settings for the camera, including date/time, camera name, etc.

- Step 1 Go to Camera >Display.
- Step 2 Select the camera from the drop-down list.
- Step 3 Edit the name in the Camera Name text field.
- Step 4 Check the checkbox of the **Display Name**, **Display Date** and **Display Week** if you want to show the information on the image.
- Step 5 Set the date format, time format, and display mode.

Camera Name	[D2] IPdome ~				
08-28-2017 Mon 1	6 : 32 : 45		OSD Settings Display Name Display Date Display Week Date Format Time For Display M OSD Font	MM-DD-YYYY 24-hour Non-Transparent & No 16x16	* * *
		Camera 01	Image Settings Exposure		>
			Day/Night Switch		>
			Backlight		>
			Image Enhancement		>

Figure 4-1 OSD Configuration Interface

- Step 6 You can use the mouse to click and drag the text frame on the preview window to adjust the OSD position.
- Step 7 Click the Apply button to apply the settings.

4.2 Configure Privacy Mask

Purpose:

The privacy mask can be used to protect personal privacy by concealing parts of the image from view or recording with a masked area.

Step 1 Go to Camera >Privacy Mask.

- Step 2 Select the camera to set privacy mask.
- Step 3 Click the checkbox of **Enable** to enable this feature.
- Step 4 Use the mouse to draw a zone on the window. The zones will be marked with different frame colors.

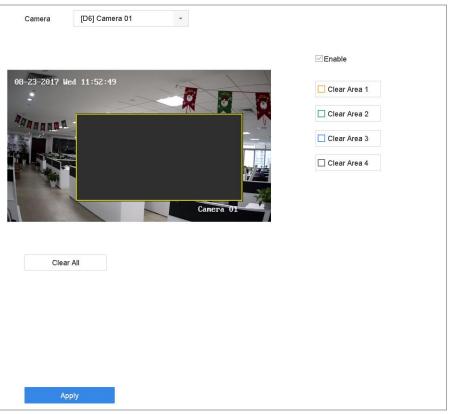


Figure 4-2 Privacy Mask Settings Interface

Up to 4 privacy masks zones can be configured and the size of each area can be adjusted.

Related Operation:

The configured privacy mask zones on the window can be cleared by clicking the corresponding Clear Zone1-4 icons on the right side of the window, or click **Clear All** to clear all zones.

Step 5 Click **Apply** to save the settings.

4.3 Configure the Video Parameters

Purpose:

You can customize the image parameters including the brightness, contrast, saturation for the live view and recording effect.

Step 1 Go to Camera>Display.

- Step 2 Select the camera from the drop-down list.
- Step 3 Adjust the slider or click on the up/down arrow to set the value of the brightness, contrast or saturation.
- Step 4 Click **Apply** to save the settings.

4.4 Configure the Day/Night Switch

The camera can be set to day, night or auto switch mode according to the surrounding illumination conditions.

Step 1 Go to Camera>Display.

Step 2 Select the camera from the drop-down list.

Step 3 Select the day/night switch mode to Day, Night, Auto or Auto-Switch.

Auto: The camera switches between the day mode and the night mode according to the illumination automatically.

The sensitivity ranges from 0 to 7, and the higher sensitivity results in the more easily to trigger the mode switch.

The switch time refers to the interval time between the day/night switch. You can set it from 5 sec to 120 sec.

Auto-Switch: The camera switches the day mode and the night mode according to the start time and end time you set.

Step 4 Click the **Apply** to save the settings.

4.5 Configure Other Camera Parameters

For the connected camera, you can configure the camera parameters including the exposure mode, backlight and image enhancement.

Step 1 Go to Camera>Display.

Step 2 Select the camera from the drop-down list.

Step 3 Configure the camera parameters.

- Exposure: Set the exposure time (1/10000 to 1 sec) of camera. The larger exposure value results in the brighter image.
- Backlight: Set the wide dynamic range (0 to 100) of the camera. When the surrounding illumination and the object have larger difference in brightness, you should set the WDR value.
- Image Enhancement: For optimized image contrast enhancement.

Step 4 Click the **Apply** to save the settings.

Chapter 5 Live View

Live view shows you the video image getting from each camera in real time. The device automatically enters Live View mode when powered on. It is also at the very top of the menu hierarchy, thus pressing the ESC many times (depending on which menu you're on) brings you to the Live View mode.

5.1 Start Live View

Step 1 The system automatically enters the live view interface when starts up, or you can click the

 $\overset{{\scriptstyle \frown}}{{\scriptstyle \frown}}$ on the main menu bar to enter the live view interface.

Step 2 Click to select a window for live view.

Step 3 Double click the IP camera on the left list to start playing the live video.



Figure 5-1 Live View

Step 4 You can use the toolbar at the window bottom to realize the capture, instant playback, audio on/off, digital zoom, live view strategy, show information and start/stop recording, etc.

5.1.2 Digital Zoom

Digital Zoom is for zooming in the live image. You can zoom in the image to different proportions (1 to 16X).

Step 1 In the live view mode, click \square from the toolbar to enter the digital zoom interface.

Step 2 You can move the sliding bar or scroll the mouse wheel to zoom in/out the image to different proportions (1 to 16X).



Figure 5-2 Digital Zoom

5.1.3 Fisheye View

The device supports the fisheye expansion for the connected fisheye camera in live view or playback mode.

The connected camera must support the fisheye view.

Step 1 In the live view mode, click the is to enter the fisheye expansion mode.

Step 2 Select the expansion view mode.

- **180° Panorama (**]: Switch the live view image to the 180° panorama view.
- **360° Panorama (**): Switch the live view image to the 360° panorama view.
- **PTZ Expansion** (): The PTZ Expansion is the close-up view of some defined area in the fisheye view or panorama expansion, and it supports the electronic PTZ function, which is also called e-PTZ.
- Radial Expansion (): In the radial expansion mode, the whole wide-angle view of the fisheye camera is displayed. This view mode is called Fisheye View because it

approximates the vision of a fish's convex eye. The lens produces curvilinear images of a large area, while distorting the perspective and angles of objects in the image.

5.1.4 3D Positioning

3D Positioning is for zooming in/out the specific area of live image.

Step 1 In the live view mode, click the **Step 1** to enter the 3D positioning mode.

Step 2 Operate the zoom in/out in the image.

Zoom in

Use the left key of mouse to click on the desired position in the video image and drag a rectangle area in the lower right direction to realize zoom in.

• Zoom out

Use the left key of mouse to drag a rectangle area in the upper left direction to move the position to the center and enable the rectangle area to zoom out.

5.1.5 Live View Strategy

Step 1 In the live view mode, click to enter the digital zoom operation interface in full screen mode.

Step 2 Select the live view strategy to Real-time, Balanced or Fluency.

5.2 Configure Live View Settings

Live View settings can be customized according to different needs. You can configure the output interface, dwell time for screen to be shown, mute or turning on the audio, the screen number for each channel, etc.

Step 1 Go to System > Live View > General.

ideo Output Interface	VGA/HDMI	•	Event Output	VGA/HDMI	
ive View Mode	2 * 2	*	Full Screen Monitoring Dwell Tim	e 10s	
well Time	5s	-			
nable Audio Output	\checkmark				
olume	1	5			
Apply					

Figure 5-3 Live View-General

Step 2 Configure the live view parameters.

- Video Output Interface: Select the video output to configure.
- Live View Mode: Select the display mode for live view, e.g., 2*2, 1*5, etc.
- **Dwell Time:** The time in seconds to dwell between switching of cameras when enabling auto-switch in Live View.
- Enable Audio Output: Enable/disable audio output for the selected video output.
- Volume: Adjust the volume of live view, playback and two-way audio for the selected output interface.
- Event Output: Select the output to show event video.
- Full Screen Monitoring Dwell Time: Set the time in seconds to show alarm event screen.

Step 3 Click **OK** to save the settings.

5.3 Configure Live View Layout

Step 1 Go to System> Live View>View Settings.

		Q ¹		⊗ ²		(
Camera No	Camera Name					
D1	IPCamera 01					
D2	IPdome		D1		D2	
			ויט		D2	
		3		4		
			+		+	
_		1 2	25 32 3	6 64	🕞 🗔 🛛 P: 1/1	6 >

Figure 5-4 Live View

- Step 2 Select the video output interface, e.g., HDMI/ VGA or channel-zero.
- Step 3 Select a window division mode from the toolbar.
- Step 4 Select a division window, and double-click on the camera from the list to set the camera to the window.

You can enter the number in the text field to quickly search the camera from the list.

You can also click-and-drag the camera to the desired window on the live view interface to set the camera order.

Related Operation:

- Click button to start live view for all the channels.
- Click to stop all the live view.

Step 5 Click **Apply** to save the settings.

5.4 Configure Auto-Switch of Cameras

You can set the auto-switch of cameras to play in different display modes.

Step 1 Go to System > Live View > General.

Step 2 Set the video output interface, live view mode and dwell time.

- Video Output Interface: Select the video output interface.
- Live View Mode: Select the display mode for live view, e.g., 2*2, 1*5, etc.
- **Dwell Time:** The time in seconds to dwell between switching of cameras when enabling auto-switch. The range is from 5s to 300s.

Step 3 Go to View Settings to set the view layout.

Step 4 Click **OK** to save the settings.

5.5 Configure Channel-Zero Encoding

Purpose:

You can enable the channel-zero encoding when you need to get a remote view of many channels in real time from web browser or CMS (Client Management System) software, in order to decrease the bandwidth requirement without affecting the image quality.

Step 1 Go to System>Live View>General.

Step 2 Select the video output interface to Channel-Zero.

Step 3 Go to System>Live View>Channel-Zero.

Step 4 Check the checkbox to enable the channel-zero.

Frame Rate	Full Frame	•
Max. Bitrate Mode	General	•
Max. Bitrate(Kbps)	1792	*
Apply		

Figure 5-5 Live View- Channel-Zero Encoding

Step 5 Configure the **Frame Rate**, **Max. Bitrate Mode** and Max. Bitrate. The higher frame rate and bitrate settings result in the higher requirement of bandwidth.

Step 6 Click Apply.

Result:

You can view all of the channels in one screen using the CMS or web browser.

5.6 Facial Recognition

Purpose:

You can enter facial recognition interface to view real-time human face recognition and stranger recognition results.

Step 1 Go to System > Event > Smart Event > Human Face Comparison to enable face picture comparison or stranger detection of cameras to view facial recognition result. For details, refer to 14.2 Face Picture Comparison Alarm.

Step 2 Go to live view interface and click 🔟 in toolbar.

- Step 3 Select window division mode as and double-click to select camera for each window from camera list.
- Step 4 Select result window in the bottom left window. The result windows show the real-time facial recognition results.

Result: After above configuration, real-time facial recognition results of selected camera will be shown in the windows on the left.

Chapter 6 PTZ Control

6.1 PTZ Control Wizard

Before you start

Please make sure the connected IP camera supports the PTZ function and is properly connected.

Purpose

Follow the PTZ control wizard to guide you through the basic PTZ operation.

Step 1 Click on the quick settings toolbar of the PTZ camera live view. The PTZ control wizard pops up as below.

PT	PTZ Control Wizard			
1. Drag the image to adjust F	PT 2. Click in the image to focus a			
→ →				
3. Scroll up/down to zoom in/	fout. 4. Click the lower-right corner ic			
Do not sh	ок.			

Figure 6-1 PTZ Control Wizard

Step 2 Follow the wizard to adjust the PTZ view, focus, and zoom in/out the camera.

Step 3 (Optional) Check Do not show this prompt again.

Step 4 Click **OK** to exit.

6.2 Configure PTZ Parameters

Purpose

Follow the procedure to set the parameters for PTZ. The configuration of the PTZ parameters should be done before you control the PTZ camera.

Step 1 Click on the quick settings toolbar of the PTZ camera live view. The PTZ control panel displays on the right of the interface.

Step 2 Click PTZ Parameters Settings to set the PTZ parameters.

PTZ Parameter Se	ttings		\times
Baud Rate	9600		-
Data Bit	8		-
Stop Bit	1		-
Parity	None		-
Flow Ctrl	None		-
PTZ Protocol	PELCO-C		-
Address	0		
Address range: 0~	255		
		ОК	Cancel

Figure 6-2 PTZ Parameters Settings

Step 3 Edit the parameters of the PTZ camera.

All the parameters should be exactly the same as the PTZ camera parameters.

Step 4 Click **OK** to save the settings.

6.3 Set PTZ Presets, Patrols & Patterns

Before you start:

Please make sure that the presets, patrols and patterns should be supported by PTZ protocols.

6.3.1 Set a Preset

Purpose:


Follow the steps to set the preset location which you want the PTZ camera to point to when an event takes place.

Step 1 Click $\stackrel{{\scriptstyle\checkmark}}{\rightharpoonup}$ on the quick settings toolbar of the PTZ camera live view.

The PTZ control panel displays on the right of the interface.

Step 2 Use the directional buttons on the PTZ control panel to wheel the camera to the location where you want to set preset, and the zoom and focus operations can be recorded in the preset as well.

Step 3 Click I in the lower right corner of live view to set the preset.

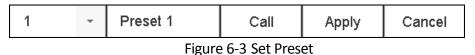

Step 4 Select the preset No. (1~255) from the drop-down list.

Step 5 Enter the preset name in the text field.

Step 6 Click **Apply** to save the preset.

Step 7 Repeat steps 2-6 to save more presets.

Step 8 (Optional) Click **Cancel** to cancel the location information of the preset.

Step 9 (Optional) Click in the lower right corner of live view to view the configured presets.

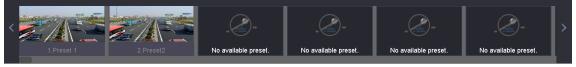


Figure 6-4 View the Configured Presets

6.3.2 Call a Preset

Purpose:

This feature enables the camera to point to a specified position such as a window when an event takes place.

Step 1 Click

on the quick settings toolbar of the PTZ camera live view.

Step 2 Click 🛄 in the lower right corner of live view.

Step 3 Select the preset No. from the drop-down list.

Step 4 Click Call to call it.

1	-	Preset 1	Call	Apply	Cancel
Figure 6-5 Call Preset (1)					

Or click in the lower right corner of live view, and click the configured preset to call it.



i Barc o o c

6.3.3 Set a Patrol

Purpose:

Patrols can be set to move the PTZ to different key points and have it stay there for a set duration before moving on to the next key point. The key points are corresponding to the presets.

Step 1 Click

) on the quick settings toolbar of the PTZ camera live view.

The PTZ control panel displays on the right of the interface.

Step 2 Click **Patrol** to configure patrol.

Aux Function	Patrol	Pattern
Patrol1		
🗱 Set	🕑 Call	Stop

Figure 6-7 Patrol Configuration

Step 3 Select the patrol No. in the text field.

Step 4 Click **Set** to enter the Patrol Settings interface.

	ettings-Patrol 1			
+×	1 ↓			
No	Preset	Speed	Duration	Edit
1	Preset 1	1	15	Ľ
2	Preset2	1	15	Ľ
			Apply	Cancel

Figure 6-8 Patrol Settings

Step 5 Click 🛨 to add key point for the patrol.

KeyPoint		
Preset	Preset 1	-
Speed	1	-
Duration	15	•
	Apply	Cancel

Figure 6-9 Key Point Configuration

1) Configure key point parameters.

Preset: It determines the order at which the PTZ will follow while cycling through the patrol.

Speed: It defines the speed at which the PTZ will move from one key point to the next.

Duration: It refers to the time span to stay at the corresponding key point.

2) Click Apply to save the key points to the patrol.

Step 6 (Optional) Click \square to edit the added key point.

KeyPoint		
Preset	Preset 1	•
Speed	1	•
Duration	15	-
	0 mmlu	Canaal
	Apply	Cancel

Figure 6-10 Edit Key Point

Step 7 (Optional) Select a key point and click \times to delete it.

Step 8 (Optional) Click 懀 or 🦊 to adjust the key point order.

Step 9 Click **Apply** to save the settings of the patrol.

Step 10 Repeat steps 3-9 to set more patrols.

6.3.4 Call a Patrol

Purpose:

Calling a patrol makes the PTZ to move according to the predefined patrol path.

Step 1 Click $\stackrel{\smile}{\rightharpoonup}$ on the quick settings toolbar of the PTZ camera live view.

The PTZ control panel displays on the right of the interface.

Step 2 Click **Patrol** on the PTZ control panel.

Aux Function	Patrol	Pattern
Patrol1		
🗱 Set	🕑 Call	Stop

Figure 6-11 Patrol Configuration

Step 3 Select a patrol in the text field.

Step 4 Click Call to call it.

Step 5 (Optional) Click Stop to stop calling it.

6.3.5 Set a Pattern

Purpose:

Patterns can be set by recording the movement of the PTZ. You can call the pattern to make the PTZ movement according to the predefined path.

Step 1 Click

on the quick settings toolbar of the PTZ camera live view.

The PTZ control panel displays on the right of the interface.

Step 2 Click Pattern to configure pattern.

Au	Function	Patrol	Pattern
	Pattern1		
	Record	l 🕞 Call	Stop

Figure 6-12 Pattern Configuration

Step 3 Select the pattern No. in the text field.

Step 4 Set the pattern.

1) Click Record to start recording.

2) Click corresponding buttons on the control panel to move the PTZ camera.

3) Click Stop to stop recording.

The movement of the PTZ is recorded as the pattern.

Step 5 Repeat steps 3-4 to set more patterns.

6.3.6 Call a Pattern

Purpose:

Follow the procedure to move the PTZ camera according to the predefined patterns.

Step 1 Click

on the quick settings toolbar of the PTZ camera live view.

The PTZ control panel displays on the right of the interface.

Step 2 Click Pattern to configure pattern.

Aux	Function	Patrol	Pattern
	Pattern1		
	Record	🕞 Call	Stop

Figure 6-13 Pattern Configuration

Step 3 Select a pattern in the text field.

Step 4 Click Call to call it.

Step 5 (Optional) Click **Stop** to stop calling it.

6.3.7 Set Linear Scan Limits

Before you start:

Please make sure the connected IP camera supports the PTZ function, and is properly connected.

Purpose:

The linear scan can be enabled to trigger the scan in the horizontal direction in the predefined range.

This function is supported by some certain models.

on the quick settings toolbar of the PTZ camera live view. Step 1 Click

The PTZ control panel displays on the right of the interface.

Step 2 Click the directional buttons to wheel the camera to the location where you want to set the limit, and click Left Limit or Right Limit to link the location to the corresponding limit.

The speed dome starts linear scan from the left limit to the right limit, and you must set the left limit on the left side of the right limit, as well the angle from the left limit to the right limit should be no more than 180°.

6.3.8 Call Linear Scan

Before operating this function, make sure the connected camera supports the linear scan and is in HIKVISION protocol.

Purpose:

Follow the procedure to call the linear scan in the predefined scan range.

Step 1 Click

on the quick settings toolbar of the PTZ camera live view.

The PTZ control panel displays on the right of the interface.

Step 2 Click Linear Scan to start the linear scan and click it again to stop it.

Step 3 (Optional) Click **Restore** to clear the defined left limit and right limit data.

Reboot the camera to take the settings into effect.

6.3.9 One-touch Park

Before operating this function, make sure the connected camera supports the linear scan and is in HIKVISION protocol.

Purpose

For some certain model of the speed dome, it can be configured to start a predefined park action (scan, preset, patrol and etc.) automatically after a period of inactivity (park time).

Step 1 Click $\stackrel{r}{\rightharpoonup}$ on the quick settings toolbar of the PTZ camera live view.

The PTZ control panel displays on the right of the interface.

Step 2 Click Park (Quick Patrol), Park (Patrol 1) or Park (Preset 1) to activate the park action.

Park (Quick Patrol): The dome starts patrol from the predefined preset 1 to preset 32 in order after the park time. The undefined preset will be skipped.

Park (Patrol 1): The dome starts moving according to the predefined patrol 1 path after the park time.

Park (Preset 1): The dome moves to the predefined preset 1 location after the park time.

The park time can only be set via the speed dome configuration interface. The value is 5s by default.

Step 3 Click Stop Park (Quick Patrol), Stop Park (Patrol 1) or Stop Park (Preset 1) to inactivate it.

6.4 Auxiliary Functions

Before you start

Please make sure the connected IP camera supports the PTZ function, and is properly connected.

Purpose

You can operate the auxiliary functions including light, wiper, 3D positioning, and center on the PTZ control panel.

Step 1 Click

) on the quick settings toolbar of the PTZ camera live view.

The PTZ control panel displays on the right of the interface.

Step 2 Click Aux Function.



Figure 6-14 Aux Function Configuration

Step 3 Click the icons to operate the aux functions. See the table for the description of the icons.

Icon	Description
.`∳`-	Light on/off
	Wiper on/off
30	3D positioning
¢	Center

Table 6-1 Description of Aux Functions Icons

Chapter 7 Storage

7.1 Storage Device Management

7.1.1 Install the HDD

Before startup of the device, install and connect the HDD to the device. Refer to the Quick Start Guide for the installation instructions.

7.1.2 Add the Network Disk

You can add the allocated NAS or disk of IP SAN to device, and use it as network HDD. Up to 8 network disks can be added.

Add NAS

Step 1 Go to Storage > Storage Device.

Step 2 Click Add to enter the Custom Add interface.

Step 3 Select the NetHDD from the drop-down list.

Step 4 Select the type to NAS.

Step 5 Enter the NetHDD IP address in the text field.

Step 6 Click Search to search the available NAS disks.

NetHDD 1		•
NAS		-
120 . 36 . 2 . 39		
/nas/device1/11		Search
	ОК	Cancel
	NAS 120 . 36 . 2 . 39	NAS 120 . 36 . 2 . 39 /nas/device1/11

Figure 7-1 Add NAS Disk

Step 7 Select the NAS disk from the list shown below, or you can manually enter the directory in the text field of NetHDD Directory.

Step 8 Click the **OK** to complete the adding of the NAS disk.

Result:

After having successfully added the NAS disk, return to the HDD Information menu. The added NetHDD will be displayed in the list.

Add IP SAN

Step 1 Go to Storage > Storage Device.

- Step 2 Click Add to enter the Custom Add interface.
- Step 3 Select the NetHDD from the drop-down list.
- Step 4 Select the type to IP SAN.
- Step 5 Enter the NetHDD IP address in the text field.
- Step 6 Click Search to search the available IP SAN disks.
- Step 7 Select the IP SAN disk from the list shown below.
- Step 8 Click **OK** to complete the adding of the IP SAN disk.

Up to 1 IP SAN disk can be added.

Custom Add				
NetHDD	NetHDD 1		-	
Туре	IP SAN		-	
NetHDD IP	120 . 36 . 2 . 39			
NetHDD Directory	iqn.2008-06.storos.1-2		\otimes	Search
		ОК	C	Cancel

Figure 7-2 Add IP SAN Disk

Result:

After having successfully added the IP SAN disk, return to the HDD Information menu. The added NetHDD will be displayed in the list.

If the installed HDD or NetHDD is uninitialized, please select it and click the **Init** button for initialization.

7.1.3 Configure eSATA for Data Storage

When there is an external eSATA device connected to device, you can configure eSATA for the data storage, and you can manage the eSATA in the device.

Step 1 Click Storage>Advanced.

Step 2 Select the eSATA type to Export or Record/Capture from the dropdown list of **eSATA**.

Export: use the eSATA for backup.

Record/Capture: use the eSATA for record/capture. Refer to the following steps for operating instructions.

Network Video Recorder User Manual

eSATA	eSATA1	•
Usage	Record/Capture	•

Figure 7-3 Set eSATA Mode

Step 3 When the eSATA type is selected to Record/Capture, enter the storage device interface.

Step 4 Edit the property of the selected eSATA, or initialize it is required.

7.2 Storage Mode

7.2.1 Configure HDD Group

Purpose:

Multiple HDDs can be managed in groups. Video from specified channels can be recorded onto a particular HDD group through HDD settings.

Step 1 Go to Storage > Storage Device.

Step 2 Check the checkbox to select the HDD to set the group.

⊢ Add	Ç	Init				Total Capa	city 1863.03GB	Free Space	e 1702.00GB
	Label	Capacity	Status	Property	Туре	Free Space	Group	Edit	Delete
~	5	931.52GB	Normal	R/W	Local	871.00GB	2	Ľ	×
	7	931.52GB	Normal	R/W	Local	831.00GB	1	Ľ	×
				F ¹ 7 /	Storago D				

Figure 7-4 Storage Device

Step 3 Click onter the Local HDD Settings interface.

Local HDD Settir	ngs	
HDD No.	5	
HDD Property	● R/W	
Group	○1 ●2 ○3 ○4 ○5 ○6 ○7 ○8]
	9 010 11 12 13 14 15 16	
HDD Capacity	931.52GB	
	ОК Сап	cel

Figure 7-5 Local HDD Settings

Step 4 Select the Group number for the current HDD.

Step 5 Click OK.



Regroup the cameras for HDD if the HDD group number is changed.

Step 6 Go to Storage> Storage Mode.

Step 7 Check the checkbox of **Group** tab.

Step 8 Select the group No. from the list.

Step 9 Check the checkbox to select the IP camera (s) to record/capture on the HDD group.

 Mode
 Quota
 Group

 Record on HDD Group
 2

 IP Camera
 D1
 D2
 D3
 D4
 D5
 D6
 D7
 D8

 D9
 D10
 D11
 D12
 D13
 D14
 D15
 D16

 D17
 D18
 D19
 D20
 D21
 D22
 D23
 D24

 D25
 D26
 D27
 D28
 D29
 D30
 D31
 D32

 D33
 D34
 D35
 D36
 D37
 D38
 D39
 D40

 D41
 D42
 D43
 D44
 D45
 D46
 D47
 D48

 D49
 D50
 D51
 D52
 D53
 D54
 D55
 D56

Network Video Recorder User Manual

Figure 7-6 Storage Mode-HDD Group

Step 10 Click Apply.

Reboot the device to activate the new storage mode settings.

7.2.2 Configure HDD Quota

Purpose:

Each camera can be configured with allocated quota for the storage of recorded files or captured pictures.

Step 1 Go to Storage> Storage Mode.

Step 2 Check the checkbox of **Quota** tab.

- Step 3 Select a camera to set quota.
- Step 4 Enter the storage capacity in the text fields of Max. Record Capacity (GB) and Max. Picture Capacity (GB).

Mode	Quota Group
Camera	[D1] IPCamera 01
Used Record Capacity	18.00GB
Used Picture Capacity	2048.00MB
HDD Capacity (GB)	1863
Max. Record Capacity (GB)	1500
Max. Picture Capacity (GB)	50 🛞
🔺 Free Quota Space 313	GB
Copy to	Арріу

Figure 7-7 Storage Mode-HDD Quota

Step 5 (Optional) You can click **Copy to** if you want to copy the quota settings of the current camera to other cameras.

Step 6 Click the **Apply** button to apply the settings.

When the quota capacity is set to 0, all cameras will use the total capacity of HDD for record and picture capture.



Reboot the device to activate the new storage mode settings.

7.3 Recording Parameters

7.3.1 Main Stream

The Main Stream refers to the primary stream that affects data recorded to the hard disk drive and will directly determine your recording quality and image size.

Comparing with the sub-stream, the main stream can provide a higher quality video with higher resolution and frame rate.

Frame Rate (FPS - Frames Per Second): refers to how many frames are captured each second. A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout.

Resolution: Image resolution is a measure of how much detail a digital image can hold: the greater the resolution, the greater the level of detail. Resolution can be specified as the number of pixel-columns (width) by the number of pixel-rows (height), e.g.,1024×768.

Bitrate: The bit rate (in kbit/s or Mbit/s) is often referred to as speed, but actually defines the number of bits/time unit and not distance/time unit.

Enable H.264+ Mode: The H.264+ mode helps to ensure the high video quality with a lowered bitrate. It can effectively reduces the need of bandwith and HDD storage space.

A higher resolution, frame rate and bitrate setting will provide you the better video quality, but it will also require more internet bandwidth and use more storage space on the hard disk drive.

7.3.2 Sub-Stream

The sub-stream is a second codec that runs alongside the mainstream. It allows you to reduce the outgoing internet bandwidth without sacrificing your direct recording quality.

The sub-stream is often exclusively used by smartphone applications to view live video. Users with limited internet speeds may benefit most from this setting.

7.3.3 Picture

The picture refers to the live picture capture in continuous or event recording type.

Picture Quality: set the picture quality to low, medium or high. The higher picture quality results in more storage space requirement.

Interval: the interval of capturing live picture.

7.3.4 ANR

ANR (Automatic Network Replenishment) function which enables the IP camera to save the recording files in the local storage when the network is disconnected, and when the network is resumed, it uploads the files to the device.

Enable the ANR (Automatic Network Replenishment) function via the web browser

(Configuration > Storage > Schedule Settings > Advanced).

7.3.5 Configure Advanced Recording Settings

Step 1 Go to Storage > Schedule Settings > Record Schedule/Capture Schedule.

Step 2 Check the checkbox of **Enable** to enable scheduled recording.

Step 3 Click Advanced to set the recording parameters.

Advanced Parameters											
Record Audio:											
Pre-Record:	e-Record: 5s										
Post-Record:	5s	-									
Stream Type:	Main Stream	-									
Expired Time (da	y): 5										
Redundant Re	cord/Capture										
	ОК	Cancel									

Figure 7-8 Advanced Record Settings

Record Audio: Check the checkbox to enable or disable audio recording.

Pre-record: The time you set to record before the scheduled time or event. For example, when an alarm triggers the recording at 10:00, and if you set the pre-record time as 5 seconds, the camera records at 9:59:55.

Post-record: The time you set to record after the event or the scheduled time. For example, when an alarm triggered recording ends at 11:00, and if you set the post-record time as 5 seconds, it records till 11:00:05.

Expired Time: The expired time is period for a recorded file to be kept in the HDD. When the deadline is reached, the file will be deleted. If you set the expired time to 0, the file will not be deleted. The actual keeping time for the file should be determined by the capacity of the HDD.

Redundant Record/Capture: By enabling redundant record or capture you save the record and captured picture in the redundant HDD. See *Chapter Configure Redundant Recording and Capture*.

Stream Type: Main stream and sub-stream are selectable for recording. When you select sub-stream, you can record for a longer time with the same storage space.

Step 4 Click **OK** to save the settings.

7.4 Configure Recording Schedule

Set the record schedule, and then the camera automatically starts/stops recording according to the configured schedule.

Before you start

Make sure you have installed the HDDs to the device or added the network disks before you want to store the video files, pictures and log files.

Refer to the *Quick Start Guide* for the HDD installation.

Refer to *Chapter 7.1.2* Add the Network Disk for network HDD connections.

Step 1 Go to Storage > Recording Schedule.


Step 2 Select a camera.

- Step 3 Check Enable Schedule.
- Step 4 Select a **Record Type**. The record type can be Continuous, Motion Detection, Alarm, Motion | Alarm, Motion & Alarm, Event, and POS event.

Different recording types are configurable.

- Continuous: scheduled recording.
- **Event**: recording triggered by all event triggered alarm.
- **Motion**: recording triggered by motion detection.
- Alarm: recording triggered by alarm.
- M/A: recording triggered by either motion detection or alarm.
- **M&A:** recording triggered by motion detection and alarm.
- **POS Event:** recording triggered by POS and alarm.

Step 5 Select a day and click-and-drag the mouse on the time bar to set the record schedule.

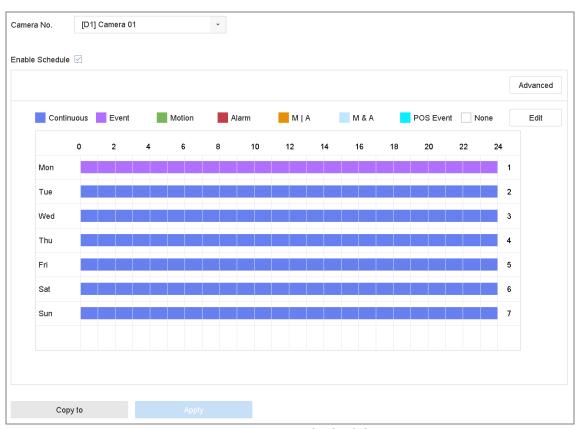

Network Video Recorder User Manual

Figure 7-9 Record Schedule

Step 6 Repeat the above steps to schedule recording or capture for other days in the week.

Step 7 Click **Apply** to save the settings.

To enable Motion, Alarm, M | A (motion or alarm), M & A (motion and alarm) and Event triggered recording and capture, you must configure the motion detection settings, alarm input settings and other events as well. Please refer to Chapter 11

Event and Alarm Settings and Chapter 12 VCA Event Alarm for details.

7.5 Configure Continuous Recording

- Step 1 Go to Camera > Encoding Parameters > Recording Parameters.
- Step 2 Set the continuous main stream/sub-stream recording parameters for the camera.
- Step 3 Go to Storage > Recording Schedule.
- Step 4 Select the record type to **Continuous**.
- Step 5 Set the schedule for the continuous recording. Refer to Chapter 7.4 Configure Recording Schedule for details.

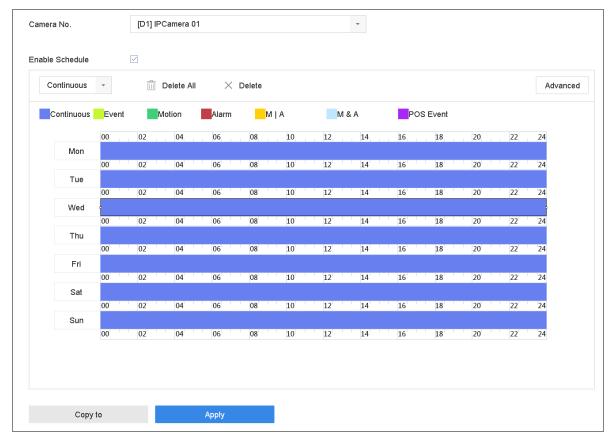


Figure 7-10 Record Schedule

7.6 Configure Motion Detection Triggered Recording

You can configure the recording triggered by the motion detection event.

Step 1 Go to System > Event > Normal Event > Motion Detection.

Step 2 Configure the motion detection and select the channel (s) to trigger the recording when motion event occurs. Refer to Chapter 11.2 Configure Alarm Linkage Actions for details.

Step 3 Go to Camera > Encoding Parameters > Recording Parameters.

Step 4 Set the event main stream/sub-stream recording parameters for the camera.

- Step 5 Go to Storage > Recording Schedule.
- Step 6 Select the record type to Motion.
- Step 7 Set the schedule for the motion detection triggered recording. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.7 Configure Event Triggered Recording

You can configure the recording triggered by the motion detection, motion detection and alarm, face detection, vehicle detection, line crossing detection, etc.

Step 1 Go to System > Event.

Step 2 Configure the event detection and select the channel (s) to trigger the recording when event occurs. Refer to Chapter 11

Event and Alarm Settings and Chapter 12 VCA Event Alarm for details.

- Step 3 Go to Camera > Encoding Parameters > Recording Parameters.
- Step 4 Set the event main stream/sub-stream recording parameters for the camera.
- Step 5 Go to Storage > Recording Schedule.
- Step 6 Select the record type to **Event**.
- Step 7 Set the schedule for the event triggered recording. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.8 Configure Alarm Triggered Recording

You can configure the recording triggered by the motion detection, face detection, vehicle detection, line crossing detection, etc.

- Step 1 Go to System > Event > Normal Event > Alarm Input.
- Step 2 Configure the alarm input and select the channel (s) to trigger the recording when alarm occurs.

Refer to Chapter 11 and Chapter 12 VCA Event Alarm for details.

- Step 3 Go to Camera > Encoding Parameters > Recording Parameters.
- Step 4 Set the event main stream/sub-stream recording parameters for the camera.
- Step 5 Go to Storage > Recording Schedule.
- Step 6 Select the record type to Alarm.
- Step 7 Set the schedule for the alarm triggered recording. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.9 Configure POS Event Triggered Recording

You can configure the recording triggered by the connected POS event, such as the transaction, etc.

Step 1 Go to System >POS Settings.

Step 2 Configure the POS and select the channel (s) in the **Event Linkage** to trigger the recording when POS event occurs.

Refer to Chapter 13 Smart Analysis for details.

- Step 3 Go to Camera > Encoding Parameters > Recording Parameters.
- Step 4 Set the event main stream/sub-stream recording parameters for the camera.
- Step 5 Go to **Storage > Recording Schedule**.
- Step 6 Select the record type to POS Event.

Step 7 Set the schedule for the POS event triggered recording. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.10 Configure Picture Capture

The picture refers to the live picture capture in continuous or event recording type.

Step 1 Go to Camera > Encoding Parameters > Capture.

Step 2 Set the picture parameters.

- **Resolution**: set the resolution of the picture to capture.
- Picture Quality: set the picture quality to low, medium or high.
- Interval: the interval of capturing live picture.

Step 3 Go to Storage > Capture Schedule.

Step 4 Select the camera to configure the picture capture.

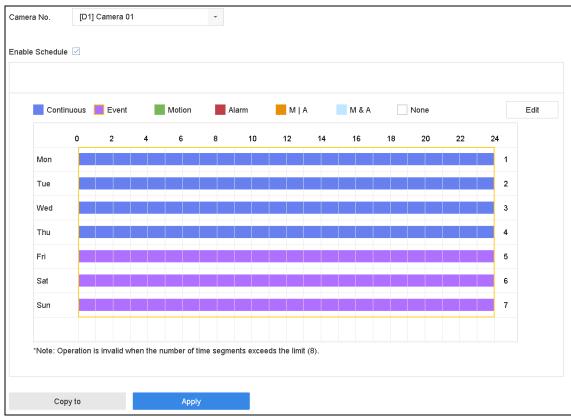


Figure 7-11 Set Picture Capture Schedule

Step 5 Set the picture capture schedule. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.11 Configure Holiday Recording and Capture

Purpose:

Follow the steps to configure the record or capture schedule on holiday for that year. You may want to have different plan for recording and capture on holiday.

Step 1 Go to System > Holiday Settings.

Step 2 Select a holiday item from the list and click

Step 3 Check the Enable to configure the holiday.

Edit					
Enable					
Holiday N	Holiday1				
Mode	By Month				•
Start Date	Jan		•	1	•
End Date	Feb		•	8	•
		Apply		ОК	Cancel

Figure 7-12 Edit Holiday Settings

- 1) Edit the holiday name.
- 2) Select the mode to by date, by week or by month.
- 3) Set the start and end date of the holiday.
- 4) Click **OK**.
- Step 4 Set the schedule for the holiday recording. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.12 Configure Redundant Recording and Capture

Purpose:

Enabling redundant recording and capture, which means saving the record files and captured pictures not only in the R/W HDD but also in the redundant HDD, will effectively enhance the data safety and reliability.

You must set the storage mode to *Group* before you set the HDD property to Redundancy. For detailed information, please refer to Chapter 7.2.1 Configure HDD Group. There should be at least another HDD which is in Read/Write status.

Step 1 Go to Storage > Storage Device.

Step 2 Select a **HDD** from the list and Click is to enter the Local HDD Settings interface.

Step 3 Set the HDD property to **Redundancy**.

Local HDD Settin	gs			
HDD No.	5			
HDD Property	R	⊖ Read-only	Redundan	
Group		○4 ○5 ○6 1 ○12 ○13 ○14		
HDD Capacity	931.52GB			
			ок	Cancel

Figure 7-13 HDD Property-Redundancy

Step 4 Go to Storage > Schedule Settings > Record Schedule/Capture Schedule.

Step 5 Click Advanced to set the camera recording parameters.

Advanced Paramete	ers							
Record Audio:								
Pre-Record:	5s			-				
Post-Record:	Record: 5s							
Stream Type:	Main Strea	m		•				
Expired Time (da	ıy):	5						
Redundant Re	cord/Capture							
	ок		Cance	I				

Figure 7-14 Record Parameters

Step 6 Check the checkbox of Redundant Record/Capture.

Step 7 Click **OK** to save settings.

Chapter 8 Disk Array

Purpose:

Disk array is a data storage virtualization technology that combines multiple physical disk drive components into a single logical unit. An array stores data over multiple HDDs to provide enough redundancy so that data can be recovered if one disk fails. Data is distributed across the drives in one of several ways called "RAID levels", depending on what level of redundancy and performance is required.

8.1 Create Disk Array

Purpose:

The device supports the disk array that is realized by software. You can enable the RAID function as required. Two ways are available for creating array: one-touch configuration and manual configuration. The following flow chart shows the process of creating array.

8.1.1 Enable RAID

Purpose:

Perform the following steps to enable the disk array function.

Step 1 Go to Storage > Advanced.

	Recording Schedule	Overwrite	
Ë.	Storage Device	eSATA	eSATA1 ~
	Raid Setup >	Usage	Record/Capture ~
	Storage Mode	Enable HDD Sleeping	
(@)		Enable RAID	
		Use the enterprise-class HI	
			_
		Apply	

Figure 8-1 Advanced

Step 2 Check Enable RAID.

Step 3 Click Apply.

Step 4 Reboot device to take effect the settings.

8.1.2 One-Touch Creation

Purpose:

One-touch configuration helps you to quickly create the disk array. By default, the array type created by one-touch configuration is RAID 5.

Before you start:

- Enable RAID function. For details, refer to Chapter 8.1.1 Enable RAID.
- Install at least 3 HDDs. If more than 10 HDDs are installed, 2 arrays will be created. To maintain reliable and stable running of the HDDs, it is recommended to use enterprise-level HDDs with the same model and capacity.

Step 1 Go to Storage > RAID Setup > Physical Disk.

	Recording Schedule	+ One-touch Cor	nfig 📿 Create					
8	Storage Device	No.	Capacity Array	Туре	Status	Model	Hot Spare	Task
	Raid Setup	1	1863.02GB	Normal	Functional	ST2000VX000-1CU164		None
		2	2794.52GB	Normal	Functional	ST3000VX000-9YW166		None
	Physical Disk	5	1863.02GB	Normal	Functional	ST2000VX000-1CU164		None
	Аггау	9	2794.52GB	Normal	Functional	ST3000VX000-1CU166		None
	Firmware	10	1863.02GB	Normal	Functional	ST2000VX000-1CU164	ß	None

Figure 8-2 Physical Disk

Step 2 Click One-touch Config.

Step 3 Edit the array name in Array Name text filed and click OK to start configuring.

If you install 4 HDDs or more, a hot spare disk for array rebuilding will be created.

Step 4 A message box will pop up when the array creation is completed, click **OK** on it.

Step 5 Optionally, the device will automatically initialize the created array. Go to **Storage > RAID Setup > Array** view the information of created arrray.

8.1.3 Manual Creation

Purpose:

Manually create the array of RAID 0, RAID 1, RAID 5, RAID 6, and RAID 10.

Step 1 Go to Storage > RAID Setup > Physical Disk.

Step 2 Click Create.

Create Array			
Array Name			
RAID Level	RAID 5		•
Initialization Type	Initialize (Fas	st)	•
Physical Disk	□1 □2	5 9	□10
Array Capacity (Estim	ated): 0GB		
····· (···		ок	Cancel

Table 8-1 Create Array

Step 3 Enter the array name.

Step 4 Select RAID Level as RAID 0, RAID 1, RAID 5, RAID 6, or RAID 10 as required.

Step 5 Select the physical disks to constitute array.

Table 8-2 Required Number of HDD

RAID Level	Required Number of HDD
RAID 0	At least 2 HDDs.
RAID 1	At least 2 HDDs.
RAID 5	At least 3 HDDs.
RAID 6	At least 4 HDDs.
RAID 10	The number of HDD must be an even ranges from 4 to 16.

Step 6 Click OK.

Step 7 Optionally, the device will automatically initialize the created array. Go to **Storage > RAID Setup > Array** view the information of created arrray.

	Recording Schedule											
E.	Storage Device		No	Name	Free Space	Physical Disk	Hot S	Status	Level	Rebuild	Delete	Task
88	Raid Setup	~	1	Array01	3725/3725G	1 5 10		Functional	RAID 5		×	Initialize (Fast)(Running) 43%
	Physical Disk											
	Firmware											

Figure 8-3 Array List

8.2 Rebuild Array

Purpose:

The status of array includes Functional, Degraded and Offline. To ensure the high security and reliability of the data stored in array, you should take immediate and proper maintenance at arrays according their status.

- Functional: No disk loss in the array.
- Offline: The number of lost disks has exceeded the limit.
- Degraded: If amount of HDD fail in array, array degrades. You should recover it to Functional by array rebuilding.

8.2.1 Configure Hot Spare Disk

Purpose:

Hot spare disks are required for disk array automatic rebuilding.

Step 1 Go to Storage > RAID Setup > Physical Disk.

No.	Capacity	Array	Туре	Status	Model	Hot Spare	Task
1	1863.02GB	Array01	Array	Functional	ST2000VX000-1CU164		None
2	2794.52GB		Normal	Functional	ST3000VX000-9YW166	Z	None
5	1863.02GB	Array01	Array	Functional	ST2000VX000-1CU164	-	None
9	2794.52GB		Normal	Functional	ST3000VX000-1CU166	ß	None
10	1863.02GB	Array01	Array	Functional	ST2000VX000-1CU164	-	None

Figure 8-4 Physical Disk

Step 2 Click of an available HDD to set it as the hot spare disk.

8.2.2 Automatically Rebuild Array

Purpose:

The device can automatically rebuild degraded arrays with the hot spare disks.

Before you start:

Create hot spare disks. For details, refer to Chapter 8.2.1 Configure Hot Spare Disk.

Step 1 The device will automatically rebuild the degraded arrays with the hot spare disks. Go to **Storage > RAID Setup > Array** to view rebuilding progress.

:::	Recording Schedule											
<u>.</u>	Storage Device		No	Name	Free Space	Physical Disk	Hot Spare	Status	Level	Rebuild	Delete	Task
88	Raid Setup	\sim	1	Array01	3725/3725G	2 5 10		Degraded	RAID 5		×	Rebuild(Running) 0%
	Physical Disk											
	Firmware											

Figure 8-5 Array List

8.2.3 Manually Rebuild Array

Purpose:

If no hot spare disks are configured, rebuild the degraded array manually.

Before you start:

At least one available physical disk should exist for rebuilding the array.

Step 1 Go to Storage > RAID Setup > Array.

	Recording Schedule										
	Storage Device	No.	Name	Free Space	Physical Disk	Hot Spare	Status	Level	Rebuild	Delete	Task
88	Raid Setup	1	Array01	3725/3725G	2 5 10		Degraded	RAID 5		×	Rebuild(Running) 0%
	Physical Disk										
	Firmware										

Figure 8-6 Array List

Step 2 Click degraded array.

Rebuild Array			
Array Name	Array01		
RAID Level	RAID 5		
Array Disk	5 10		
Physical Disk	2 9		
		ОК	Cancel

Figure 8-7 Rebuild Array

- Step 3 Select the available physical disk.
- Step 4 Click OK.
- Step 5 Click **OK** on the pop up message box "Do not unplug the physical disk when it is under rebuilding".

8.3 Delete Array

Deleting array will delete all the data saved in it.

Step 1 Go to Storage > RAID Setup > Array.

:::	Recording Schedule											
e.	Storage Device		No.	Name	Free Space	Physical Disk	Hot Spare	Status	Level	Rebuild	Delete	Task
	Raid Setup	~	1	Array01	3725/3725G	5 10		Degraded	RAID 5		×	None
	Physical Disk											
	Firmware											

Figure 8-8 Array List

Step 2 Click \times of array to delete.



Figure 8-9 Attention

Step 3 Click Yes on the popup message box.

8.4 Check and Edit Firmware

Purpose:

You can view the information of the firmware and set the background task speed on the Firmware interface.

Step 1 Go to Storage > RAID Setup > Firmware.

	Recording Schedule	Version	1.1.0.0003
<u> </u>	Storage Device	Physical Disk Count	16
	Raid Setup ~	Array Count	16
	Physical Disk	Virtual Disk Count	0
	Array	RAID Level	0 1 5 6 10
		Hot Spare Type	Global Hot Spare
	Storage Mode	Support Rebuild	Yes
¢	Advanced	Background Task Speed	Medium Speed -

Figure 8-10 Firmware

Step 2 Optionally, set the **Background Task Speed**.

Step 3 Click Apply.

Chapter 9 File Management

9.1 Search and Export Human Pictures

9.1.1 Search Human Pictures

Purpose

Specify detailed conditions to search human pictures.

Before you start

Configure human body detection function for the cameras you want to search and export human pictures.

Step 1 Go to File Management > Human File.

Step 2 Click **Show More** and specify detailed conditions, including time, camera, people appearance, etc.

Time	Custom	•	2018-03-16 00:00:0	0	2018-03-16 23:59:	59 🛗
Camera	[All] Camera				•	
Gender	None	•	Tops Color	None	•	
Bicycle	None	•	Backpack	None	•	
Facial Expression	None	•	With Gauze Mask	None	•	

Figure 9-1 Advanced Search

Step 3 Click **Search** to display results. The matched files are displayed in thumbnail or list.

Step 4 Select **Target Picture** or **Source Picture** in menu bar to display related pictures only. Select **Video** or **Picture** to specify the file type.

- **Target Picture**: Display the search results of people close-up.
- **Source Picture**: Display the search results of original picture captured by camera.
- **Group**: Sort the search results by selected item.

9.1.2 Export Human Pictures

Purpose

Export files for backup purposes using USB device (USB flash drive, USB HDD, USB optical disc drive), SATA optical disc drive or eSATA HDD.

Step 1 Search for the human files to export. For details, see 9.1.1 Search Human Pictures.

Step 2 Click files and click Export.

Path Settings				\times
Device Name U	SB Flash Disk ′	1-1	* *	• 0
Name	Size	Туре	Edit Date	Delete
🗅 mobil		Folder	25-08-2017 16:24:4	42 ×
🗅 printscr		Folder	25-08-2017 16:24:4	42 ×
🗎 1-guo	6075.06KB	File	25-08-2017 20:32:1	14 ×
🗎 2-guo	6075.06KB	File	25-08-2017 21:08:5	56 ×
🗎 51-gu	6075.06KB	File	25-08-2017 21:17:5	52 ×
🗎 52-gu	6075.06KB	File	25-08-2017 21:18:0)4 ×
🗎 53-gu	6075.06KB	File	25-08-2017 21:18:1	18 ×
🗎 54-gu	6075.06KB	File	25-08-2017 21:18:2	28 ×
+ New Folder	谢 Format		Free Spa	ce 14.33GB
Backup type	MP4			
			ОК	Cancel

Figure 9-2 Export Files

Step 3 Click **OK** to export pictures to backup device.

9.2 Search and Export Vehicle Files

9.2.1 Search Vehicle Pictures

Purpose

Specify detailed conditions to search vehicle pictures.

Before you start

Configure vehicle detection function for the cameras you want to search and export vehicle pictures.

Step 1 Go to File Management > Vehicle Files.

Step 2 Click **Show More** and specify detailed conditions, including time, camera, vehicle appearance, etc.

Network Video Recorder User Manual

Target Picture	Source Picture	License PI			Today	-	All	Video	Picture	$\left\{ \begin{array}{c} \mathbf{Q} \end{array} \right\}$ Advanced
Time	Today	-								
Camera	[All] Camera				-					
Parent Brand	None	-	Plate No							
Vehicle Color	None	-	Vehicle Mode	None	-					
Area/Country	None	-								
					Empty Conditions	5	Search		ş	Save

Figure 9-3 Advanced Search

Step 3 Click Search to display results. The matched files are displayed in thumbnail or list.

Step 4 Select **Target Picture** or **Source Picture** in menu bar to display related pictures only. Select **Video** or **Picture** to specify the file type.

- **Target Picture**: Display the search results of vehicle close-up.
- **Source Picture**: Display the search results of original picture captured by camera.
- **Group**: Sort the search results by selected item.

9.2.2 Export Vehicle Pictures

Purpose

Export files for backup purposes using USB device (USB flash drive, USB HDD, USB optical disc drive), SATA optical disc drive or eSATA HDD.

Step 1 Search for the vehicle files to export. For details, see 9.2.1 Search Vehicle Pictures.

Step 2 Click files and click Export.

Path Settings				\times
Device Name U	SB Flash Disk ′	I-1	* * *	• 6
Name	Size	Туре	Edit Date	Delete
🗅 mobil		Folder	25-08-2017 16:24:4	2 ×
🗅 printscr		Folder	25-08-2017 16:24:42	2 ×
🗎 1-guo	6075.06KB	File	25-08-2017 20:32:14	4 ×
📄 2-guo	6075.06KB	File	25-08-2017 21:08:5	6 ×
🗎 51-gu	6075.06KB	File	25-08-2017 21:17:52	2 ×
📄 52-gu	6075.06KB	File	25-08-2017 21:18:04	4 ×
🗎 53-gu	6075.06KB	File	25-08-2017 21:18:10	в ×
🗎 54-gu	6075.06KB	File	25-08-2017 21:18:28	8 ×
+ New Folder	Format		Free Spac	e 14.33GB
Backup type	MP4			
			ОК	Cancel

Figure 9-4 Export Files

Click OK to export pictures to backup device.

9.3 Search History Operation

9.3.1 Save Search Condition

Purpose:

You can save the search conditions for future reference and quick search.

Step 1 Go to File Management > All Files/Human File/Vehicle File.

Step 2 Click **Show More** and set the search conditions.

- Step 3 Click Save.
- Step 4 Enter a name in text field and click **Finished**. The saved search conditions will be displayed in search history list.

9.3.2 Call Search History

Purpose:

You can quickly search files by calling search history.

Step 1 Go to File Management > All Files/Human File/Vehicle File.

Step 2 Click a created search conditon to quickly search files.

Chapter 10 Playback

10.1 Playing Video Files

10.1.1 Instant Playback

Instant Playback enables the device to play the recorded video files in last five minutes. If no video is found, it means there is no recording during the last five minutes.

Step 1 On the live view window of the selected camera, move the cursor to the window bottom to access the toolbar.



to start instant playback.



Figure 10-1 Playback Interface

10.1.2 Play Video

Step 1 Go to Playback.

Step 2 Select one or more cameras in the camera list.

Step 3 Select a date in the calendar.

Step 4 Click the play button on the toolbar to start playing the video.



Step 5 You can use the toolbar in the bottom part of playback interface to control the playing and realize a series of operations. Refer to Chapter 10.2 Playback Operations 8.2.

Figure 10-2 Playback Interface

	 Normal 	Important	Custom	Tag 🛑		2017-08-17	:02			1 Day	•••••
	. ' ' '	02:00	04:00	06:00 08:00	10:00	12:00	14:00	16:00	18:00	20:00	22:00 8-18
E		Ж	õ			⊲ (II)					0 10 🖽 23

Figure 10-3 Toolbar of Playback

Step 6 You can click the channel(s) to execute simultaneous playback of multiple channels.

The playing speed of 256X is supported.

10.1.3 Play Tag Files

Purpose:

Video tag allows you to record related information like people and location of a certain time point during playback. You can use video tag(s) to search for video files and position time point.

Before playing back by tag:

Manage Tag Files

Step 1 Go to Playback.

Step 2 Search and play back the video file(s).

Step 3 Click 🖉 to add the tag.

Step 4 Edit the tag information.

Max. 64 tags can be added to a single video file.

Play Tag Files

Step 1 Go to Playback.

Step 2 Click Tag button.

Step 3 Click **Custom Search** on the left bottom to enter the Search Condition interface.

Step 4 Click Smart Search on the top right corner.

Step 5 Enter the search conditions for the tag files, including the time and the tag keyword.

Time	Custom	- 201	7-08-01 00:00:00	2017-08-2	2 23:59:59	
Tag	А	File S	Status No	ne	-	
Event Type	None	•				
Tops Color	None	- Gend	ler No	ne	-	
Glasses	None	- Age	No	ne	-	
Backpack	None	- Bicyc	ile No	ne	-	
Parent Brand	None	- Plate	No			
Vehicle Color	None	- Vehic	le Mode No	ne	-	
Area/Country	None	•				
				Empty Condit	ions	
				Empty Condi	IUTIS	

Figure 10-4 Tag Search

Step 6 Click Search.

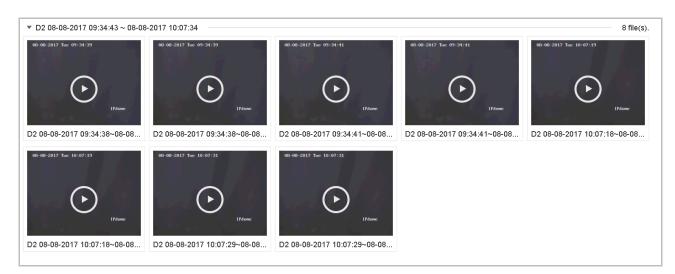


Figure 10-5 Searched Tag Files

Step 7 On the search results interface, select a tag file and click to start playing the video.



Figure 10-6 Tag Playback

10.1.4 Play by Smart Search

Purpose

In the smart playback mode, the device will analyze the video containing the motion, line or intrusion detection information, mark it with green color and play it in the normal speed. And the video without motion will be played in the 16X speed.

The smart playback rules and areas are configurable.

Step 1 Go to Playback.

Step 2 Start playing the video files by channel or by time.


Step 3 From the toolbar at the bottom of the playing window, click the motion/line crossing/ intrusion icon for search.



Figure 10-7 Playback by Smart Search

Step 4 Set the rules and areas for smart search of line crossing detection, intrusion detection or motion detection event triggered recording.

• Line Crossing Detection

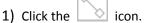


2) Click on the image to specify the start point and end point of the line.

Intrusion Detection

- 1) Click the licon.
- 2) Specify 4 points to set a quadrilateral region for intrusion detection. Only one region can be set.

Motion Detection

- 1) Click the icon.
- 2) Hold the mouse on the image to draw the detection area manually.

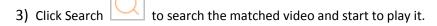

10.1.5 Play Event Files

Purpose

Play back video files on one or several channels searched by event type (e.g., alarm input, motion detection, line crossing detection, face detection, vehicle detection, etc.).


Step 1 Go to Playback.

- Step 2 Click **Custom Search** on the left bottom to enter the Search Condition interface.
- Step 3 Click Smart Search on the top right corner.
- Step 4 Enter the search conditions for the event files, e.g., time, event type, file status, people appearance (for face detection, human detection, etc.), vehicle information (for vehicle detection event).

							All	Video	Picture	Q Advanced
Time	Custom	•	2017-08-08 00:00:00		2017-08-22 23:59:5	9 🗎				
Тад			File Status	None	•					
Event Type	Face (Face Capture)	•								
Tops Color	Yellow	•	Gender	Male	-					
Glasses	All	Ŧ	Age	Middle-life	-					
Backpack	With Baggage	•	Bicycle	With Bicycle	•					
Parent Brand	ALL	•	Plate No							
Vehicle Color	White	•	Vehicle Mode	None	•					
Area/Country	None	•								
				E	mpty Conditions		Search		:	Save

Step 5 Click Search.

Step 6 On the search results interface, select an event video file/picture file and click to start playing the video or double click to play the picture.

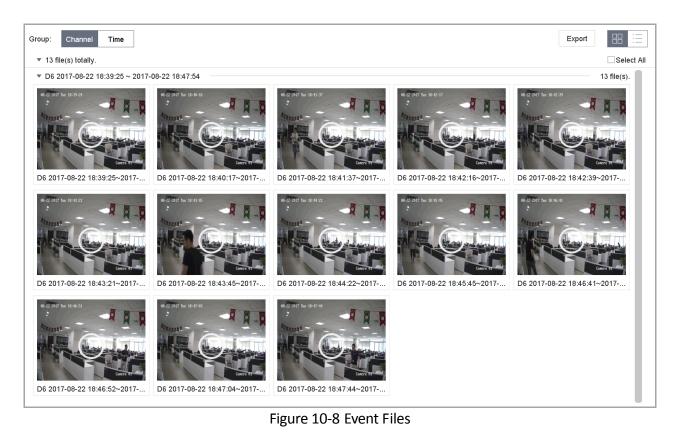

Step 7 You can click or button to select the previous or next event.



• Refer to Chapter 11

Event and Alarm Settings and Chapter 12 VCA Event Alarm for details for event and alarm settings.

• Refer to Chapter 7.7 Configure Event Triggered Recording for the event triggered recording/capture settings.

10.1.6 Play by Sub-periods

Purpose:

The video files can be played in multiple sub-periods simultaneously on the screens.

Step 1 Go to Playback.

- Step 2 Select **Sub-periods** from the drop-down list in the upper-left corner of the page to enter the Sub-periods Playback interface.
- Step 3 Select a date and start playing the video file. Select the Split-screen Number from the dropdown list. Up to 16 screens are configurable.

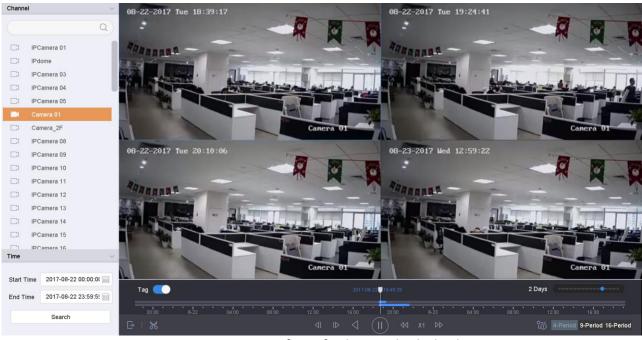


Figure 10-9 Interface of Sub-periods Playback

According to the defined number of split-screens, the video files on the selected date can be divided into average segments for playback. E.g., if there are video files existing between 16:00 and 22:00, and the 6-screen display mode is selected, then it can play the video files for 1 hour on each screen simultaneously.

10.1.7 Play Log Files

Purpose:

Play back record file(s) associated with channels after searching system logs.

Step 1 Go to Maintenance>Log Information.

Step 2 Click Log Search tab to enter Playback by System Logs.

Step 3 Set search time and type and click **Search**.

or T	ype Al	1	•						
or	Search Re	sult							Export A
	No	Major Type	Time	Minor Type	Parameter	Play	Details		
	103	Alarm	18-08-2017 07:07:31	Motion Detection	N/A		(!)		
_	104	Alarm	18-08-2017 07:07:43	Motion Detection	N/A	•	(!)		
	105	Alarm	18-08-2017 07:16:27	Motion Detection	N/A		(!)		
	106	Alarm	18-08-2017 07:16:37	Motion Detection	N/A	•	(!)		
	107	🖳 Inform	18-08-2017 07:17:19	System Running	N/A	-	(!)		
	108	enform	18-08-2017 07:17:19	System Running	N/A	-	()		
	109	🖳 Inform	18-08-2017 07:18:00	HDD S.M.A.R.T.	N/A	-	(!)		
	110	enform	18-08-2017 07:18:00	HDD S.M.A.R.T.	N/A		(!)		
	111	Inform	18-08-2017 07:27:20	System Running	N/A	-	()		
~	Total: 115	1 P: 2/12			<	$\langle \rangle \rangle$		Go	
2						Export	Back		
~ ;	Sudden Cha	ange of Sound li	ntensity Alarm Started						
	Sudden Cha	ange of Sound I	ntensity Alarm Stopped						

Figure 10-10 System Log Search Interface

Step 4 Choose a log with video file and click b to start playing the log file.

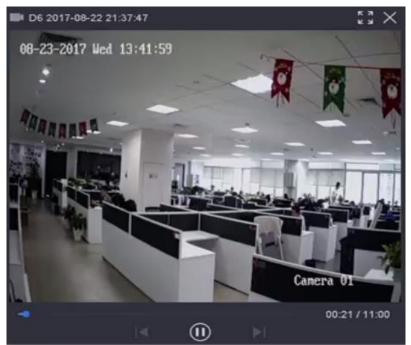


Figure 10-11 Interface of Playback by Log

10.1.8 Play External File

Purpose:

You can play files from the external storage devices.

Before You Start:

Connect the storage device with the video files to your device.

Step 1 Go to Playback.

Step 2 Click the 🔲 icon at the left bottom corner.

Step 3 Select and click the button or double click to play the file.

Network Video Recorder User Manual

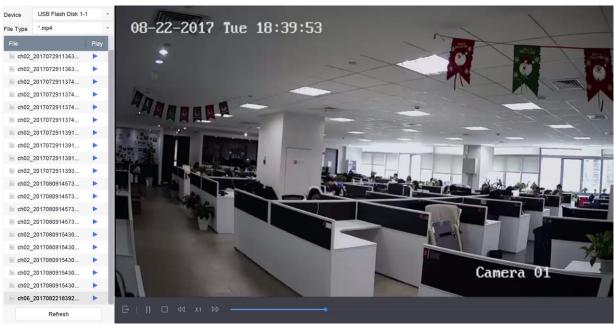


Figure 10-12 External File Playback

10.2 Playback Operations

10.2.1 Normal/Important/Custom Video

During the playback, you can select the following three modes to play the video.

Normal: video files from the continuous recording.

Important: video files from the event and alarm recording triggered recording.

Custom: video files searched by custom conditions.

10.2.2 Set Play Strategy in Important/Custom Mode

Purpose:

When you are in the important or custom video playback mode, you can set the playing speed separately for the normal video and the important/custom video, or you can select to skip the normal video.

In the Important/Custom video playback mode, click $\square \square$ to set the play strategy.

E.	
EO	

- When **Do not Play Normal Videos** is checked, the device will skip the normal video and play the important (event) video and the custom (searched video) only in the normal speed (X1).
- When **Do not Play Normal Videos** is unchecked, you can set the play speed for the normal video the important/custom video separately. The speed range is from X1 to XMAX.

You can set the speed in the single-channel play mode only.

Play Strategy				
Do not Play Normal Videos				
Normal Video	• • • • • • • •	X16		
Play Speed of Important/Custo X1				
You can only set the speed in	OK	Cancel		

Figure 10-13 Play Strategy

10.2.3 Edit Video Clips

You can take video clips during the playback and export the clips.

- In the video playback mode, click it is start video clipping operation.
 - Set the start time and end time of the video clipping.
 - Export the video clips to the local storage device.

10.2.4 Switch between Main Stream and Sub-Stream

You can switch between the main stream and the sub-stream during the playback.



Play the video in main stream.



The encoding parameters for the main stream and sub-stream can be configured in **Storage** > **Encoding Parameters**.

10.2.5 Thumbnails View

With the thumbnails view on the playback interface, you can conveniently locate the required video files on the time bar.

In the video playback mode, move the mouse to the time bar to get the preview thumbnails of the video files.



Figure 10-14 Thumbnails View

You can select and double click on a required thumbnail to enter the full-screen playback.

The thumbnail view is supported only in the 1X single-camera playback mode.

10.2.6 Fisheye View

You can enter the fisheye expansion view during the video playback.

Click the Level to enter the fisheye expansion mode.

- **180° Panorama (**): Switch the live view image to the 180° panorama view.
- **360° Panorama (**): Switch the live view image to the 360° panorama view.
- **PTZ Expansion (**): The PTZ Expansion is the close-up view of some defined area in the fisheye view or panorama expansion, and it supports the electronic PTZ function, which is also called e-PTZ.
- **Radial Expansion (**): In the radial expansion mode, the whole wide-angle view of the fisheye camera is displayed. This view mode is called Fisheye View because it approximates the vision of a fish's convex eye. The lens produces curvilinear images of a large area, while distorting the perspective and angles of objects in the image.

10.2.7 Fast View

You can hold the mouse to drag on the time bar to get the fast view of the video files.

In the video playback mode, use the mouse to hold and drag through the playing time bar to fast view the video files.

Release the mouse to the required time point to enter the full-screen playback.

The fast view is supported only in the 1X single-camera playback mode.

10.2.8 Digital Zoom

In the video playback mode, click

 $\textcircled{\oplus}$ from the toolbar to enter the digital zoom interface.

You can move the sliding bar or scroll the mouse wheel to zoom in/out the image to different proportions (1 to16X).



Figure 10-15 Digital Zoom

10.2.9 POS Information Overlay

In the video playback mode, click to overlay the POS transaction information on the playback video.

When the playing speed is higher than 2X, the POS information cannot be overlain on the video.

Chapter 11 Event and Alarm Settings

11.1 Configure Arming Schedule

Step 1 Select the Arming Schedule tab.

Step 2 Choose one day of a week and set the time segment. Up to eight time periods can be set within each day.

Time periods shall not be repeated or overlapped.

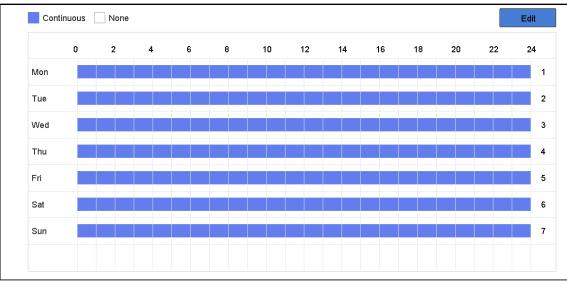


Figure 11-1 Set Arming Schedule

Step 3 (Optional) If you want to copy the same arming schedule of the current day to the other day (s) of the week or holiday, you can click the icon to copy arming schedule settings.

Step 4 Click **Apply** to save the settings.

11.2 Configure Alarm Linkage Actions

Purpose:

Alarm linkage actions will be activated when an alarm or exception occurs, including Event Hint Display, Full Screen Monitoring, Audible Warning (buzzer), Notify Surveillance Center, Trigger Alarm Output and Send Email.

Step 1 Click Linkage Action to set the alarm linkage actions.

	✓ Trigger Alarm Output	Trigger Channel			
✓ Full Screen Monitoring	⊡Local->1	D1			
Audible Warning	⊡Local->2	⊡D2			
✓ Notify Surveillance Cent	⊡Local->3 er				
	✓Local->4				
Send Email	☑10.15.2.250:8000->1				
Notice: please confirm the event output in "Live View" settings menu is the same with the real event output.					

Figure 11-2 Set Linkage Actions

Step 2 Select the normal linkage actions, trigger alarm output or trigger recording channel. For details, refer to Chapter 11.2.1 to 11.2.6.

Step 3 Click **Apply** to save the settings.

11.2.1 Configure Auto-Switch Full Screen Monitoring

When an alarm is triggered, the local monitor displays in full screen the video image from the alarming channel configured for full screen monitoring. And when the alarm is triggered simultaneously in several channels, you must configure the auto-switch dwell time.

Step 1 Go to System > Live View > General.

Step 2 Set the event output and dwell time.

- Event Output: Select the output to show event video.
- Full Screen Monitoring Dwell Time: Set the time in seconds to show alarm event screen. If alarms are triggered simultaneously in several channels, their full-screen images will be switched at an interval of 10 seconds (default dwell time).
- Step 3 Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).

Step 4 Select the Full Screen Monitoring alarm linkage action.

Step 5 Select the channel(s) in Trigger Channel settings you want to make full screen monitoring.

Auto-switch will terminate once the alarm stops and back to the live view interface.

11.2.2 Configure Audio Warning

The audio warning enables the system to trigger an audible *beep* when an alarm is detected.

Step 1 Go to System > Live View > General.

Step 2 Enable the audio output and set the volume.

- Step 3 Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).
- Step 4 Select the Audio Warning alarm linkage action.

11.2.3 Notify Surveillance Center

The device can send an exception or alarm signal to the remote alarm host when an event occurs. The alarm host refers to the PC installed with client software (e.g., iVMS-4200, iVMS-5200).

Step 1 Go to System > Network > Advanced > More Settings.

- Step 2 Set the alarm host IP and alarm host port.
- Step 3 Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).

Step 4 Select the Notify Surveillance Center.

11.2.4 Configure Email Linkage

The system can send an email with alarm information to a user or users when an alarm is detected.

Please refer to Chapter 16.7 Configure Email for details of Email configuration.

Step 1 Go to System > Network > Advanced.

Step 2 Configure the Email settings.

Step 3 Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).

Step 4 Select the Send Email alarm linkage action.

11.2.5 Trigger Alarm Output

The alarm output can be triggered by the alarm input, motion detection, video tampering detection, face detection, line crossing detection, and all other events.

- Step 1 Go to the **Linkage Action** interface of the alarm input or event detection (e.g., motion detection, face detection, line crossing detection, intrusion detection, etc.).
- Step 2 Click the Trigger Alarm Output tab.
- Step 3 Select the alarm output (s) to trigger.
- Step 4 Go to System > Event > Normal Event > Alarm Output.

Step 5 Select an alarm output item from the list.

Refer to Chapter 11.6.3 Configure Alarm Output for the alarm output settings.

11.2.6 Configure PTZ Linkage

The system can trigger the PTZ actions (e.g., call preset/patrol/pattern) when the alarm event, or VCA detection events occur.

Make sure the PTZ or speed dome connected supports PTZ linkage.

- Step 1 Go to the **Linkage Action** interface of the alarm input or VCA detection (e.g., face detection, line crossing detection, intrusion detection, etc.).
- Step 2 Select the PTZ Linkage.
- Step 3 Select the camera to perform the PTZ actions.
- Step 4 Select the preset/patrol/pattern No. to call when the alarm events occur.

PTZ Linkage		
PTZ Linkage	[D1] IPCamera 01	•
• Preset No.	5	•
OPatrol No.	1	-
OPattern No.	1	-

Figure 11-3 PTZ Linkage



You can set one PTZ type only for the linkage action each time.

11.3 Configure Motion Detection Alarm

The motion detection enables the device to detect the moving objects in the monitoring area and trigger the alarm.

Step 1 Go to System> Event>Normal Event>Motion Detection.

Camera	[D2] IPdome -
\checkmark	Enable
Area Arming	g Schedule Linkage Action
	Sensitivity 0 100 60
Full Screen	n Clear
	Apply

Figure 11-4 Set Motion Detection

Step 2 Select the camera to configure the motion detection.

Step 3 Check Enable.

Step 4 Set the motion detection area.

- Full screen: click to set the full-screen motion detection for the image.
- Customized area: use the mouse to click and drag on the preview screen to draw the customized motion detection area (s).

You can click **Clear** to clear the current motion detection area settings and draw again.

Step 5 Set sensitivity (0-100). The sensitivity allows you to calibrate how readily movement triggers the alarm. The higher value results in the more readily to trigger the motion detection.

Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

11.4 Configure Video Loss Alarm

Purpose:

The video loss detection enables to detect video loss of a channel and take alarm response action(s).

Step 1 Go to System> Event>Normal Event>Video Loss

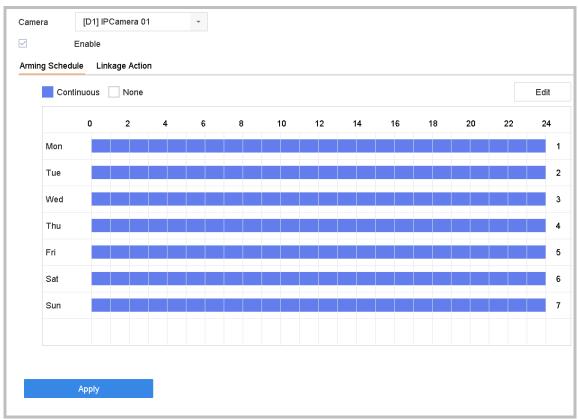


Figure 11-5 Set Video Loss Detection

- Step 2 Select the camera to configure the video loss detection.
- Step 3 Check Enable.
- Step 4 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.
- Step 5 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

11.5 Configure Video Tampering Alarm

Purpose:

The video tampering detection enables to trigger alarm when the camera lens is covered and take alarm response action(s).

Step 1 Go to System> Event>Normal Event>Video Tampering.

Step 2 Select the camera to configure the video tampering detection.

Camera [D2] IPdome -	
✓ Enable	
Area Arming Schedule Linkage Action	
	Sensitivity 0 2 1
Clear	
Apply	

Figure 11-6 Set Video Tampering Setting

Step 3 Check Enable.

Step 4 Set the video tampering area. Use the mouse to click and drag on the preview screen to draw the customized video tampering area.

You can click Clear to clear the current area settings and draw again.

- Step 5 Set sensitivity level (0-2). 3 levels are available. The sensitivity allows you to calibrate how readily movement triggers the alarm. The higher value results in the more readily to trigger the video tampering detection.
- Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.
- Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

11.6 Configure Sensor Alarms

Purpose:

Set the handling action of an external sensor alarm.

11.6.1 Configure Alarm Input

Step 1 Go to System> Event>Normal Event>Alarm Input

Step 2 Select an alarm input item from the list and click

Edit			×
Alarm Input No. Local<-1	- Туре	N.0 -	
Alarm Name A			
Settings O Nonuse O Inp	• One-Key Dis		
✓ Normal Linkage			
Full Screen Monitori	Audible Warning	✓ Notify Surveillance	
☑ Trigger Alarm Output	Send Email		
		Copy to	Apply
		Соруто	Apply

Figure 11-7 Alarm Input

Step 3 Select the alarm input type to N.C or N.O.

Step 4 Edit the alarm name.

Step 5 Check the radio button of Input.

Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

11.6.2 Configure One-Key Disarming

The one-key disarming enables the device to disarm the alarm input 1 by one-key operation.

Step 1 Go to System> Event>Normal Event>Alarm Input

Step 2 Select the alarm input1 item from the list and click

- Step 3 Select the alarm input type to N.C or N.O.
- Step 4 Edit the alarm name.
- Step 5 Check the radio button of Enable One-Key Disarming.

Edit			×
Alarm Input No. Local<-1	туре	N.0 -	
Alarm Name A			
Settings ONonuse	Input One-Key Dis		
Normal Linkage			
Full Screen Monitori	Audible Warning	✓ Notify Surveillance	
☑ Trigger Alarm Output	Send Email		
		Copy to	Apply

Figure 11-8 One-Key Alarm Disarming

Step 6 Select the alarm linkage action (s) you want to disarm for the local alarm input1.

When the alarm input 1 (Local<-1) is enabled with one-key disarming, the other alarm input settings are not configurable.

Step 7 Click **Apply** to save the settings.

11.6.3 Configure Alarm Output

Trigger an alarm output when an alarm is triggered.

Step 1 Go to System> Event>Normal Event>Alarm Output.

Step 2 Select an alarm output item from the list and click

Step 3 Edit the alarm name.

Step 4 Select the dwell time (the alarm duration) from 5s to 600s, or Manually Clear.

Manually Clear: you should manually clear the alarm when the alarm occurs. Refer to Chapter 11.8 Trigger or Clear Alarm Output Manually for detailed instructions.

Step 5 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

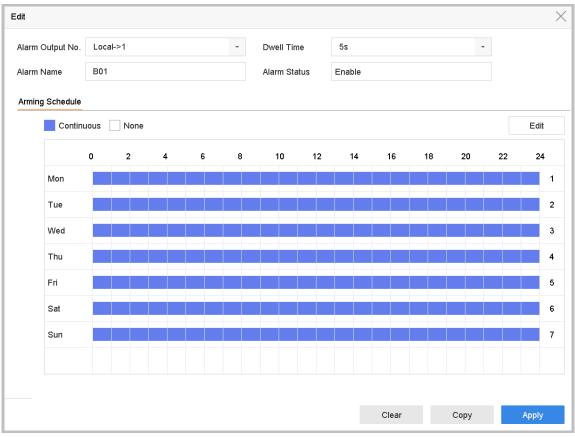


Figure 11-9 Alarm Output

Step 1 (Optional) You can click **Copy** to copy the same settings to other alarm output (s).

11.7 Configure Exceptions Alarm

The exception events can be configured to take the event hint in the live view window, trigger alarm output and linkage actions.

Step 1 Go to System> Event>Normal Event>Exception.

Step 2 (Optional) Enable the event hint if you want to display the event hint in the live view window.

- 1) Check the checkbox of Enable Event Hint.
- 2) Click to select the exception type (s) to take the event hint.

Event Hint Settings		
All		
Network Disconnected		
⊡IP Conflicted		
⊡lllegal Login		
⊡Video Signal Loss		
⊡Alarm Input Triggered		
⊡Video Tamper Detected		
—		
	ОК	Cancel

Figure 11-10 Event Hint Settings

Step 3 Select the excetion type from the drop-down list to set the linkage actions.

Event Hint Config Exception Type HDD Full Normal Linkage Audible Warning Audible Warning Notify Surveillance Center Send Email	Event Hint Config Exception Type HDD Full Normal Linkage Audible Warning Notify Surveillance Center HDD Full Trigger Alarm Output Local->1 Local->2 Local->3 Local->4		
Normal Linkage Trigger Alarm Output Audible Warning Local->1 Local->2 Local->3 Send Email Local->4	Exception Type HDD Full - Normal Linkage Trigger Alarm Output Audible Warning Local->1 Local->2 Notify Surveillance Center Send Email Local->4	Enable Event Hint 🗹	
Normal Linkage Trigger Alarm Output Audible Warning Local->1 Local->2 Local->3 Send Email Local->4	✓ Normal Linkage □ Trigger Alarm Output ✓ Audible Warning ✓ Local->1 ✓ Local->2 ✓ Local->2 ✓ Notify Surveillance Center □ Local->3 ✓ Send Email □ Local->4	Event Hint Config	
 ✓ Audible Warning ✓ Local->1 ✓ Local->2 ✓ Notify Surveillance Center ✓ Local->3 ✓ Send Email 	 ✓ Audible Warning ✓ Local->1 ✓ Local->2 ✓ Notify Surveillance Center ✓ Local->3 ✓ Send Email 	Exception Type HDD Fu	II -
 ✓ Audible Warning ✓ Local->2 ✓ Notify Surveillance Center ✓ Local->3 ✓ Send Email 	 ✓ Audible Warning ✓ Local->2 ✓ Notify Surveillance Center ✓ Local->3 ✓ Send Email 	☑ Normal Linkage	Trigger Alarm Output
 ☑ Notify Surveillance Center □Local->3 ☑ Send Email 	 ✓ Notify Surveillance Center □Local->3 ✓ Send Email □Local->4 	✓ Audible Warning	
✓ Send Email	✓ Send Email	☑ Notify Surveillance Center	
10.15.2.250:8000->1	□10.15.2.250:8000->1	Send Email	□Local->4
			10.15.2.250:8000->1
		Apply	
Apply	Apply		

Figure 11-11 Exceptions Handling

Step 4 Set the normal linkage and alarm output triggering. Refer to Chapter 10.2 Setting Alarm Linkage Actions.

11.8 Trigger or Clear Alarm Output Manually

Purpose:

Sensor alarm can be triggered or cleared manually. When the **Manually Clear** is selected for the dwell time of an alarm output, the alarm can be cleared only by clicking **Clear** button.

Step 1 Go to System> Event>Normal Event>Alarm Output.

Step 2 Select the alarm output you want to trigger or clear.

Step 3 Click Trigger/Clear to trigger or clear an alarm output.

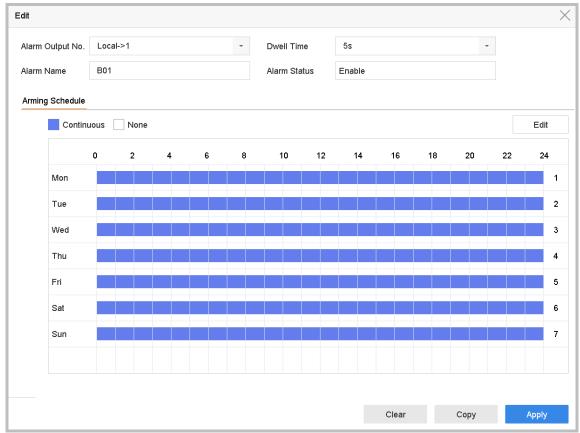


Figure 11-12 Alarm Output

Chapter 12 VCA Event Alarm

The device supports receiving the VCA detections sent by connected IP cameras. Enable and configure the VCA detection on the IP camera settings interface first.



- VCA detections must be supported by the connected IP camera.
- Refer to the User Manual of Network Camera for the detailed instructions for the VCA detection.

12.1 Face Detection

Purpose:

Face detection function detects the face appears in the surveillance scene. Linkage actions will be triggered when a human face is detected.

Step 1 Go to System > Event > Smart Event.





Figure 12-1 Face Detection

Step 3 Select a Camera to configure.

Step 4 Check Enable Face Detection.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of face detection.

- Step 6 Drag the **Sensitivity** slider to set the detection sensitivity. Sensitivity range: [1-5]. The higher the value is, the more easily the face can be detected.
- Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.2 Vehicle Detection

Purpose:

Vehicle Detection is available for the road traffic monitoring. In Vehicle Detection, the passed vehicle can be detected and the picture of its license plate can be captured. You can send alarm signal to notify the surveillance center and upload the captured picture to FTP server.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Vehicle.

Camera	[D1] IPCamera 01 - Save VCA Pi
	Enable Vehicle Detection
Area Settings	Arming Schedule Linkage Action Picture Overlay Content Blacklist and Whitelist
	Lane Num
	spply

Figure 12-2 Vehicle Detection

Step 3 Select a **Camera** to configure.

Step 4 Check Enable Vehicle Detection.

Step 5 Optionally, check Save VCA Picture to save the captured pictures of vehicle detection.

Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 8 Configure rules, including Area Settings, Picture, Overlay Content, and Blacklist and Whitelist. Area Settings: Up to 4 lanes are selectable.

Step 9 Click Save.

Refer to the User Manual of Network Camera for the detailed instructions for the vehicle detection.

12.3 Line Crossing Detection

Purpose:

Line crossing detection detects people, vehicles, and objects crossing a set virtual line. The detection direction can be set as bidirectional, from left to right or from right to left.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Line Crossing.

Enable Line	Crossing Detection					
Area Settings	Arming Schedule	Linkage Action				
Draw Area	Clear	A	Arming Area Direction Sensitivity	1 A<>B 1	• 100 50	

Figure 12-3 Line Crossing Detection

Step 3 Select a **Camera** to configure.

Step 4 Check Enable Line Crossing Detection checkbox.

Step 5 Optionally, check Save VCA Picture to save the captured pictures of line crossing detection.

Step 6 Follow the steps to set the line crossing detection rules and detection areas.

- 1) Select an Arming Region to configure. Up to 4 arming regions are selectable.
- 2) Select the Direction as A<->B, A->B, or A<-B.

A<->B: Only the arrow on the B side shows. When an object goes across the configured line with both direction can be detected and alarms are triggered.

A->B: Only the object crossing the configured line from the A side to the B side can be detected.

B->A: Only the object crossing the configured line from the B side to the A side can be detected.

- 3) Drag the Sensitivity slider to set the detection sensitivity. Sensitivity range: sensitivity. The higher the value is, the more easily the detection alarm can be triggered.
- 4) Click Draw Region and set two points in the preview window to draw a virtual line.

Step 1 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 2 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 3 Click Apply.

12.4 Intrusion Detection

Purpose:

Intrusion detection function detects people, vehicle or other objects which enter and loiter in a pre-defined virtual region, and some certain actions can be taken when the alarm is triggered.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Intrusion.

	usion Detection Arming Schedule	Linkage Action			
			Virtual Plane 1	•	
-			Time Thres1	10	5
10 10			Sensitivity 1	100	50
4		1	Percentage 0	0	0
		#1#			
1	the second second				
Draw Area	Clear				
	Apply				

Figure 12-4 Intrusion Detection

Step 3 Select a **Camera** to configure.

Step 4 Check Enable Intrusion Detection.

Step 5 Optionally, check Save VCA Picture to save the captured pictures of intrusion detection.

Step 6 Follow the steps to set the detection rules and detection areas.

- 1) Select a Virtual Panel to configure. Up to 4 virtual panels are selectable.
- 2) Drag the sliders to set Time Threshold, Sensitivity, and Percentage.

Time Threshold: The threshold for the time of the object loitering in the region. When the duration of the object in the defined detection area is longer than the threshold, device will trigger an alarm. Its range is [1s-10s].

Sensitivity: The size of the object that can trigger the alarm. The higher the value is, the more easily the detection alarm can be triggered. Its range is [1-100].

Percentage: The ratio of the in-region part of the object that can trigger the alarm. For example, if the percentage is 50%, when the object enters the region and occupies half of the whole region, device will trigger an alarm. Its range is [1-100].

3) Click Draw Region and draw a quadrilateral in the preview window by specifying four vertexes of the detection region.

Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click **Apply**.

12.5 Region Entrance Detection

Purpose:

Region entrance detection function detects objects that enter a pre-defined virtual region from the outside.

Step 1 Go to System Management > Event Settings > Smart Event.

Step 2 Click Region Entrance Detection.

Enable Region Entrance De				
Area Settings	Arming Schedule	Linkage Action		
		#1#	Arming Area 1 Sensitivity 0	0
Draw Area	Clear	-		

Figure 12-5 Region Entrance Detection

Step 3 Select a **Camera** to configure.

Step 4 Check Enable Region Entrance Detection.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of region entrance detection.

Step 6 Follow the steps to set the detection rules and detection areas.

- 1) Select an Arming Region to configure. Up to 4 regions are selectable.
- 2) Drag the sliders to set Sensitivity.

Sensitivity: The higher the value is, the more easily the detection alarm can be triggered. Its range is [0-100].

3) Click **Draw Region** and draw a quadrilateral in the preview window by specifying four vertexes of the detection region.

Step 7 Configure Arming Schedule and Linkage Action.

Step 8 Click Apply.

12.6 Region Exiting Detection

Purpose:

Region exiting detection function detects objects that exit from a pre-defined virtual region.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Region Exiting.

Enable Region Exiting Dete						
Area Settings	Arming Schedule	Linkage Action				
			Arming Area	1	*	
			Sensitivity	0	0	0
Draw Area	Clear					
	Apply					

Figure 12-6 Region Exiting Detection

Step 3 Select a Camera to configure.

Step 4 Check Enable Region Exiting Detection.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of region exiting detection.

Step 6 Follow the steps to set the detection rules and detection areas.

- 1) Select an Arming Region to configure. Up to 4 regions are selectable.
- 2) Drag the sliders to set Sensitivity.

Sensitivity: The higher the value is, the more easily the detection alarm can be triggered. Its range is [0-100].

3) Click Draw Region and draw a quadrilateral in the preview window by specifying four vertexes of the detection region.

Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.7 Unattended Baggage Detection

Purpose:

Unattended baggage detection function detects the objects left over in the pre-defined region such as the baggage, purse, dangerous materials, etc., and a series of actions can be taken when the alarm is triggered.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Unattended Baggage.

Camera	[D1] IPCamera 01 ~	Save VCA Pi
	Enable Unattended Baggag	
Area Settings A	rming Schedule Linkage Action	
Draw Area	Clear	Arming Area
Apj	bly	

Figure 12-7 Unattended Baggage Detection

Step 3 Select a Camera to configure.

Step 4 Check Enable Unattended Baggage Detection.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of unattended baggage detection.

Step 6 Follow the steps to set the detection rules and detection areas.

- 1) Select an Arming Region to configure. Up to 4 regions are selectable.
- 2) Drag the sliders to set Time Threshold and Sensitivity.

Time Threshold: The time of the objects left over in the region. If the value is 10, alarm is triggered after the object is left and stayed in the region for 10s. Its range is [5s-20s].

Sensitivity: Similarity degree of the background image. The higher the value is, the more easily the detection alarm can be triggered.

3) Click **Draw Region** and draw a quadrilateral in the preview window by specifying four vertexes of the detection region.

Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.8 Object Removal Detection

Purpose:

Object removal detection function detects the objects removed from the pre-defined region, such as the exhibits on display, and a series of actions can be taken when the alarm is triggered.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Object Removable.

Camera	[D1] IPCamera 01 · Save VCA Pl
	Enable Object Removal Det
Area Settings	Arming Schedule Linkage Action
	Arning Area
Draw Area	Clear

Figure 12-8 Object Removal Detection

Step 3 Select a Camera to configure.

Step 4 Check Enable Object Removable Detection.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of object removable detection.

Step 6 Follow the steps to set the detection rules and detection areas.

- 1) Select an Arming Region to configure. Up to 4 regions are selectable.
- 2) Drag the sliders to set Time Threshold and Sensitivity.

Time Threshold: The time of the objects removed from the region. If the value is 10, alarm is triggered after the object disappeared from the region for 10s. Its range is [5s-20s].

Sensitivity: The similarity degree of the background image. Usually, when the sensitivity is high, a very small object taken from the region can trigger the alarm.

3) Click **Draw Region** and draw a quadrilateral in the preview window by specifying four vertexes of the detection region.

Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.9 Audio Exception Detection

Purpose:

Audio exception detection detects the abnormal sounds in the surveillance scene, such as the sudden increase/decrease of the sound intensity.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Audio Exception.

Face Detection	Vehicle Defocus	Line Crossing Sudden Scene	Intrusion PIR Alarm	Region Entrance	Region Exiting	Unattended Ba)	Object Removal
Camera	[D1] IPCamera 01		- Save VCA Pi				
Exception Detection	Arming Schedule	Linkage Action					
Audio Loss Exc	ception						
Sudden Increas	se of Sound Intens						
Sensitivity 1 💳	0	1 00 50					
Sound Int 1 💻	0	100 50					
Sudden Decrea	ase of Sound Inten						
Sensitivity 1 💳	0	- 100 50					
Apply	/						

Network Video Recorder User Manual

Figure 12-9 Audio Exception Detection

- Step 3 Select a **Camera** to configure.
- Step 4 Optionally, check **Save VCA Picture** to save the captured pictures of audio exception detection.
- Step 5 Follow the steps to set the detection rules.
 - 1) Select the Exception Detection tab.
 - 2) Check the checkboxes of Audio Loss Exception, Sudden Increase of Sound Intensity Detection, or Sudden Decrease of Sound Intensity Detection.

Audio Loss Exception: Detects the sound steep rise in the surveillance scene. You can set the detection sensitivity and threshold for sound steep rise. You need to configure its Sensitivity and Sound Intensity Threshold.

Sensitivity: The smaller the value is, the more severe the change should be to trigger the detection. Range [1-100].

Sound Intensity Threshold: It can filter the sound in the environment. The louder the environment sound, the higher the value should be. Adjust it according to the environment. Range [1-100].

Sudden Decrease of Sound Intensity Detection: Detects the sound steep drop in the surveillance scene. You need set the detection sensitivity [1-100].

Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 8 Click Apply.

12.10 Sudden Scene Change Detection

Purpose:

Scene change detection detects the change of surveillance environment affected by the external factors, such as the intentional rotation of the camera.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Sudden Scene Change.

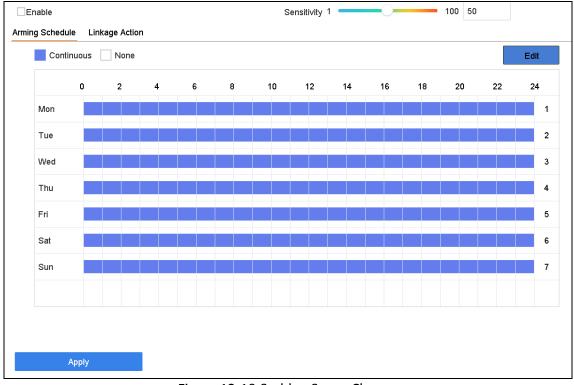


Figure 12-10 Sudden Scene Change

- Step 3 Select a **Camera** to configure.
- Step 4 Check Enable Sudden Scene Change Detection.
- Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of sudden scene change detection.
- Step 6 Drag the **Sensitivity** slider to set the detection sensitivity. Sensitivity range: [1-100]. The higher the value is, the more easily the change of scene can trigger the alarm.
- Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.
- Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.
- Step 9 Click Apply.

12.11 Defocus Detection

Purpose:

The image blur caused by defocus of the lens can be detected.

Step 1 Go to System > Event > Smart Event.

Step 2 Click **Defocus**.

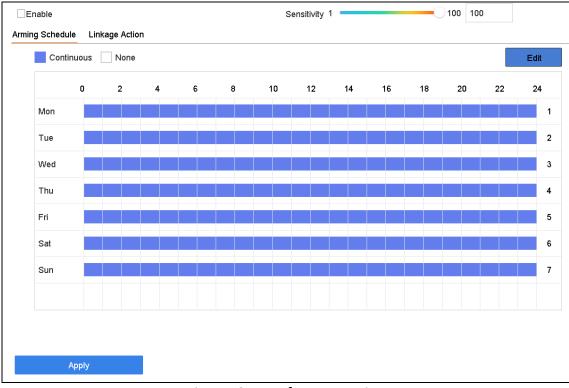


Figure 12-11 Defocus Detection

Step 3 Select a Camera to configure.

Step 4 Check Enable Defocus Detection.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of defocus detection.

- Step 6 Drag the **Sensitivity** slider to set the detection sensitivity. Sensitivity range: [1-100]. The higher the value is, the more easily the defocus image can be detected.
- Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.
- Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.12 PIR Alarm

Purpose:

A PIR (Passive Infrared) alarm is triggered when an intruder moves within the detector vision field. The heat energy dissipated by a person, or any other warm blooded creature such as dogs, cats, etc., can be detected.

Step 1 Go to System > Event > Smart Event.

Step 2 Click PIR Alarm.

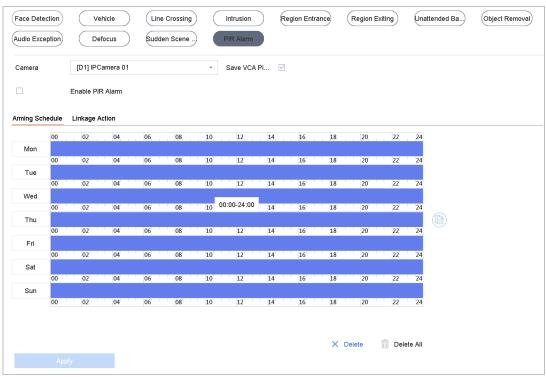


Figure 12-12 FIR Alarm

Step 3 Select a **Camera** to configure.

Step 4 Check PIR Alarm.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of PIR alarm.

Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 8 .Click Apply.

Chapter 13 Smart Analysis

With the configured VCA detection, the device supports the smart analysis for people counting and heat map.

13.1 Vehicle Search

Purpose:

You can search and view the matched vehicle pictures.

Step 1 Go to Smart Analysis > Smart Search > Vehicle Search.

Step 2 Select the IP camera for the vehicle search.

Step 3 Set search conditions.

arch by Appearance	•					
IP Channel	[All] Camera			•		
Time Segment	Today	•	2017-09-19 00:00:00		2017-09-19 23:59:59	
Vehicle Brand	All	•	Vehicle Color	All	-	
Vehicle Model	All	-	License Plate N			

Figure 13-1 Human Body Search

Step 4 Click Start Search.

13.2 Human Body Detection

Purpose:

You can search and view the matched human body pictures.

Step 1 Go to Smart Analysis > Smart Search > Human Body Search.

Step 2 Select the IP camera for the human body search.

Step 3 Set search conditions.

Step 4 Click Start Search.

13.3 People Counting

Purpose:

The feature is used to calculate the number of people entered or left a certain configured area and generate daily/weekly/monthly/annual reports for analysis.

Step 1 Go to Smart Analysis > Counting.

Step 2 Select the camera.

Step 3 Select the report type to Daily Report, Weekly Report, Monthly Report, or Annual Report.

Step 4 Set the **Date** to generate people counting graphic.

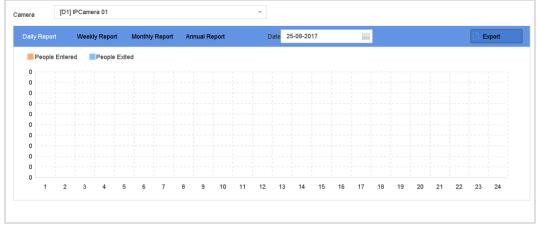


Figure 13-2 People Counting Interface

Step 5 (Optional) Click Export to export the report in excel format.

13.4 Heat Map

Purpose:

Heat map is a graphical representation of data. The heat map function is usually used to analyze how many people visited and stayed in a specified area.

The heat map function must be supported by the connected IP camera and the corresponding configuration must be set.

Step 1 Go to Smart Analysis > Heat Map.

Step 2 Select a camera.

Step 3 Select the report type as Daily Report, Weekly Report, Monthly Report, or Annual Report.

Step 4 Set the Data to analyze.

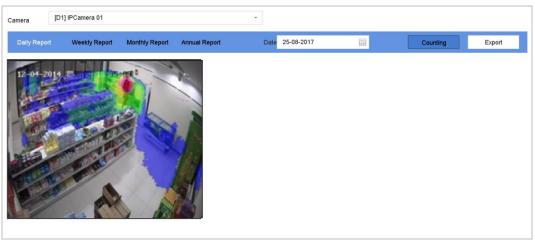


Figure 13-3 Heat Map Interface

Step 5 Click **Counting**. Then the results displayed in graphics marked in different colors will show.

As shown in the figure above, red color block (255, 0, 0) indicates the most visited area, and blue color block (0, 0, 255) indicates the less-popular area.

Step 6 (Optional) Click **Export** to export the statistics report in excel format.

Chapter 14 Face Picture Comparison

The device supports the face picture comparison alarm and face capture for the connected camera based on face recognition feature.

14.1 Face Picture Library Management

You can add the face picture library to the system and upload the face pictures for similarity comparison with the live captured face picture.

14.1.1 View Engine Status

Purpose

Smart analysis engine is applied to analyze false alarm and smart analysis task. Go to **Smart Analysis > Smart Analysis > Engine Configuration** to view the working status, usage rate, and applied channel of smart analysis engine.

14.1.2 Add a Face Picture Library

Step 1 Go to Smart Analysis > Face Picture Database.

		\perp
Step 2	Click	

Step 3 Enter library name and click **OK**.

Add Face Picture					
Name	Library01				
ОК		Cancel			

Figure 14-1 Add Face Picture

Related Operation:

You can click **Modify** or **Delete** to edit the library name or delete the library.

Up to 4 face picture libraries can be added.

14.1.3 Upload Face Pictures to the Library

Purpose:

Human face comparison is based on face pictures in the library. You can upload a single face picture or import multiple face pictures to the library.

- Up to 50,000 pictures can be uploaded to the libraries.
- The picture to upload must be in *.jpeg or .jpg* format.

Before you start:

Import pictures to upload to a backup device.

Upload Single Picture

Step 1 Select a face picture library in the list.

Step 2 Click Add.

Step 3 Select the picture to import and click Import.

Import Multiple Pictures

Step 1 Select a face picture library in the list.

Step 2 Click Import Face Picture Library.

Step 3 On the picture importing interface, select multiple picutures to import and click Import.

Related Operations

- Select pictures and click **Copy to** to copy the uploaded pictures of the current library to other library.
- Select a picture and click **Edit** to modify the picture information.
- Select a picture from the list and click **Delete** to delete the picture.
- Select a library and click **Export Face Picture Library** to export library to backup device.

14.2 Face Picture Comparison Alarm

14.2.1 Configure Face Picture Comparison

Purpose:

Compare detected human face with specified face picture library. Trigger alarm when comparison succeeded.

Step 1	Go to	System 3	> Event >	Smart	Event >	> Human	Face	Comparison.
Step 1	00.00	- System -		Sinure	Evene -	mannan	I ucc	companison.

Select Mode	Face Picture Comparison	Enable Face Picture Comparison				
Alarm Parameters	Arming Schedule Linkage Act	lion				
Comparison Fa	Compare failed	Upload to monitoring center when compariso				
Libr	rary Name	Edit Similarity				
test		ß				
Enable Alarm Output Pulse						

Figure 14-2 Human Face Comparison

Step 2 Select a camera to configure.

Step 3 Select Mode as Face Picture Comparison.

Step 4 Check the checkbox of Enable Face Picture Comparison.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of VCA detection. After the face picture comparison is enabled, the comparison results will be uploaded for face comparison alarm. If the comparison produced a match, both the real-time face picture and the target picture from the library will be uploaded. If no match is produced, the real-time face picture is uploaded to center only. Up to 6 connected cameras can be configured for face picture comparison simultaneously.

Step 6 Optionally, configure Comparison Failed Prompt, Upload to monitoring center when comparison failed, and Enable Alarm Output Pulse.

- **Comparison Failed Prompt**: The prompt will show in live view Target Detection (Face Detection) when human face comparison failed.
- Upload to monitoring center when comparison failed: Check it to upload the captured human face picture to monitoring center when human face comparison failed.

• Enable Alarm Output Pulse: If you want to trigger alarm output when comparison succeeded, check Enable Alarm Output Pulse before configuring trigger alarm output in Linkage Action interface.

Step 7 Select face picture libraries and set similarity.

Step 8 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 9 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 10 Click **Apply** to save the settings.

14.2.2 Configure Stranger Alarm

Purpose:

Compare detected human face with specified face picture library. Trigger alarm when comparison failed.

Step 1 Go to System > Event > Smart Event > Human Face Comparison.

Select Mode	Stranger	•	Enable Stranger
Alarm Parameters	Arming Schedule	Linkage Action	
Stranger Prompt	Stranger		Upload to monitoring center when compariso
Libr	ary Name		Edit Similarity
L test			Ľ
Enable Alarm O	utput Pulse		

Figure 14-3 Human Face Comparison

Step 2 Select a camera to configure.

- Step 3 Select Mode as Stranger Comparison.
- Step 4 Check the checkbox of Enable Stranger Comparison.
- Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of VCA detection. After the face picture comparison is enabled, the comparison results will be uploaded for face

comparison alarm. If the comparison produced a match, both the real-time face picture and the target picture from the library will be uploaded. If no match is produced, the real-time face picture is uploaded to center only.

Step 6 Optionally, configure Stranger Prompt, Upload to monitoring center when comparison succeeded, and Enable Alarm Output Pulse.

- **Stranger Prompt**: The prompt will show in live view Target Detection (Face Detection) when human face comparison failed.
- **Upload to monitoring center when comparison failed:** Check it to upload the captured human face picture to monitoring center when human face comparison failed.
- Enable Alarm Output Pulse: If you want to trigger alarm output when comparison succeeded, check Enable Alarm Output Pulse before configuring trigger alarm output in Linkage Action interface.

Step 7 Select face picture libraries and set similarity.

Step 8 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 9 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 10 Click Apply to save the settings.

14.3 Face Picture Retrieval

14.3.1 Search by Face Picture Comparison Event

Purpose:

Search face picture by face picture comparison results.

Step 1 Go to Smart Analysis > Smart Search > Face Search > Search by Event.

Step 2 Set the start time and end time of the face pictures to search.

Step 3 Select IP channel.

Step 4 Select Event Type as Face Picture Comparison.

Step 5 Click Start Search. The matched results are displayed on the pictures list.

14.3.2 Search by Uploaded Picture

Purpose:

You can search the face pictures by uploaded picture.

Step 1 Go to Smart Analysis > Smart Search > Face Search > Search by Picture.

Step 2 Select IP channel.

Step 3 Click Upload Sample from Local and select face pictures from your local directory for search.

Or you can click **Upload Sample from Face Picture Database** and select face pictures from created face picture libraries.

- Step 4 Set the start time and end time of the face pictures to search.
- Step 5 Set the **Similarity** value (range: 0 to 100). Device will analyze the similarity between samples and face pictures in library and show pictures the similarity of which are higher than the set one.

Step 6 Click Start Search.

14.3.3 Search by Personal Name

Purpose:

Search face picture by personal name.

Step 1 Go to Smart Analysis > Smart Search > Face Search > Search by Name.

Step 2 Set the start time and end time of the face pictures to search.

Step 3 Select IP channel.

Step 4 Enter Name to search.

Step 5 Click Start Search.

14.4 Export Face Pictures

Step 1 Go to Control Panel > Face Retrieval via iVMS-4200.



For the first-time use, click Satistics and check the Face Retrieval module to add it on the control panel.

Step 2 Set search conditions.

Step 3 Click **Search to** show the face picture comparison results.

Step 4 Click Export Picture.

Step 5 Select the picture (s) from the list, or click **Select All** to select all pictures.

Step 6 Click **Export Picture** to export the selected picture (s) to the local directory.

Chapter 15 POS Configuration

The device can be connected with the POS machine/server, and receive the transaction message for overlay on the image during the live view or playback, as well as trigger the POS event alarm.

15.1 Configure POS Settings

15.1.1 Configure POS Connection

Step 1 Go to System > POS Settings.

Step 2 Click Add to enter the POS adding interface.

Step 3 Select a POS from the drop-down list.

Step 4 Check Enable.

The amount of POS devices supported for each device is the half of its channel amount, e.g., 8 POS devices are supported for the DS-9616NI-I8 model.

Enable POS Name POS 3 - POS Protocol AVE - Custom Connection Mode Sniff - Parameters	Add POS					
POS Protocol AVE - Custom Connection Mode Sniff - Parameters	Enable			POS Name	POS 3	•
	POS Protocol	AVE	- Custom	Connection Mode	Sniff	- Parameters

Figure 15-1 POS Settings

Step 5 Select the POS protocol to Universal Protocol, EPSON, AVE or NUCLEUS.



When the new protocol is selected, you should reboot the device to activate the new settings.

Universal Protocol

Click the **Advanced** button to expand more settings when selecting the universal protocol. You can set the start line identifier, line break tag and end line tag for the POS overlay characters, and the case-sensitive property of the characters. You can also optionally check the filtering identifier and the XML protocol.

Start Line Identifier Hex Line Break 0D0A Hex Imount End Line Identifier Hex Case Sensitive Imount Filtering Identifier Imount Enable XML Prot OK Cancel				
Line Break 0D0A Hex ✓ End Line Identifier Hex ✓ Case Sensitive ✓ Filtering Identifier ✓ Enable XML Prot✓				
End Line Identifier Hex Case Sensitive Filtering Identifier Enable XML Prot	Start Line Identifier		Hex	\checkmark
Case Sensitive Filtering Identifier Enable XML Prot	Line Break	0D0A	Hex	\checkmark
Filtering Identifier	End Line Identifier		Hex	\checkmark
Enable XML Prot	Case Sensitive	\checkmark		
	Filtering Identifier	\checkmark		
OK Cancel	Enable XML Prot			
OK Cancel				
		ОК	Cancel	

Figure 15-2 Universal Protocol Settings

• EPSON

The fixed start and end line tag are used for EPSON protocol.

• AVE

The fixed start and end line tag are used for AVE protocol. And the serial port and virtual serial port connection types are supported.

- 1) Click the **Custom** to configure the AVE settings.
- 2) Se the rule to VSI-ADD or VNET.
- 3) Set the address bit of the POS message to send.
- 4) Click **OK** to save the settings.

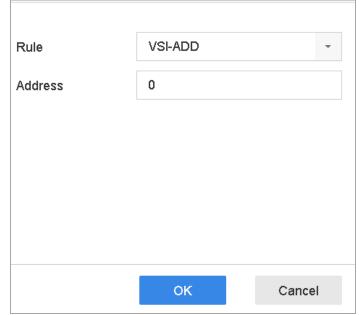


Figure 15-3 AVE Settings

- NUCLEUS
 - 1) Click the **Custom** to configure the NUCLEUS settings.
 - 2) Enter the employee No. shift No. and the terminal No. in the field. The matching message sent from the POS device will be used as the valid POS data.



The NUCLEUS protocol must be used in the RS-232 connection communication.

Step 6 Select the connection mode to TCP Reception, UDP Reception, Multicast, RS-232, USB-to-RS-232 or Sniff, and click **Parameters** to configure the parameters for each connection mode.

- TCP Connection
 - 1) When using TCP connection, the port must be set from 1 to 65535, and the port for each POS machine must be unique.
 - 2) Set the Allowed Remote IP Address of the device sending the POS message.

TCP Connection Setti	ngs			
Port	10010			
Allowed Remote IP A	192 . 0	. 0	. 64	
			OK	Cancel

Figure 15-4 TCP Connection Settings

- UDP Connection
 - 1) When using UDP connection, the port must be set from 1 to 65535, and the port for each POS machine must be unique.
 - 2) Set the Allowed Remote IP Address of the device sending the POS message.
- USB-to-RS-232 Connection

Configure the port parameters of USB-to-RS-232 convertor, including the serial number of port, baud rate, data bit, stop bit, parity and flow ctrl.

Network	Video	Recorder	User	Manual
I VCLWOIK	VIUCO	necoraci	Ober	wianuai

USB-to-RS-232 Setting	js				
Serial Port Number	1				•
Baud Rate	4800				•
Data Bit	5				•
Stop Bit	1				•
Parity	None				•
Flow Ctrl	None				•
		ОК	с	ancel	

Figure 15-5 USB-to-RS-232 Settings

• RS-232 Connection

Connect the device and the POS machine via RS-232. The RS-232 settings can be configured in Menu>Configuration>RS-232. The Usage must be set to Transparent Channel.

Multicast Connection

When connecting the device and the POS machine via Multicast protocol, set the multicast address and port.

• Sniff Connection

Connect the device and the POS machine via Sniff. Configure the source address and destination address settings.

Sniff Settings	
Enable Source Port F.	
Source Address	18 . 16 . 1 . 1
Source Port	10020
Enable Destination A	
Enable Destination P	. 🗹
Destination Address	20 . 18 . 1 . 24
Destination Port	10030
	OK Cancel

Figure 15-6 Sniff Settings

15.1.2 Configure POS Tex Overlay

Step 1 Go to System > POS Settings.

Step 2 Click Channel Linkage and Display tab.

Step 3 Select the linked channel to overlay the POS characters.

Step 4 Set the characters overlay for the enabled POS.

- Character encoding format: currently the Latin-1 format is available.
- Overlay mode of the characters to display in scrolling or page mode.
- Font size and font color.
- Display time (sec) of the characters. The value ranges 5 -3600 sec.
- Timeout of POS event. The value ranges 5 -3600 sec. When the device has not received the POS message over the defined time, the transaction is finished.
- Step 5 In the **Privacy Settings**, set the POS privacy information to not display on the image, e.g., the card number, or the user name, etc.

Result: The defined privacy information will be displayed in ***on the image instead.

Step 6 (optional) Check the checkbox to enable the **Overlay POS in Live View**. When this feature is enabled, the POS information can be overlain on the live view image.

	Linked Channel	[D1] IPCan	nera 01	-
	Character Encod	Latin-1(iso	-8859-1)	
Peter fish Peter fish Peter fish	Overlay Mode	Page		
	Font Size	Large	Medium	Small
	Font Color			
	Display for	30		
	Timeout	5		
	Privacy Settings	1634	0921	543
		For example, the e	ntered card number w	ill be shown as **
	Overlay POS in	\checkmark		

Figure 15-7 Overlay Character Settings

You can adjust the size and position of textbox on the preview screen of POS settings interface by dragging the frame.

Step 7 Click **Apply** to activate the settings.

15.2 ConfigurePOS Alarm

Purpose:

The POS event can trigger channels to start recording, or trigger full screen monitoring, audio warning, notifying the surveillance center, sending email and so on.

Step 1 Go to Storage > Recording Schedule.

Step 2 Set the arming schedule of the POS event.

Step 3 Go to System > POS Settings.

- Step 4 On the POS adding or editing interface, click the **Event Linkage** tab.
- Step 5 Select the normal linkage actions: full screen monitoring, audio warning or send Email.
- Step 6 Select one or more alarm output (s) to trigger.
- Step 7 Select one or more channels to record or become full-screen monitoring when POS alarm is triggered.

Normal Linkage	Trigger Alarm Output	Trigger Channel	
✓Full Screen Monitoring	⊡Local->1	⊡ D1	
☑ Audible Warning	Local->2	☑ D2	
✓Send Email	✓Local->3	D3	
	Local->4	D4	
	10.15.2.250:8000->1		
otice: please confirm the ev	ent output in "Live View" settings m	ienu is the same with the rea	l event output.

Figure 15-8 Set Trigger Cameras of POS

Step 8 Click Apply to save the settings.

Chapter 16 Network Settings

16.1 Configure TCP/IP Settings

Purpose

TCP/IP settings must be properly configured before you can operate the device over network.

16.1.1 Device with Dual Network Interface

Step 1 Go to System > Network > TCP/IP.

Working Mode	Net Fault-Tolerance -		
Select NIC	bond0 ~		
NIC Type	10M/100M/1000M Self-adap		
Enable DHCP		Enable Obtain DNS	
IPv4 Address	10 . 15 . 2 . 107	Preferred DNS Server	
IPv4 Subnet Mask	255 . 255 . 255 . 0	Alternate DNS Server	
IPv4 Default Gateway	10 . 15 . 2 . 254		
MAC Address	a4:14:37:aa:09:a3		
MTU(Bytes)	1500		
Main NIC	LAN1 -		

Figure 16-1 TCP/IP Settings

Step 2 Select Net-Fault Tolerance or Multi-Address Mode under Working Mode.

- Net-Fault Tolerance: The two NIC cards use the same IP address, and you can select the main NIC to LAN1 or LAN2. By this way, in case of one NIC card failure, the device will automatically enable the other standby NIC card so as to ensure the normal running of the whole system.
- Multi-address Mode: The parameters of the two NIC cards can be configured independently. You can select LAN1 or LAN2 under Select NIC for parameter settings. You can select one NIC card as default route. And then the system is connecting with the extranet the data will be forwarded through the default route.

Step 3 Configure other IP settings as needed.

- Check Enable DHCP to obtain IP settings automatically if a DHCP server is available in the network.
- Valid range of MTU value is 500 to 9676.

Step 4 Click Apply.

16.1.2 Device with a Single Network Interface

Step 1 Go to System > Network > TCP/IP.

NIC Type	10M/100M/1000M Self-adap 👻		
Enable DHCP		Enable Obtain DNS	
Pv4 Address	10 . 15 . 2 . 104	Preferred DNS Server	
Pv4 Subnet Mask	255 . 255 . 255 . 0	Alternate DNS Server	
Pv4 Default Gateway	10 . 15 . 2 . 254		
MAC Address	18:68:cb:9e:46:6b		
MTU(Bytes)	1500		
nternal NIC IPv4 A	192 . 168 . 254 . 1		

Figure 16-2 TCP/IP Settings

Step 2 Configure network parameters as needed.

- Check **Enable DHCP** to obtain IP settings automatically if a DHCP server is available in the network.
- Valid range of MTU value is 500 to 9676.

Step 3 Click Apply.

16.2 Configuring Hik-Connect

Hik-Connect provides the mobile phone application and the service platform page (www.hik-connect.com) to access and manage your connected encoder, which enables you to get a convenient remote access to the surveillance system.



The Hik-Connect can be enabled via operation on SADP software, GUI and Web browser. We introduce the operation steps on GUI in this section.

Step 1 Go to **Configuration > Network > Advanced Settings > Platform Access** to enter the Hik-Connect Settings page.

Enable		
Platform Access Mode	Hik-Connect	\checkmark
Server Address	www.hik-connect.com	Custom 📀
Register Status	Offline	\checkmark
Verification Code		
6 to 12 letters (a to z, A t	to Z) or numbers (0 to 9), case	sensitive. You are recommended to use a combination of no less than 8 letters or numbers.
(i) Create a verification co	ode.	
🗎 Save		

Figure 16-3 Hik-Connect Settings

Step 2 Check the **Enable** to activate the function.

Then the Service Terms page pops up as below.

Verification Code	•••••	
	6 to 12 letters (a to z, A to Z) or numbers (0 to 9), case sensitive. You are recommended to use a combination of no less than 8 letters or numbers.	
Confirm Verification Code	•••••	

Figure 16-4 Service Terms

- 1) Create the verification code in the **Verification Code** text field.
- 2) Confirm the verification code.
- 3) Read **Terms of Service** and **Privacy Policy** before enabling the service.
- 4) Click **OK** to save the settings and return to the Hik-Connect page.

Enable		
Platform Access Mode	Hik-Connect	
Server Address	www.hik-connect.com	Gustom
Register Status	Offline 🗸	
Verification Code	•••••]
6 to 12 letters (a to z, A to	o Z) or numbers (0 to 9), case sensiti	ve. You are recommended to use a combination of no less than 8 letters or numbers.
(i) Create a verification co	ode.	
🖹 Save		

Figure 16-5 Hik-Connect Settings

- Hik-Connect is disabled by default.
- The verification code is empty when the device leaves factory.
- The verification code must contain 6 to 12 letters or numbers and is case

sensitive.

• Every time you enable Hik-Connect, the Service Terms page pops up and you should read Terms of Service and Privacy Policy before enabling it.

Step 3 If you want to customize the server, enable **Custom** and enter the **Server Address** in the text field.

Step 4 Click Save.

Step 5 After configuration, you can access and manage the DVR by your mobile phone or by the website (*www.hik-connect.com*).

• For the iOS users, please scan the QR code below to download the Hik-Connect application for the subsequent operations.



Figure 16-6 QR Code for iOS Users

• For the Android users, please scan the QR code below to download the Hik-Connect application for the subsequent operations. You must install *googleplay* on your Android mobile phone to skip to the address successfully.



Figure 16-7 QR Code for Android Users

Please refer to the help file on the official website (www.hik-connect.com) and the *Hik-Connect Mobile Client User Manual* for adding the device to Hik-Connect and more operation instructions.

16.3 Configure DDNS

Purpose

You can set Dynamic DNS service for network access. Different DDNS modes are available: **DynDNS**, **PeanutHull**, and **NO-IP**.

Before You Start

You must register DynDNS, PeanutHull and NO-IP services with your ISP before configuring DDNS settings.

Step 1 Go to System > Network > TCP/IP > DDNS.

Step 2 Check Enable.

Step 3 Select **DynDNS** under **DDNS Type**.



PeanutHull and NO-IP are also available under DDNS Type, and required information should be entered accordingly.

Step 4 Enter Server Address for DynDNS (i.e. members.dyndns.org).

Step 5 Under **Device Domain Name**, enter the domain name obtained from the DynDNS website.

Step 6 Enter the User Name and Password registered in the DynDNS website.

Enable			
DDNS Type	DynDNS -	User Name	test
Server Address	member.dyndns.org	Password	*****
Device Domain Name	1233dyndns.com		
Status	DDNS is disabled.		

Figure 16-8 DDNS Settings

Step 7 Click Apply.

16.4 Configure PPPoE

If the device is connected to Internet through PPPoE, you need to configure user name and password accordingly under **System** > **Network** > **TCP/IP** > **PPPoE**.

Contact your Internet service provider for details about PPPoE service.

16.5 Configure NTP

Purpose

Connection to a network time protocol (NTP) server can be configured on your device to ensure the accuracy of system date and time.

Step 1 Go to System > Network > TCP/IP > NTP.

TCP/IP DDNS PPPoE	NTP NAT
Enable	\checkmark
Interval (min)	180
NTP Server	au.pool.ntp.org
NTP Port	123
Apply	

Figure 16-9 NTP Settings

Step 2 Check Enable.

Step 3 Configure NTP settings as need.

- Interval (min): Time interval between two time synchronization with NTP server.
- NTP Server: IP address of the NTP server.
- **NTP Port**: Port of the NTP server.

Step 4 Click Apply.

16.6 Configure SNMP

Purpose

You can configure SNMP settings to get device status and parameter information.

Before You Start

Download the SNMP software to receive device information via SNMP port. By setting the trap address and port, the device is allowed to send alarm event and exception message to the surveillance center.

Step 1 Go to System > Network > Advanced > SNMP.

Enable	
SNMP Version	V2 -
SNMP Port	161
Read Community	public
Write Community	private
Trap Address	
Trap Port	162
Trap Port	162

Figure 16-10 SNMP Settings

Step 2 Check Enable. A message will pop up to prompt possible security risk and click Yes to continue.

Step 3 Configure the SNMP settings as needed.

- Trap Address: IP address of the SNMP host.
- **Trap Port**: Port of the SNMP host.

Step 4 Click Apply.

16.7 Configure Email

Purpose

The system can be configured to send an Email notification to all designated users when a specified event occur, such as an alarm or motion event is detected, or the administrator password is changed, etc.

Before You Start

The device must be connected to a local area network (LAN) that contains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the e-mail accounts to which you want to send notification.

Step 1 Go to System > Network > Advanced > Email.

User Name		SMTP Server		
Password		SMTP Port	25	
Sender	test01	Enable SSL/TLS		
Sender's Address	test01@hotmail.com			
Select Receivers	Receiver 1 -			
Receiver	test02			
Receiver's Address	test02@hotmail.com			
Enable Attached Picture				
Interval	2s			
Test	Apply			

Figure 16-11 Email Settings

Step 2 Configure the following Email settings.

- Enable Server Authentication: Check to enable the function if the SMTP server requires user authentication and enter user name and password accordingly.
- **SMTP Server**: The IP address of SMTP Server or host name (e.g., smtp.263xmail.com).
- **SMTP Port**: The SMTP port. The default TCP/IP port used for SMTP is 25.
- Enable SSL/TLS: Check to enable SSL/TLS if required by the SMTP server.
- **Sender**: The name of the sender.
- Sender's Address: Sender's Address.
- **Select Receivers**: Select the receiver. Up to 3 receivers can be configured.
- **Receiver**: The name of the receiver.
- **Receiver's Address**: The Email address of user to be notified.
- **Enable Attached Picture**: Check to enable the function if you want to send email with attached alarm images. The interval is the time between two adjacent alarm images.

Step 3 Click Apply.

Step 4 (Optional) Click Test to send a test email.

16.8 Configure Ports

You can configure different types of ports to enable relevant functions.

Go to **System > Network > Advanced > More Settings** and configure port settings as needed.

• Alarm Host IP/Port: With a remote alarm host configured, the device will send the alarm event or exception message to the host when an alarm is triggered. The remote alarm host must have the client management system (CMS) software installed.

The **Alarm Host IP** refers to the IP address of the remote PC on which the CMS software (e.g., iVMS-4200) is installed, and the **Alarm Host Port** (7200 by default) must be the same as the alarm monitoring port configured in the software.

- Server Port: Server port (8000 by default) should be configured for remote client software access and its valid range is 2000 to 65535.
- **HTTP Port**: HTTP port (80 by default) should be configured for remote web browser access.
- **Multicast IP**: Multicast can be configured to enable live view for cameras that exceed the maximum number allowed through network. A multicast IP address covers Class-D IP ranging from 224.0.0.0 to 239.255.255.255 and it is recommended to use the IP address ranging from 239.252.0.0 to 239.255.255.255.

When adding a device to the CMS software, the multicast address must be the same as that of the device.

 RTSP Port: RTSP (Real Time Streaming Protocol) is a network control protocol designed for use in entertainment and communications systems to control streaming media servers. The port is 554 by default.

Alarm Hos	t IP	
Alarm Hos	t Port	0
Server Po	rt	8000
HTTP Por	t	80
Multicast I	Р	
RTSP Por	t	554

Figure 16-12 Port Settings

Chapter 17 Hot Spare Device Backup

Purpose:

The device can form an N+1 hot spare system. The system consists of several working devices and a hot spare device; when the working device fails, the hot spare device switches into operation, thus increasing the reliability of the system. Please contact dealer for details of models which support the hot spare function.

A bidirectional connection shown in the figure below is required to be built between the hot spare device and each working device.



Figure 17-1 Building Hot Spare System

Before you start:

At least 2 devices are online.

17.2 Set Hot Spare Device

Purpose:

Hot spare devices takes over working device tasks when working device fails.

Step 1 Go to System > Hot Spare.

```
Step 2 Set the Work Mode as Hot Spare Mode.
```

63	General	Work Mode	Hot Spare Mode -
2	User		
	Network		
	Event >		
	Live View >		
Ē	Holiday Settings		
Ŧ	Hot Spare		

Figure 17-2 Hot Spare

Step 3 Click Apply.

Step 4 Click **Yes** in popup attention box to reboot the device.

- The camera connection will be disabled when the device works in the hot spare mode.
- It is highly recommended to restore the defaults of the device after switching the working mode of the hot spare device to normal mode to ensure the normal operation afterwards.

17.3 Set Working Device

Step 1 Go to System > Hot Spare.

Step 2 Set the Work Mode as Normal Mode.

Step 3 Check Enable.

Step 4 Enter the IP address and admin password of hot spare device.

Work Mode	Normal Mode
Enable	
IPv4 address of the hot sp	10 . 15 . 1 . 19
Password of the hot spare	********
Working Status	
*Notice: After the hot spare is	enabled, you must link the working device to the hot spare devic

Figure 17-3 Hot Spare

Step 5 Click Apply.

17.4 Manage Hot Spare System

Step 1 Go to System > Hot Spare in hot spare device.

Step 2 Check working devices from the device list and click **Add** to link the working device to the hot spare device.



A hot spare device can connect up to 32 working devices.

Work Mode		Hot Spare Mode	-		
Device List					
□ No.		IP Address			
□ 1		10.15.2.107			
Add					
Add	,				
Working Dev			We fire Plates		
	/ IP Address	Connection Status	Working Status	Delete	
Working Dev		Connection Status	Working Status	Delete	_
Working Dev		Connection Status	Working Status	Delete	
Working Dev		Connection Status	Working Status	Delete	
Working Dev		Connection Status	Working Status	Delete	
Working Dev		Connection Status	Working Status	Delete	
Working Dev		Connection Status	Working Status	Delete	

Figure 17-4 Add Working Device

Table 17-1	Working Status	Descrption
------------	----------------	------------

Working Status	Description
No record	The working device works properly.
Backing up	The working device gets offline, the hot spare device will record the video of the IP camera connected to the working device for backup The record backing up can be functioned for 1 working device at a time.
Synchronizing	The working device comes online, the lost video files will be restored by the record synchronization function. The record synchronization function can be enabled for 1 working device at a time.

Chapter 18 System Maintenance

18.1 Storage Device Maintenance

18.1.1 Configure Disk Clone

Purpose:

Select the HDDs to clone to eSATA HDD.

Before you start:

Connect an eSATA disk to the device.

Step 1 Go to Maintenance > HDD Operation > HDD Clone.

lone Source	e					
Label	Capacity	Status	Property	Туре	Free Space	Group
1	1863.02GB	Normal	R/W	Local	1858.00GB	1
2	2794.52GB	Normal	RW	Local	2794.00GB	1
5	1863.02GB	Normal	RW	Local	1862.00GB	1
9	2794.52GB	Normal	R/W	Local	2794.00GB	1
_10	1863.02GB	Normal	RW	Local	1862.00GB	1
lone Destin	ation					
SATA	eSATA1				•	Refresh
apacity	2794.52GB					Clone

Figure 18-1 HDD Clone

- Step 2 Check the HDD to clone. The capacity of selected HDD must match the capacity of clone destination.
- Step 3 Click Clone.

Step 4 Click Yes on popup message box to continue clone.

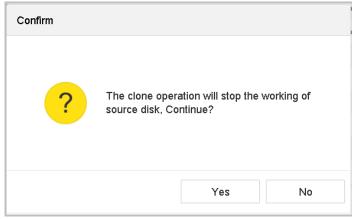


Figure 18-2 Message Box

18.1.2 S.M.A.R.T Detection

Purpose:

The device provides the HDD detection function such as the adopting of the S.M.A.R.T. and the Bad Sector Detection technique. The S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) is a monitoring system for HDD to detect and report on various indicators of reliability in the hopes of anticipating failures.

- Step 1 Go to Maintenance > HDD Operation > S.M.A.R.T..
- Step 2 Select the HDD to view its S.M.A.R.T information list.
- Step 3 Select the self-test types as **Short Test**, **Expanded Test** or the **Conveyance Test**.
- Step 4 Click **Self-Test** to start the S.M.A.R.T. HDD self-evaluation.
- Step 5 The related information of the S.M.A.R.T. is shown on the interface. You can check the HDD status.

	5	-					
Self-Test Typ	e Short Test	-	Self-Test	Not tested			
emperature 36		Self-Evaluation	Pass				
Vorking Time 390			All-Evaluation	Functional			
S.M.A.R.T Info	or						
ID	Attribute Name	Status	Flags	Threshold	Value	Worst	Raw Value
0x1	Raw Read Error R	ок	2f	51	200	200	8
0x3	Spin Up Time	ок	27	21	113	107	7316
	Start/Stop Count	ок	32	0	98	98	2657
0x4			33	140	200	200	0
0x4 0x5	Reallocated Sector	ок	00				
		ок ок	2e	0	200	200	0
0x5	Reallocated Sector			0	200 88	200 88	0 9369
0x5 0x7	Reallocated Sector Seek Error Rate	ок	2e				

Figure 18-3 S.M.A.R.T Settings Interface

If you want to use the HDD even when the S.M.A.R.T. checking is failed, you can check the checkbox of the **Continue to use the disk when self-evaluation is failed** item.

18.1.3 Bad Sector Detection

Step 1 Go to Maintenance > HDD Operation > Bad Sector Detection.

Step 2 Select the HDD No. in the dropdown list you want to configure.

Step 3 Select All Detection or Key Area Detection as the detection type.

Step 4 Click the **Self-Test** button to start the detection.

Functional	Bad	Shield		Detecting Process	Testing 2
				HDD Capacity	931.52GB
				Block Size	232.88MB
				Error Count	0
				Error Information	

Figure 18-4 Bad Sector Detection

- You can also pause/resume or cancel the detection.
- After testing completed, you can click **Error information** button to see the detailed damage information.

18.1.4 HDD Health Detection

Purpose:

You can view the health status of Seagate HDD that generated after October 1th, 2017 and capacity ranges from 4 TB to 8 TB. The function helps you to troubleshoot HDD problems. Compared with S.M.A.R.T function, health detection shows HDD status with more details.

Step 1 Go to Maintenance > HDD Operation > Health Detection.

Network Video Recorder User Manual

System Info Log Information	>	16 HDD (s)) in total. The detection	on is only ava	ailable for the Seag	ate HDD.			EXTRACT
Import/Export Import/Export	>	No. 1	HDD is healthy.	No.2	HDD is healthy.	No.3	HDD is healthy.	No.4	HDD is healthy.
Network Detect HDD Operation S.M.A.R.T Bad Sector Detect	~	No.5	HDD is healthy.	No.6	HDD is healthy.	No.7	HDD is healthy.	No.8	HDD is healthy.
HDD Clone Health Detection	1	No.9	HDD is healthy.	No.10	HDD is healthy.	No. 1	HDD is healthy.	No.12	HDD is healthy.
		NO.13	HDD is healthy.	No.14	HDD is healthy.	No. 1	5 HDD is healthy.	No.16	HDD is healthy.

Figure 18-5 Health Detection

Step 2 Click a HDD to view details.

18.2 Search & Export Log Files

Purpose:

The operation, alarm, exception and information of the device can be stored in log files, which can be viewed and exported at any time.

18.2.1 Search the Log Files

Step 1 Go to Maintenance > Log Information.

Time 2017-08-18 00:00:00 🚔 _ 2017-08-18 23:59:59 🛱 Search	
Ali -	
dinor Type ☑ Select All	Export ALL
✓Alarm Input	
⊠Alarm Output	
☑Motion Detection Started	
☑Motion Detection Stopped	
☑Video Tampering Detection Started	
✓Video Tampering Detection Stopped	
✓POS Started	
✓POS Stopped	
✓Line Crossing Detection Alarm Started	
✓Line Crossing Detection Alarm Stopped	
✓Intrusion Detection Alarm Started	
⊡Intrusion Detection Alarm Stopped	
✓Audio Loss Exception Alarm Started	
☑Audio Loss Exception Alarm Stopped	
Sudden Change of Sound Intensity Alarm Started	
Sudden Change of Sound Intensity Alarm Stopped	
⊡Face Detection (Face Capture) Alarm Started	
Zeas Datation (Ease Conture) Norm Clanned	

Figure 18-6 Log Search Interface

Step 2 Set the log search conditions, including the Time, Major Type and Minor Type.

Step 3 Click Search to start search log files.

The matched log files will be displayed on the list shown below.

Network Video Recorder User Manual

ajor T	ype A	All	~						
nor	Search R	esult							Export ALL
	No	Major Type	Time	Minor Type	Parameter	Play	Details		
	103	Alarm	18-08-2017 07:07:31	Motion Detection	N/A		()		
~	104	Alarm	18-08-2017 07:07:43	Motion Detection	N/A	•	(!)		
	105	Alarm	18-08-2017 07:16:27	Motion Detection	N/A		()		
~	106	Alarm	18-08-2017 07:16:37	Motion Detection	N/A	•	(!)		
	107	inform	18-08-2017 07:17:19	System Running	N/A	-	(!)		
	108	🖳 Inform	18-08-2017 07:17:19	System Running	N/A	-	(!)		
	109	inform	18-08-2017 07:18:00	HDD S.M.A.R.T.	N/A	-	(!)		
	110	🖳 Inform	18-08-2017 07:18:00	HDD S.M.A.R.T.	N/A		(!)		
	111	inform	18-08-2017 07:27:20	System Running	N/A	-	!		
✓	Total: 115	51 P: 2/12			< <			Go	
 ✓ 					I	Export	Back		
_	Sudden Ch	nange of Sound	Intensity Alarm Started						
	Cuddan Ok	anna of Cound	Intensity Alarm Stopped						

Figure 18-7 Log Search Results

Up to 2000 log files can be displayed each time.

Related Operation:

- Click the 🗊 button or double click it to view its detailed information.
- Click the ≥ button to view the related video file.

18.2.2 Export the Log Files

Before You Start:

Connect a storage device to your device.

Step 1 Search the log files. Refer to Chapter 18.2.1 Search the Log Files.

Step 2 Select the log files you want to export, and click Export.

Or you can click **Export ALL** on the Log Search interface to export all the system logs to the storage device.

System Log E	xport								\times
Device Na	USB F	lash Disk	: 1-1			▪ *.t	xt	•	C
Name		Size	Туре	Edit Date	e	De	Play		
201708	2	41.3	File	22-08-20	017	×	—		
+ New Fold	er	谢 Er	ase		l	Free Spa	ice 899	3.11ME	З
					Ex	port	I	Back	

Figure 18-8 Export Log Files

Step 3 On the Export interface, select the storage device from the dropdown list of **Device Name**.

Step 4 Select the format of the log files to be exported. Up to 15 formats are selectable.

Step 5 Click the **Export** to export the log files to the selected storage device.

Related Operation:

- Click the **New Folder** button to create new folder in the storage device.
- Click the **Format** button to format the storage device before log export.

18.3 Import/Export IP Camera Configuration Files

Purpose:

The information of added IP camera can be generated into an excel file and exported to the local device for backup, including the IP address, manage port, password of admin, etc.. And the exported file can be edited on your PC, like adding or deleting the content, and copy the setting to other devices by importing the excel file to it.

Before You Start:

Connect a storage device to your device. For importing the configuration file, the storage device must be with the file.

Step 1 Go to Camera > IP Camera Import/Export.

Step 2 Click the **IP Camera Import/Export** tab, and the content of detected plugged external device appears.

Step 3 Export or import the IP camera configuration files.

- Click **Export** to export configuration files to the selected local backup device.
- To import a configuration file, select the file from the selected backup device and click the **Import** button.

After the importing process is completed, you must reboot the device to activate the settings.

18.4 Import/Export Device Configuration Files

Purpose:

The configuration files of the device can be exported to local device for backup; and the configuration files of one device can be imported to multiple devices if they are to be configured with the same parameters.

Connect a storage device to your device. For importing the configuration file, the storage device must be with the file.

Before You Start:

Connect a storage device to your device. For importing the configuration file, the storage device must be with the file.

Step 1 Go to Maintenance >Import/Export

Device Name USB	Flash Disk 1-1	File Format *.b	in -			\bigcirc Refresh
New Folder	_ Import	☐ Export			Total Free Capacity	9165.35M
Name	Size	Туре	Modify Date	Delete	Play	
evCfg_7597083	301 1260.94KB	File	18-08-2017 18:28:09	×	-	

Figure 18-9 Import/Export Config File

Step 2 Export or import the device configuration files.

- Click **Export** to export configuration files to the selected local backup device.
- To import a configuration file, select the file from the selected backup device and click the **Import** button.



After having finished the import of configuration files, the device will reboot automatically.

18.5 Upgrade System

Purpose:

The firmware on your device can be upgraded by local backup device or remote FTP server.

18.5.1 Upgrade by Local Backup Device

Before You Start:

Connect your device with a local storage device with update firmware file.

Step 1 Go to Maintenance>Upgrade.

Step 2 Click the Local Upgrade tab to enter the local upgrade interface.

Device Name	USB Flash Disk 1-1	•	File Format	*.dav;*.mav;*.iav	•		\bigcirc Refresh
① Upgrade							
File Name	File Size		File Type	Edit Date	Delet	e Play	I

Figure 18-10 Local Upgrade Interface

Step 3 Select the update file from the storage device.

- Step 4 Click Upgrade to start upgrading.
- Step 5 After the upgrading is complete, the device will reboot automatically to activate the new firmware.

18.5.2 Upgrade by FTP

Before you start:

Ensure the network connection of the PC (running FTP server) and the device is valid and correct. Run the FTP server on the PC and copy the firmware into the corresponding directory of your PC.

Step 1 Go to Maintenance>Upgrade.

Step 2 Click the FTP tab to enter the local upgrade interface.

Figure 18-11 FTP Upgrade Interface

Step 3 Enter the FTP Server Address in the text field.

Step 4 Click the **Upgrade** button to start upgrading.

Step 5 After the upgrading is complete, reboot the device to activate the new firmware.

18.6 Restore Default Settings

Step 1 Go to Maintenance > Default.

Restore Defaults	Reset all settings to factory default except network and admin password settings
Factory Defaults	Restore device to inactive status and all settings including network and password
Restore to Inactive	Leave all settings unchanged except restore device to inactive status without amdin password

Figure 18-12 Restore Defaults

Step 2 Select the restoring type from the following three options.

Restore Defaults: Restore all parameters, except the network (including IP address, subnet mask, gateway, MTU, NIC working mode, default route, server port, etc.) and user account parameters, to the factory default settings.

Factory Defaults: Restore all parameters to the factory default settings.

Restore to Inactive: Restore the device to the inactive status.

The device will reboot automatically after restoring to the default settings.

18.7 System Service

18.7.1 Network Security Settings

HTTP

You can choose to disable the HTTP, or set the HTTP authentication when it is enabled as demand to enhance the access security.

By default, the HTTP service is enabled.

Set HTTP Authentication

Purpose

If you need to enable the HTTP service, you can set the HTTP authentication to enhance the access security.

Step 1 Go to System > System Service > System Service.

Enable HTTP		
HTTP Authentication Type	digest -	

Figure 18-13 HTTP Authentication

Step 2 Check the **Enable HTTP** to enable the HTTP service.

Step 3 Select the **digest** as the **HTTP Authentication** in the drop-down list.

Step 4 Click **Apply** to save the settings. And reboot device to take effect the settings.

Two authentication types are selectable: **digest** and **digest/basic**. For security reasons, it is recommended to select digest as the authentication type.

Disable HTTP

Purpose

The admin user account can disable the HTTP service from the GUI or the web browser.

After the HTTP is disabled, all its related services, including the ISAPI, Onvif and Gennetc, will terminate as well.

Step 1 Go to System > System Service > System Service.

Step 2 Uncheck the **Enable HTTP** to disable the HTTP service.

Step 3 Click **Apply** to save the settings. And reboot device to take effect the settings.

RTSP Authentication

Purpose

You can specifically secure the stream data of live view by setting the RTSP authentication.

Step 1 Go to System > System Service> System Service.

Enable RTSP		
RTSP Authentication Type	digest	,

Figure 18-14 RTSP Authentication

Step 2 Select the authentication type.

Two authentication types are selectable: **digest** and **digest/basic**. If you select **digest**, as the RTSP authentication, only the request with digest authentication can access the video stream by the RTSP protocol via the IP address. For security reasons, it is recommended to select digest as the authentication type.

Step 3 Click **Apply** to save the settings. And reboot device to take effect the settings.

Enable IP Camera Occupation Detection

Purpose

After enabling the feature, when search IP camera in Number of Unadded Online Device interface, the status of IP camera the has been added by other device will show as \triangle .

Step 1 Go to System > System Service > System Service.

Step 2 Check Enable IP Camera Occupation Detection.

Step 3 Click **Apply** to save the settings. And reboot device to take effect the settings.

18.7.2 Managing ONVIF User Accounts

Purpose

For the third-party camera connection to the device via ONVIF, you can enable ONVIF function and manage the user accounts.

Step 1 Go to System > System Service > ONVIF.

Step 2 Check Enable ONVIF to enable the ONVIF access management.

Step 3 Click Add to enter the Add User interface.

Add User		\times
User Name	01	
Password	*****	
	Strong	
Confirm	*****	
Level	Media User -	
	Note:Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.	
	OK Cance)

Figure 18-15 Add User

Step 4 Edit the user name, and enter the strong password.

Step 5 Select the user level to Media User, Operator and Admin.

Step 6 Click **OK** to save the settings.

Result:

The added user accounts have the permission to connect other devices to the device via ONVIF protocol.



ONVIF protocol is disabled by default.

18.7.3 Managing IP Camera Activation

When you activate the device for the first-time access, you can set the activation password for the IP camera(s) as well. And you can also manage the password to enhance the security.

Step 1 Go to System > System Service > IP Camera Activation.

Step 2 Check the **Change Password** to enable the permission.

Step 3 Enter the admin password of the device to obtain the permission.

Change Password		
IP Camera Activation Pa	*******	
	nge [8-16]. You can use a combination of opercase and special character for your password of them contained.	

Figure 18-16 Change IP Camera Activation Password

- Step 4 In the text field of the **IP Camera Activation Password**, enter the new strong password for the cameras.
- Step 5 Click **Apply** to see the following pop-up attention box.

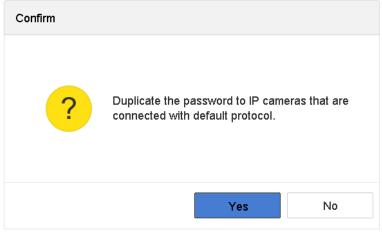


Figure 18-17 Attention

Step 6 Click **Yes** to duplicate the current password to the IP cameras which are connected with the default protocol.

Chapter 19 General System Settings

19.1 Configure General Settings

Purpose:

You can configure the BNC output standard, VGA output resolution, mouse pointer speed through the System > General interface.

Step 1 Go to System > General.

Date Format	DD-MM-YYYY ~	Mouse Pointer Spe	ed	Slow		Fast
System Date	22-08-2017	Enable DST				
System Time	11:34:09	DST Mode		Auto	 Manual 	
Device Name	Network Video Recorder	Start Time	Apr -	1st -	Sun -	2
Device No.	255	End Time	Oct -	last -	Sun -	2
Auto Log out	Never -	DST Bias		60 Minute	S	•
Enable Wizard						
Enable Password						

Figure 19-1 General Settings Interface

Step 2 Configure the following settings.

Language: The default language used is English.

Output Standard: Select the output standard to NTSC or PAL, which must be the same with the video input standard.

Resolution: Configure the resolution of the video output.

Device Name: Edit the name of the device

Device No.: Edit the serial number of the device. The Device No. can be set in the range of 1^{255} , and the default No. is 255. The number is used for the remote and keyboard control.

Auto Logout: Set timeout time for menu inactivity. E.g., when the timeout time is set to 5 *Minutes*, then the system will exit from the current operation menu to live view screen after 5 minutes of menu inactivity.

Mouse Pointer Speed: Set the speed of mouse pointer; 4 levels are configurable.

Enable Wizard: Enable/disable the Wizard when the device starts up.

Enable Password: Enable/disable the use of the login password.

Step 3 Click the **Apply** button to save the settings.

19.2 Configure Date & Time

Step 1 Go to System > General.

Step 2 Configure the date and time.

Time Zone: Select the time zone. Date Format: Select the date format. System Date: Select the system date. System Time: Set the system time.

Time Zone	(GMT+08:00) Beijing, Urumc 👻	
Date Format	DD-MM-YYYY -	
System Date	22-08-2017	
System Time	11:34:09	

Figure 19-2 Date and Time Settings

Step 3 Click the **Apply** button to save the settings.

19.3 Configure DST Settings

The DST (daylight saving time) refers to the period of the year when clocks are moved one period ahead. In some areas worldwide, this has the effect of creating more sunlit hours in the evening during months when the weather is the warmest.

We advance our clocks ahead a certain period (depends on the DST bias you set) at the beginning of DST, and move them back the same period when we return to standard time (ST).

Step 1 Go to System > General.

Step 2 Check the Enable DST.

Enable DST			\checkmark					
DST Mode			OAuto)	 Manu 	al		
Start Time	Apr	•	1st	-	Sun	•	2	☺ :00
End Time	Oct	•	last	•	Sun	•	2	☺ :00
DST Bias			60 N	linutes			-	

Figure 19-3 DST Settings Interface

Step 3 Select the DST mode to Auto or Manual.

- Auto: automatically enable the default DST period according to the local DST rules.
- Manual: manually set the start time and end time of the DST period, and the DST bias.
 DST Bias: set the time (30/60/90/120 minutes) offset from the standard time.

Example: The DST begins at 2:00 a.m. on the second Sunday of March and ends at 2:00 a.m. on the first Sunday of November, with 60 minutes ahead.

Step 4 Click the **Apply** button to save the settings.

19.4 Manage User Accounts

Purpose:

The *Administrator* user name is *admin* and the password is set when you start the device for the first time. The *Administrator* has the permission to add and delete user and configure user parameters.

19.4.1 Add a User

Step 1 Go to System > User.

+ Add	🗹 Modify 🛛 🗙 Delete			
No	User Name	Security Priority	User's MAC Address	Permission
1	admin	Strong Password Admin	00:00:00:00:00	0

Figure 19-4 User Management Interface

Step 2 Click Add to enter the operation permission interface.

Step 3 Enter the admin password and click **OK**.

Add User		\times
User Name	A01	
Password	****	
	Strong	
Confirm	****	
	Note:Valid password range [8-16]. You can use	
User Level	Operator	•
User's MAC Ad	00 : 00 : 00 : 00 : 00 : 00	
	0	ĸ

Figure 19-5 Add User

Step 4 In the Add User interface, enter the information for new user, including User Name, Password, Confirm (password), User Level (Operator/Guest) and User's MAC Address.



<u>Strong Password recommended</u>–We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

• User Level: Set the user level to Operator or Guest. Different user levels have different operating permission.

Operator: The *Operator* user level has permission of Two-way Audio in Remote Configuration and all operating permission in Camera Configuration by default.

Guest: The Guest user has no permission of Two-way Audio in Remote Configuration and only has the local/remote playback in the Camera Configuration by default.

• User's MAC Address: The MAC address of the remote PC which logs onto the device. If it is configured and enabled, it only allows the remote user with this MAC address to access the device.

Step 5 Click **OK** to finish the new user account adding.

Result: In the User Management interface, the added new user is displayed on the list.

+ Add	\square Modify $ imes$ Delet	te				
No	User Name	Security	Priority	User's MAC Address	Permission	
1	admin	Strong Password	Admin	00:00:00:00:00:00	0	
2	A01	Strong Password	Operator	00:00:00:00:00:00	\bigcirc	
3	A02	Strong Password	Operator	00:00:00:00:00:00	©	

Figure 19-6 User List

19.4.2 Set the Permission for a User

For the added user, you can assign the different permissions, including the local and remote operation for the device.

Step 1 Go to System > User.

Step 2 Select a user from the list and then click the Solution to enter the permission settings interface.

Permission			\times
Local Configuration	Remote Configuration	Camera Configuratio	n
✓Local Log Search			
Local Parameters	Settings		
Local Camera Ma	nagement		
Local Advanced O	peration		
Local Shutdown /	Reboot		
	Apply	ок	Cancel

Figure 19-7 User Permission Settings Interface

Step 3 Set the operating permission of Local Configuration, Remote Configuration and Camera Configuration for the user.

Local Configuration

Local Log Search: Searching and viewing logs and system information of device.

Local Parameters Settings: Configuring parameters, restoring factory default parameters and importing/exporting configuration files.

Local Camera Management: The adding, deleting and editing of IP cameras.

Local Advanced Operation: Operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.

Local Shutdown Reboot: Shutting down or rebooting the device.

Remote Configuration

Remote Log Search: Remotely viewing logs that are saved on the device.

Remote Parameters Settings: Remotely configuring parameters, restoring factory default parameters and importing/exporting configuration files.

Remote Camera Management: Remote adding, deleting and editing of the IP cameras.

Remote Serial Port Control: Configuring settings for RS-232 and RS-485 ports.

Remote Video Output Control: Sending remote button control signal.

Two-Way Audio: Realizing two-way radio between the remote client and the device.

Remote Alarm Control: Remotely arming (notify alarm and exception message to the remote client) and controlling the alarm output.

Remote Advanced Operation: Remotely operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.

Remote Shutdown/Reboot: Remotely shutting down or rebooting the device.

Camera Configuration

Remote Live View: Remotely viewing live video of the selected camera (s).

Local Manual Operation: Locally starting/stopping manual recording and alarm output of the selected camera (s).

Remote Manual Operation: Remotely starting/stopping manual recording and alarm output of the selected camera (s).

Local Playback: Locally playing back recorded files of the selected camera (s).

Remote Playback: Remotely playing back recorded files of the selected camera (s).

Local PTZ Control: Locally controlling PTZ movement of the selected camera (s).

Remote PTZ Control: Remotely controlling PTZ movement of the selected camera (s).

Local Video Export: Locally exporting recorded files of the selected camera (s).

Local Live View: View live video of the selected camera(s) in local.

Step 4 Click **OK** to save the settings.

Only the admin user account has the permission of restoring factory default parameters.

19.4.3 Set Local Live View Permission for Non-Admin Users

Step 1 Go to System > User.

- Step 2 Click 🗹 of admin user.
- Step 3 Enter admin password and click **OK**.

Step 4 Select cameras that non-admin user can view in local and click **OK**.

ermission						
Enable Live View Permission						
Camera					Select All 🖂]
☑ D1	✓ D2	✓ D3	✓ D4	✓ D5	✓ D6	
✓D7	✓ D8	✓ D9	✓D10	✓ D11	✓D12	
✓D13	✓ D14	🗹 D15	🗹 D16	✓ D17	✓ D18	
🗹 D19	✓ D20	✓ D21	✓ D22	✓ D23	✓ D24	
🗸 D25	✓ D26	✓ D27	✓ D28	✓ D29	✓ D30	
✓D31	✓D32	✓D33	✓ D34	✓D35	✓ D36	
🗹 D37	✓ D38	✓ D39	✓ D40	✓D41	✓D42	
✓ D43	✓ D44	✓ D45	✓ D46	✓ D47	✓ D48	
🗹 D49	🗹 D50	🗹 D51	✓ D52	✓ D53	✓ D54	
		Арр	bly	ОК	Cance	.

Figure 19-8 Enable Live View Permission

Step 5 Click 🗹 of non-admin user.

Step 6 Enter Camera Configuration tab.

Step 7 Select Camera Permission as Local Live View.

Step 8 Select cameras to live view.

Step 9 Click OK.

19.4.4 Edit the Admin User

For the admin user account, you can modify its password the unlock pattern.

Step 1 Go to System > User.

Step 2 Select the admin user from the list and click Modify.

Edit User		\times
User Name	admin	
Password	*****	Discard C
Confirm	****	
Note:Valid p	assword range [8-16]. You can use	
Password Stre		
User's MAC Ad	00 :00 :00 :00 :00 :00	
Unlock Pattern	Enable Unlock Pattern	£02
GUID File	Export	
		ОК

Figure 19-9 Edit User (Admin)

Step 3 Edit the admin user information as demand, including the new admin password (strong password is required), and MAC address.

Step 4 Edit the unlock pattern for the admin user account.

- 1) Check the checkbox of **Enable Unlock Pattern** to enable the use of unlock pattern when logging in to the device.
- 2) Use the mouse to draw a pattern among the 9 dots on the screen, and release the mouse when the pattern is done.



Please refer to Chapter 2.2 for detailed instructions.

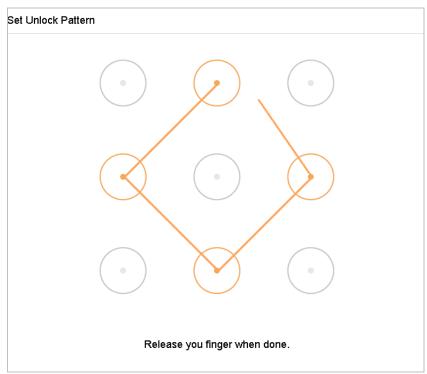


Figure 19-10 Set Unlock Patter for Admin User

Step 5 Click the Step 5 Click the Step 5 Click the GUID to enter the reset password interface to export the GUID file for the admin user account.

When the admin password is changed, you can export the new GUID to the connected U flash disk in the Import/Export interface for the future password resetting.

- Step 6 Click the **OK** button to save the settings.
- Step 7 For the **Operator** or **Guest** user account, you can also click the Subtrom button on the user management interface to edit the permission.

19.4.5 Edit the Operator/Guest User

You can edit the user information, including user name, password, permission level and MAC address. Check the checkbox of **Change Password** if you want to change the password, and input the new password in the text field of **Password** and **Confirm**. A strong password is recommended.

Step 1 Go to System > User.

Step 2 Select a user from the list and click Modify.

Edit User		\times
User Name	A01	
Password	*****	Discard C
Confirm	*****	
Note:Valid p	assword range [8-16]. You can use .	
Password Stre		
User Level	Operator -	
User's MAC Ad	00 : 00 : 00 : 00 : 00 : 00	
		ок

Figure 19-11 Edit User (Operator/Guest)

Step 3 Edit the user information as demand, including the new password (strong password is required), and MAC address.

19.4.6 Delete a User

The admin user account has the permission to delete the operator/guest user account.

Step 1 Go to System > User.

Step 2 Select a user from the list.

Step 3 Click **Delete** to delete the selected user account.

Chapter 20 Appendix

20.1 Specification

Model		iDS-9632NXI-18/4F		
	Face nicture library	4 libraries		
	Face picture library	Single library: 50, 000 pictures; Total: 50, 000 pictures		
Face detection and analytics	Face Capture camera	4-ch (HIKVISION/ONVIF/RTSP protocol)		
		4-ch face pictures comparison alarm,		
	Face picture comparison alarm	alarm linkage actions: recording, audio warning, notify		
		surveillance center, send Email		
	Face picture search	Search by picture is supported		
	Facial modeling capability	8 pic/sec		
	IP video input	32-ch		
Video/audio input	Incoming bandwidth	256 Mbps (when RAID is enabled)		
	Outgoing bandwidth	200 Mbps		
	Recording resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3		
		MP/1080p/UXGA/720p/VGA/4CIF/DCIF /2CIF/CIF/QCIF		
Video/audio output	CVBS output (Optional)	1-ch, BNC (1.0 Vp-p, 75 Ω), resolution: PAL: 704 × 576, NTSC: 704 × 480		
	GA1 /HDMI1 output VGA1: 2K (2560 × 1440)/60Hz, 1920 × 1080/60Hz, 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz HDMI1: 4K (3840 × 2160)/60Hz, 4K (3840 × 2160)/30Hz, × 1440)/60Hz, 1920 × 1080/60Hz, 1600 × 1200/60Hz 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz			
	VGA2 /HDMI2 output resolution	1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz		
	Audio output	2-ch, RCA (Linear, 1 KΩ)		
	Decoding format	H.265/H.265+/H.264/H.264+/MPEG4		
Decoding	Live view/playback resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA/720p/VGA/4CIF/DCIF /2CIF/CIF/QCIF		
	Synchronous playback	16-ch		
	Capability	16-ch @ 1080p		
	SATA	8 SATA interfaces		
Hard disk	eSATA	1 eSATA interface		
	Capacity	Up to 6 TB capacity for each HDD		
Disk array	Array type	RAID0, RAID1, RAID5, RAID6, RAID10		
	Two-way audio	1-ch, RCA (2.0 Vp-p, 1 k Ω)		
External interface	Network interface	2, RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface		
	Serial interface	RS-232; RS-485; Keyboard		
	USB interface	Front panel: 2 × USB 2.0; Rear panel: 1 × USB 3.0		
	Alarm in/out	16/4 (16/8 is optional)		

Network Video Recorder User Manual

General	Power supply	220 VAC	
	Max. power	200 W	
	Consumption (without hard disk)	≤ 70 W	
	Working temperature	-10 to +55° C (+14 to +131° F)	
	Working humidity	10 to 90 %	
	Chassis	19-inch rack-mounted 2U chassis	
	Dimensions (W × D × H)	445 × 470 × 90 mm (17.5"× 18.5" × 3.5")	
	Weight (without hard disk)	≤ 10 kg (22 lb)	

20.2 Glossary

- **Dual Stream:** Dual stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the device, with the main stream having a maximum resolution of 4CIF and the sub-stream having a maximum resolution of CIF.
- **HDD:** Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.
- **DHCP:** Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.
- **HTTP:** Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network
- **DDNS**: Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.
- **PPPoE:** Stands for "Point-to-Point Protocol over Ethernet." PPPoE is a network configuration used for establishing a PPP connection over an Ethernet protocol.
- **Hybrid device:** A hybrid device is a combination of a DVR and device.
- NTP: Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.
- NTSC: Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.
- **Device:** Acronym for Network Video Recorder. A device can be a PC-based or embedded system used for centralized management and storage for IP cameras, IP Domes and other devices.
- **PAL:** Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.
- **PTZ:** Acronym for Pan, Tilt, Zoom. PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.
- **USB:** Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

20.3 Troubleshooting

• No image displayed on the monitor after starting up normally.

Possible Reasons:

- No VGA or HDMI connections.
- Connection cable is damaged.
- Input mode of the monitor is incorrect.

Step 1 Verify the device is connected with the monitor via HDMI or VGA cable.

- Step 2 If not, please connect the device with the monitor and reboot.
- Step 3 Verify the connection cable is good.
- Step 4 If there is still no image display on the monitor after rebooting, please check if the connection cable is good, and change a cable to connect again.
- Step 5 Verify Input mode of the monitor is correct.
- Step 6 Please check the input mode of the monitor matches with the output mode of the device (e.g. if the output mode of device is HDMI output, then the input mode of monitor must be the HDMI input). And if not, please modify the input mode of monitor.
- Step 7 Check if the fault is solved by the step 1 to step 3.
- Step 8 If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• There is an audible warning sound "Di-Di-Di-DiDi" after a new bought device starts up.

Possible Reasons:

- No HDD is installed in the device.
- The installed HDD has not been initialized.
- The installed HDD is not compatible with the device or is broken-down.
- Step 1 Verify at least one HDD is installed in the device.
 - If not, please install the compatible HDD.

Please refer to the *Quick Start Guide* for the HDD installation steps.

 If you don't want to install a HDD, go to Menu>System> Event>Normal Event>Exception, and uncheck the Audible Warning checkbox of "HDD Error".

Step 2 Verify the HDD is initialized.

- 1) Go to Menu>Storage>Storage Device.
- 2) If the status of the HDD is "Uninitialized", please check the checkbox of corresponding HDD and click the "Init" button.

Step 3 Verify the HDD is detected or is in good condition.

- 3) Select Menu>Storage>Storage Device.
- 4) If the HDD is not detected or the status is "Abnormal", please replace the dedicated HDD according to the requirement.

Step 4 Check if the fault is solved by the step 1 to step 3.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• The status of the added IP camera displays as "Disconnected" when it is connected through Private Protocol. Select "Menu>Camera>Camera>IP Camera" to get the camera status.

Possible Reasons:

- Network failure, and the device and IP camera lost connections.
- The configured parameters are incorrect when adding the IP camera.
- Insufficient bandwidth.

Step 1 Verify the network is connected.

- 1) Connect the device and PC with the RS-232 cable.
- 2) Open the Super Terminal software, and execute the ping command. Input "ping IP" (e.g. ping 172.6.22.131).

Simultaneously press **Ctrl** and **C** to exit the ping command.

If there exists return information and the time value is little, the network is normal.

Step 2 Verify the configuration parameters are correct.

- 1) Go to Menu>Camera.
- 2) Verify the following parameters are the same with those of the connected IP devices, including IP address, protocol, management port, user name and password.

Step 3 Verify the whether the bandwidth is enough.

- 1) Go to Menu>Maintenance>Net Detect>Network Stat..
- 2) Check the usage of the access bandwidth, and see if the total bandwidth has reached its limit.

Step 4 Check if the fault is solved by the step 1 to step 3.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• The IP camera frequently goes online and offline and the status of it displays as "Disconnected".

Possible Reasons:

- The IP camera and the device versions are not compatible.
- Unstable power supply of IP camera.
- Unstable network between IP camera and device.
- Limited flow by the switch connected with IP camera and device.

Step 1 Verify the IP camera and the device versions are compatible.

- 1) Go to Menu>Camera, and view the firmware version of connected IP camera.
- 2) Go to Menu>Maintenance>System Info>Device Info and view the firmware version of device.

Step 2 Verify power supply of IP camera is stable.

- 1) Verify the power indicator is normal.
- 2) When the IP camera is offline, please try the ping command on PC to check if the PC connects with the IP camera.

Step 3 Verify the network between IP camera and device is stable.

- 3) When the IP camera is offline, connect PC and device with the RS-232 cable.
- 4) Open the Super Terminal, use the ping command and keep sending large data packages to the connected IP camera, and check if there exists packet loss.

Simultaneously press Ctrl and C to exit the ping command.

Example: Input ping 172.6.22.131 - I 1472 - f.

Step 1 Verify the switch is not flow control.

Check the brand, model of the switch connecting IP camera and device, and contact with the manufacturer of the switch to check if it has the function of flow control. If so, please turn it down.

Step 2 Check if the fault is solved by the step 1 to step 4.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

 No monitor connected with the device locally and when you manage the IP camera to connect with the device by web browser remotely, of which the status displays as Connected. And then you connect the device with the monitor via VGA or HDMI interface and reboot the device, there is black screen with the mouse cursor.

Connect the device with the monitor before startup via VGA or HDMI interface, and manage the IP camera to connect with the device locally or remotely, the status of IP camera displays as Connect. And then connect the device with the CVBS, and there is black screen either.

Possible Reasons:

After connecting the IP camera to the device, the image is output via the main spot interface by default.

Step 1 Enable the output channel.

Step 2 Go to Menu>System>Live View>General, and select video output interface in the drop-down list and configure the window you want to view.



- The view settings can only be configured by the local operation of device.
- Different camera orders and window-division modes can be set for different output interfaces separately, and digits like "D1" and "D2" stands for the channel number, and "X" means the selected window has no image output.

Step 3 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• Live view stuck when video output locally.

Possible Reasons:

- Poor network between device and IP camera, and there exists packet loss during the transmission.
- The frame rate has not reached the real-time frame rate.

Step 1 Verify the network between device and IP camera is connected.

- When image is stuck, connect the RS-232 ports on PC and the rear panel of device with the RS-232 cable.
- Open the Super Terminal, and execute the command of "**ping** 192.168.0.0 **I** 1472 **f**" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press **Ctrl** and **C** to exit the ping command.

Step 2 Verify the frame rate is real-time frame rate.

Go to Menu>Camera>Encoding Parameters, and set the Frame rate to Full Frame.

Step 3 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• Live view stuck when video output remotely via the Internet Explorer or platform software.

Possible Reasons:

- Poor network between device and IP camera, and there exists packet loss during the transmission.
- Poor network between device and PC, and there exists packet loss during the transmission.
- The performances of hardware are not good enough, including CPU, memory, etc..

Step 4 Verify the network between device and IP camera is connected.

- 1) When image is stuck, connect the RS-232 ports on PC and the rear panel of device with the RS-232 cable.
- Open the Super Terminal, and execute the command of "ping 192.168.0.0 I 1472 f" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press Ctrl and C to exit the ping command.

Step 5 Verify the network between device and PC is connected.

- 1) Open the cmd window in the Start menu, or you can press "windows+R" shortcut key to open it.
- Use the ping command to send large packet to the device, execute the command of "ping 192.168.0.0 –l 1472 –f" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press Ctrl and C to exit the ping command.

Step 6 Verify the hardware of the PC is good enough.

Simultaneously press **Ctrl**, **Alt** and **Delete** to enter the windows task management interface, as shown in the following figure.

🜉 Windows Task	Manager		— — X
File Options V	iew Help		
Applications Proc	esses Services P	erformance Netw	orking Users
CPU Usage	CPU Usage Hi:	story	A Av
Memory 1, 19 GB	Physical Memo	ory Usage History	
-Physical Memor	y (MB)	System	
Total	3060	Handles	21916
Cached	1324	Threads	1107
Available	1837	Processes	73
Free Kernel Memory	547 (MP)	Up Time Commit (MB)	0:11:57:41 1463 / 6119
Paged	185		
Nonpaged	78	<u>R</u> esource	Monitor
Processes: 73	CPU Usage: 35%	Physical I	Memory: 39%

Figure 20-1 Windows task management interface

- Select the "Performance" tab; check the status of the CPU and Memory.
- If the resource is not enough, please end some unnecessary processes.

Step 7 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• When using the device to get the live view audio, there is no sound or there is too much noise, or the volume is too low.

Possible Reasons:

- Cable between the pickup and IP camera is not connected well; impedance mismatches or incompatible.
- The stream type is not set as "Video & Audio".
- The encoding standard is not supported with device.
- Step 1 Verify the cable between the pickup and IP camera is connected well; impedance matches and compatible.

Log in the IP camera directly, and turn the audio on, check if the sound is normal. If not, please contact the manufacturer of the IP camera.

Step 2 Verify the setting parameters are correct.

Go to Menu>Camera>Encoding Parameters, and set the Stream Type as "Audio & Video".

Step 3 Verify the audio encoding standard of the IP camera is supported by the device.

The device supports G722.1 and G711 standards, and if the encoding parameter of the input audio is not one of the previous two standards, you can log in the IP camera to configure it to the supported standard.

Step 4 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

- The image gets stuck when device is playing back by single or multi-channel.
 - **Possible Reasons:**
- Poor network between device and IP camera, and there exists packet loss during the transmission.
- The frame rate is not the real-time frame rate.
- The device supports up to 16-channel synchronize playback at the resolution of 4CIF, if you want a 16-channel synchronize playback at the resolution of 720p, the frame extracting may occur, which leads to a slight stuck.

Step 5 Verify the network between device and IP camera is connected.

- 1) When image is stuck, connect the RS-232 ports on PC and the rear panel of device with the RS-232 cable.
- 2) Open the Super Terminal, and execute the command of "ping 192.168.0.0 I 1472 f" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press the **Ctrl** and **C** to exit the ping command.

Step 6 Verify the frame rate is real-time frame rate.

Select "Menu > Record > Parameters > Record", and set the Frame Rate to "Full Frame".

Step 7 Verify the hardware can afford the playback.

Reduce the channel number of playback.

Go to Menu>Camera>Encoding Parameters, and set the resolution and bitrate to a lower level.

Step 8 Reduce the number of local playback channel.

Go to Menu>Playback, and uncheck the checkbox of unnecessary channels.

Step 9 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• No record file found in the device local HDD, and prompt "No record file found".

Possible Reasons:

- The time setting of system is incorrect.
- The search condition is incorrect.
- The HDD is error or not detected.

Step 1 Verify the system time setting is correct.

Go to Menu>System>General, and verify the "Device Time" is correct.

Step 2 Verify the search condition is correct.

Go to playback interface, and verify the channel and time are correct.

Step 3 Verify the HDD status is normal.

Go to Menu>Storage>Storage Device to view the HDD status, and verify the HDD is detected and can be read and written normally.

Step 4 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.



UD09493B